

---

# Timing Constraints User Guide

UG612 (v 13.1) March 1, 2011



Xilinx is disclosing this user guide, manual, release note, and/or specification (the "Documentation") to you solely for use in the development of designs to operate with Xilinx hardware devices. You may not reproduce, distribute, republish, download, display, post, or transmit the Documentation in any form or by any means including, but not limited to, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Xilinx. Xilinx expressly disclaims any liability arising out of your use of the Documentation. Xilinx reserves the right, at its sole discretion, to change the Documentation without notice at any time. Xilinx assumes no obligation to correct any errors contained in the Documentation, or to advise you of any corrections or updates. Xilinx expressly disclaims any liability in connection with technical support or assistance that may be provided to you in connection with the Information.

THE DOCUMENTATION IS DISCLOSED TO YOU "AS-IS" WITH NO WARRANTY OF ANY KIND. XILINX MAKES NO OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, REGARDING THE DOCUMENTATION, INCLUDING ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT OF THIRD-PARTY RIGHTS. IN NO EVENT WILL XILINX BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, EXEMPLARY, SPECIAL, OR INCIDENTAL DAMAGES, INCLUDING ANY LOSS OF DATA OR LOST PROFITS, ARISING FROM YOUR USE OF THE DOCUMENTATION.

© 2011 Xilinx, Inc. XILINX, the Xilinx logo, Virtex, Spartan, ISE, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. All other trademarks are the property of their respective owners.

## Revision History

The following table shows the revision history for this document.

Date	Version	
03/01/2011	13.1	Added <a href="#">Chapter 7, Timing Closure</a>

# Table of Contents

---

Revision History .....	2
<b>Chapter 1: Introduction</b>	
<b>Chapter 2: Timing Constraint Methodology</b>	
Basic Constraints Methodology.....	8
Input Timing Constraints .....	9
Register-To-Register Timing Constraints .....	13
Output Timing Constraints.....	17
Timing Exceptions .....	21
<b>Chapter 3: Timing Constraint Principles</b>	
Constraint System.....	25
Constraint Priorities.....	43
Timing Constraints .....	45
Timing Constraint Syntax .....	61
Creating Timing Constraints .....	61
<b>Chapter 4: Specifying Timing Constraints in XST</b>	
Specifying Timing Constraints in HDL or XCF .....	63
XST Timing Constraints.....	65
<b>Chapter 5: Specifying Timing Constraints in Synplify</b>	
Synplify Timing Constraints .....	79
Specifying Timing Constraints in HDL.....	81
Specifying Timing Constraints in an SDC File (TCL) .....	94
Specifying Timing Constraints in a SCOPE Spreadsheet.....	109
Forward Annotation.....	109
<b>Chapter 6: Timing Constraint Analysis</b>	
PERIOD Constraints .....	114
FROM:TO (Multi-Cycle) Constraints .....	122
OFFSET IN Constraints .....	125
OFFSET OUT Constraints .....	134
Clock Skew .....	141
Clock Uncertainty.....	143
Asynchronous Reset Paths .....	144
Improving Timing Failures.....	144

---

## Chapter 7: Timing Closure

Achieving Timing Closure .....	149
Steps to Achieving Timing Closure .....	151
Timing Failure Design Scenarios .....	169
Cross Probing .....	180

## Appendix A: Additional Resources

## Introduction

---

The *Timing Constraints User Guide* addresses timing closure in high-performance applications. The Guide is designed for all FPGA designers, from beginners to advanced. The high performance of today's Xilinx® devices can overcome the speed limitations of other technologies and older devices. Designs that formerly only fit or ran at high clock frequencies in an ASIC device are finding their way into Xilinx FPGA devices. In addition, designers must have a proven methodology for obtaining their performance objectives.

This Guide discusses:

- The fundamentals of timing constraints, including:
  - [PERIOD Constraints](#)
  - [OFFSET Constraints](#)
  - [FROM:TO \(Multi-Cycle\) Constraints](#)
- The ability to group elements and provided a better understanding of the constraint system software
- Information about the analysis of the basic constraints, with clock skew and clock uncertainty
- Specifying timing constraints in XST
- Specifying timing constraints in Synplify



# *Timing Constraint Methodology*

---

You must have a proven methodology in order to meet your design objectives. This chapter outlines the process to:

- Understand the design requirements
- Constrain the design to meet these requirements

Before starting a design, you must understand:

- The performance requirements of the system
- The features of the target device

This knowledge allows you to use proper coding techniques utilizing the features of the device to give the best performance.

The FPGA device requirements depend on the system and the upstream and downstream devices. Once the interfaces to the FPGA device are known, the internal requirements can be outlined. How to meet these requirements depends on the device and its features.

You should understand:

- The device clocking structure
- RAM and DSP blocks
- Any hard IP contained within the device

For more information, see the device User Guide.

Timing constraints communicate all design requirements to the implementation tools. This also implies that all paths are covered by the appropriate constraint. This chapter provides general guidelines that explain the strategy for identifying and constraining the most common timing paths in FPGA devices as efficiently as possible.

## Basic Constraints Methodology

Timing requirements fall into into several global categories depending on the type of path to be covered.

The most common types of path categories include:

- Input paths
- Synchronous element to synchronous element paths
- Path specific exceptions
- Output Paths

A Xilinx® timing constraint is associated with each of these global constraint types. The most efficient way to specify these constraints is to begin with global constraints and add path specific exceptions as needed. In many cases, only the global constraints are required.

The FPGA device implementation tools are driven by the specified timing requirements. They assign device resources and expend the appropriate amount of effort necessary to ensure the timing requirements are met. However, when a requirement is over-constrained - or specified as a value greater than the design requirement - the effort spent by the tools to meet this constraint increases significantly. This extra effort results in increased memory use and tool runtime.

More importantly, over-constraint can result in loss of performance, not only for the constraint in question, but for other constraints as well. For this reason, Xilinx recommends that you specify the constraint values using the actual design requirements.

Xilinx recommends that you always comment the constraints file. This allows other designers to understand why each constraint is used.

Include in your comments:

- Source of the constraint
- Whether the PERIOD constraint is based on an external clock

This Guide uses XCF constraint syntax examples. This format passes the design requirements to the implementation tools. However, the easiest way to enter design constraints is to use Constraints Editor.

Constraints Editor:

- Provides a unified location in which to manage all the timing constraints associated with a design
- Provides assistance in creating timing constraints from the design requirements in XCF syntax



# Input Timing Constraints

This section discusses Input Timing Constraints and includes:

- [About Input Timing Constraints](#)
- [System Synchronous Inputs](#)
- [Source Synchronous Inputs](#)

## About Input Timing Constraints

Input timing covers the data path from the external pin of the FPGA device to the internal register that captures that data. The constraint used to specify the input timing is the OFFSET IN constraint. The best way to specify the input timing requirements depends on the type (source/system synchronous) and single data rate (SDR) or double data rate (DDR) of the interface.

The OFFSET IN constraint defines the relationship between the data and the clock edge used to capture that data at the pins of the FPGA device. When analyzing the OFFSET IN constraint, the timing analysis tools automatically take all internal factors affecting the delay of the clock and data into account. These factors include:

- Frequency and phase transformations of the clock
- Clock uncertainties
- Data delay adjustments

In addition to the automatic adjustments, you may also add additional input clock uncertainty to the PERIOD constraint associated with the interface clock.

For more information on adding INPUT\_JITTER, see [PERIOD Constraints](#) in [Chapter 3, Timing Constraint Principles](#).

The OFFSET IN constraint is associated with a single input clock. By default, the OFFSET IN constraint covers all paths from the input pads of the FPGA device to the internal synchronous elements that capture that data and are triggered by the specified OFFSET IN clock. This application of the OFFSET IN constraint is called the *global* method. It is the most efficient way to specify input timing.

## System Synchronous Inputs

In a system synchronous interface, a common system clock both transfers and captures the data. This interface uses a common system clock. The board trace delays and clock skew limit the operating frequency of the interface. The lower frequency also results in the system synchronous input interface typically being an SDR application.

In the system synchronous SDR application example, shown in the following figure, the data is transmitted from the source device on one rising clock edge and captured in the FPGA device on the next rising clock edge.

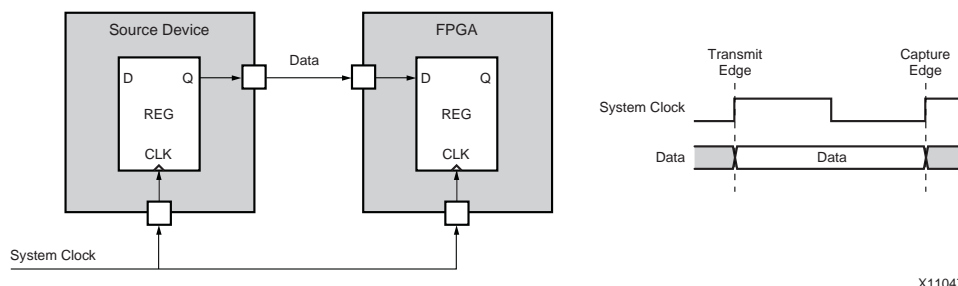


Figure 2-1: Simplified System Synchronous Interface with Associated SDR Timing

The global OFFSET IN constraint is the most efficient way to specify the input timing for a system synchronous interface. In this method, one OFFSET IN constraint is defined for each system synchronous input interface clock. This single constraint covers the paths of all input data bits that are captured in synchronous elements triggered by the specified input clock.

To specify the input timing:

- Define the clock PERIOD constraint for the input clock associated with the interface
- Define the global OFFSET IN constraint for the interface

#### Example

A timing diagram for an ideal System Synchronous SDR interface is shown in the following figure. The interface has a clock period of 5 ns. The data for both bits of the bus remains valid for the entire period.

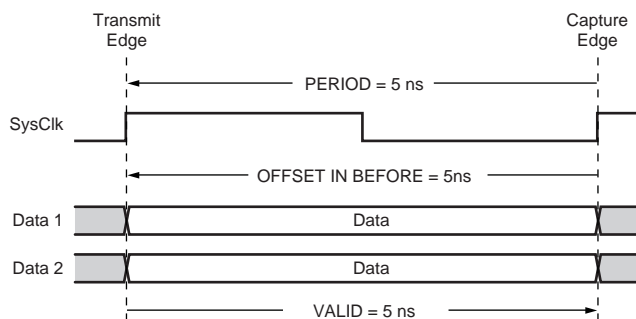


Figure 2-2: Timing Diagram for an Ideal System Synchronous SDR Interface

The global OFFSET IN constraint is:

```
OFFSET = IN value VALID value BEFORE clock;
```

In the OFFSET IN constraint, the **OFFSET=IN <value>** determines the time from the capturing clock edge to the time in which data first becomes valid. In this system synchronous example, the data becomes valid 5 ns prior to the capturing clock edge. In the OFFSET IN constraint, the **VALID <value>** determines the duration in which data remains valid. In this example, the data remains valid for 5 ns.

For this example, the complete OFFSET IN specification with associated PERIOD constraint is:


```
NET "SysClk" TNM_NET = "SysClk";
TIMESPEC "TS_SysClk" = PERIOD "SysClk" 5 ns HIGH 50%;
OFFSET = IN 5 ns VALID 5 ns BEFORE "SysClk";
```

This global constraint covers both the data bits of the bus:

- **data1**
- **data2**

## Source Synchronous Inputs

In a source synchronous input interface, a clock is regenerated and transmitted along with the data from the source device along similar board traces. This clock is then used to capture the data in the FPGA device. The board trace delays and board skew no longer limit the operating frequency of the interface. The higher frequency also results in the source synchronous input interface typically being a dual data rate (DDR) application. In this source synchronous DDR application example, shown in the following figure, unique data is transmitted from the source device on both the rising and falling clock edges and captured in the FPGA device using the regenerated clock.

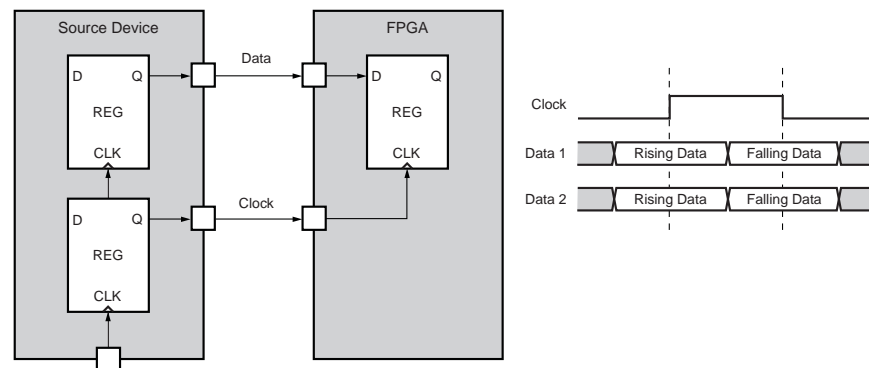

X11049

**Figure 2-3: Simplified Source Synchronous Input Interface with Associated DDR Timing**

The global OFFSET IN constraint is the most efficient way to specify the input timing for a source synchronous interface. In the DDR interface, one OFFSET IN constraint is defined for each edge of the input interface clock. These constraints cover the paths of all input data bits that are captured in registers triggered by the specified input clock edge.

To specify the input timing:

- Define the clock PERIOD constraint for the input clock associated with the interface
- Define the global OFFSET IN constraint for the rising edge (RISING) of the interface
- Define the global OFFSET IN constraint for the falling edge (FALLING) of the interface

### Example

A timing diagram for an ideal Source Synchronous DDR interface is shown in the following figure. The interface has a clock period of 5 ns with a 50/50 duty cycle. The data for both bits of the bus remains valid for the entire  $\frac{1}{2}$  period.

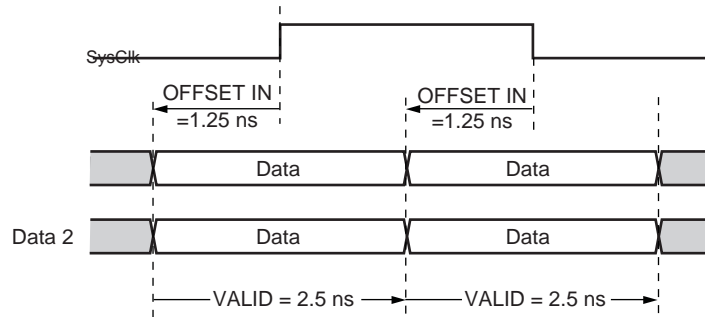


Figure 2-4: Timing Diagram for Ideal Source Synchronous DDR

The global OFFSET IN constraint for the DDR case is:

```
OFFSET = IN value VALID value BEFORE clock RISING;
OFFSET = IN value VALID value BEFORE clock FALLING;
```

In the OFFSET IN constraint, **OFFSET=IN <value>** determines the time from the capturing clock edge in which data first becomes valid. In this source synchronous input example, the rising data becomes valid 1.25 ns prior to the rising clock edge. The falling data also becomes valid 1.25 ns prior to the falling clock edge. In the OFFSET IN constraint, the **VALID <value>** determines the duration in which data remains valid. In this example, both the rising and falling data remains valid for 2.5 ns.

For this example, the complete OFFSET IN specification with associated PERIOD constraint is:

```
NET "SysClk" TNM_NET = "SysClk";
TIMESPEC "TS_SysClk" = PERIOD "SysClk" 5 ns HIGH 50%;

OFFSET = IN 1.25 ns VALID 2.5 ns BEFORE "SysClk" RISING;
OFFSET = IN 1.25 ns VALID 2.5 ns BEFORE "SysClk" FALLING;
```

This global constraint covers both the data bits of the bus:

- **data1**
- **data2**

## Register-To-Register Timing Constraints

This section discusses Register-To-Register Timing Constraints and includes:

- [About Register-To-Register Timing Constraints](#)
- [Automatically Related Synchronous DCM/PLL Clock Domains](#)
- [Manually Related Synchronous Clock Domains](#)
- [Asynchronous Clock Domains](#)

### About Register-To-Register Timing Constraints

Register-to-register or *synchronous element to synchronous element* path constraints cover the synchronous data paths between internal registers. The PERIOD constraint:

- Defines the timing requirements of the clock domains
- Analyzes the paths within a single clock domain
- Analyzes all paths between related clock domains
- Takes into account all frequency, phase, and uncertainty differences between the clock domains during analysis

For more information, see [PERIOD Constraints](#) in [Chapter 3, Timing Constraint Principles](#).

The application and methodology for constraining synchronous clock domains falls under several common cases. These categories include:

- [Automatically Related Synchronous DCM/PLL Clock Domains](#)
- [Manually Related Synchronous Clock Domains](#)
- [Asynchronous Clock Domains](#)

By allowing the tools to automatically create clock relationships for DLL/DCM/PLL output clocks, and manually defining relationships for externally related clocks, all synchronous cross clock domain paths are covered by the appropriate constraints, and properly analyzed. Using PERIOD constraints that follow this methodology eliminates the need for additional cross-clock-domain constraints.

### Automatically Related Synchronous DCM/PLL Clock Domains

The most common type of clock circuit is one in which:

- The input clock is fed into a DLL/DCM/PLL
- The outputs are used to clock the synchronous paths in the device

In this case, the recommended methodology is to define a PERIOD constraint on the input clock to the DLL/DCM/PLL.

By placing the PERIOD constraint on the input clock, the Xilinx tools automatically:

- Derive a new PERIOD constraint for each of the DLL/DCM/PLL output clocks
- Determine the clock relationships between the output clock domains, and automatically perform an analysis for any paths between these clock domains.

### Example

The circuit of an input clock driving a DCM is shown in the following figure.

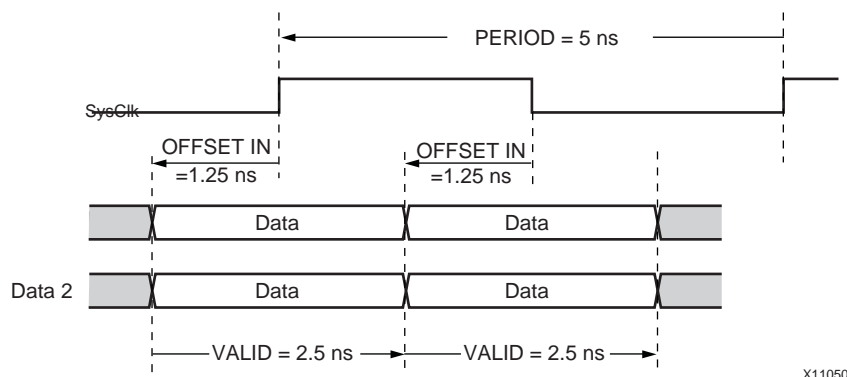


Figure 2-5: The Input Clock of the Design Goes to a DCM Example

The PERIOD constraint syntax for this example is:

```
NET "ClockName" TNM_NET = "TNM_NET_Name";
TIMESPEC "TS_name" = PERIOD "TNM_NET_Name" PeriodValue HIGH HighValue%;
```

In the PERIOD constraint, the **PeriodValue** defines the duration of the clock period. In this case, the input clock to the DCM has a period of 5 ns. The **HighValue** of the PERIOD constraint defines the percent of the clock waveform that is HIGH. In this example, the waveform has a 50/50 duty cycle resulting in a **HighValue** of 50%.

The syntax for this example is:

```
NET "ClkIn" TNM_NET = "ClkIn";
TIMESPEC "TS_ClkIn" = PERIOD "ClkIn" 5 ns HIGH 50%;
```

Based on the input clock PERIOD constraint given above, the DCM automatically:

- Creates two output clock constraints for the DCM outputs
- Performs analysis between the two domains

## Manually Related Synchronous Clock Domains

In some cases the relationship between synchronous clock domains can not be automatically determined by the tools - for example, when related clocks enter the FPGA device on separate pins. In this case, Xilinx recommends that you:

- Define a separate PERIOD constraint for each input clock
- Define a manual relationship between the clocks

Once you define the manual relationship, all paths between the two synchronous domains are automatically analyzed. The analysis takes into account all frequency, phase, and uncertainty information.

The Xilinx constraints system allows you to define complex manual relationships between clock domains using the PERIOD constraint including clock frequency and phase transformations.


To define complex manual relationships between clock domains using the PERIOD constraint:

- Define the PERIOD constraint for the primary clock
- Define the PERIOD constraint for the related clock using the first PERIOD constraint as a reference

For more information on using the PERIOD constraint to define clock relationships, see [PERIOD Constraints](#) in [Chapter 3, Timing Constraint Principles](#).

Two related clocks enter the FPGA device through separate external pins, as shown in the following figure.

- The first clock (CLK1X) is the primary clock
- The second clock (CLK2X180) is the related clock

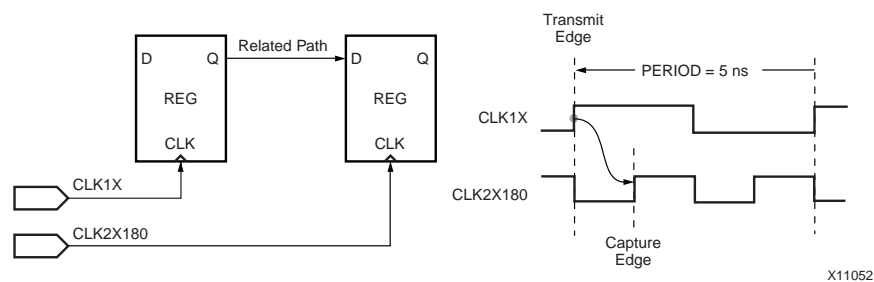

**Figure 2-6: Two Related Clocks Entering the FPGA Device Through Separate External Pins**

The PERIOD constraint syntax for this example is:

```
NET "PrimaryClock" TNM_NET = "TNM_Primary";
NET "RelatedClock" TNM_NET = "TNM_Related";
TIMESPEC "TS_primary" = PERIOD "TNM_Primary" PeriodValue HIGH HighValue%;
TIMESPEC "TS_related" = PERIOD "TNM_Related" TS_Primary_relation PHASE value;
```

In the related PERIOD definition, the PERIOD value is defined as a time unit (period) relationship to the primary clock. The relationship is expressed in terms of the primary clock TIMESPEC. In this example CLK2X180 operates at twice the frequency of CLK1X which results in a PERIOD relationship of one-half.

In the related PERIOD definition, the PHASE value defines the difference in time between the rising clock edge of the source clock and the related clock. In this example, since the CLK2X180 clock is 180 degrees shifted, the rising edge begins 1.25 ns after the rising edge of the primary clock.

The syntax for this example is:

```
NET "Clk1X" TNM_NET = "Clk1X";
NET "Clk2X180" TNM_NET = "Clk2X180";
TIMESPEC "TS_Clk1X" = PERIOD "Clk1X" 5 ns;
TIMESPEC "TS_Clk2X180" = PERIOD "Clk2X180" TS_Clk1X/2 PHASE + 1.25 ns ;
```

## Asynchronous Clock Domains

Asynchronous clock domains are those in which the source and destination clocks do not have a frequency or phase relationship. Since the clocks are not related, it is not possible to determine the final relationship for setup and hold time analysis. For this reason, Xilinx recommends that you use proper asynchronous design techniques to ensure the successful capture of data. One example of proper asynchronous design technique is to use a FIFO design element to capture and transfer data between asynchronous clock domains. While not required, in some cases you may wish to constrain the maximum data path delay in isolation without regard to clock path frequency or phase relationship.

The Xilinx constraints system allows you to constrain the maximum data path delay without regard to source and destination clock frequency and phase relationship. This requirement is specified using the FROM-TO constraint with the DATAPATHONLY keyword.

To constrain the maximum data path delay without regard to source and destination clock frequency and phase relationship:


- Define a time group for the source synchronous elements
- Define a time group for the destination synchronous elements
- Define the maximum delay of the data paths using the FROM-TO constraint between the two time groups with DATAPATHONLY keyword.

For more information on using the FROM-TO constraint with the DATAPATHONLY keyword, see [FROM:TO \(Multi-Cycle\) Constraints](#) in [Chapter 3, Timing Constraint Principles](#).

### Example

Two unrelated clocks enter the FPGA device through separate external pins as shown in the following figure.

- The first clock (CLKA) is the source clock
- The second clock (CLKB) is the destination clock

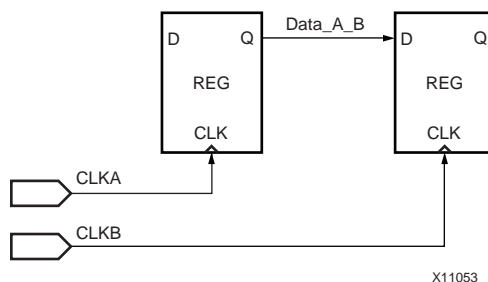

**Figure 2-7: Two Unrelated Clocks Entering the FPGA Device Through Separate External Pins**

The syntax for this example is:


```
NET "CLKA" TNM_NET = FFS "GRP_A";
NET "CLKB" TNM_NET = FFS "GRP_B";
TIMESPEC TS_Example = FROM "GRP_A" TO "GRP_B" 5 ns DATAPATHONLY;
```



## Output Timing Constraints

Output timing covers the data path from a register inside the FPGA device to the external pin of the FPGA device. The OFFSET OUT constraint specifies the output timing. The best way to specify the output timing requirements depends on the type (source/system synchronous) and SDR/DDR of the interface.

The OFFSET OUT constraint defines the maximum time allowed for data to be transmitted from the FPGA device. The output delay path begins at the input clock pin of the FPGA device and continues through the output register to the data pins of the FPGA device, as shown in the following figure.

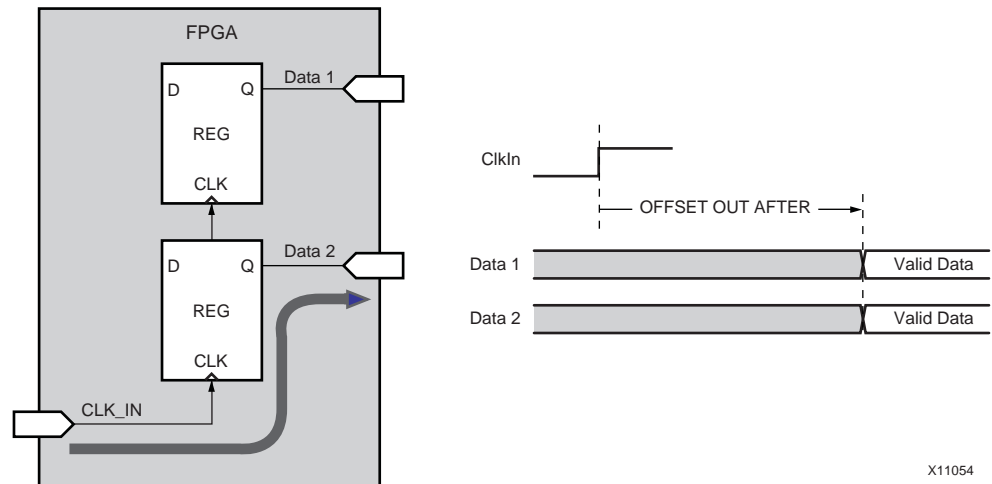

**Figure 2-8: Output-Timing Constraints from Input Clock Pad to the Output Data Pad**

When analyzing the OFFSET OUT constraint, the timing tools automatically take all internal factors affecting the delay of the clock and data paths into account. These factors include:

- Frequency and phase transformations of the clock
- Clock uncertainties
- Data path delay adjustments

For more information, see OFFSET OUT Constraints in [Chapter 3, Timing Constraint Principles](#).

## System Synchronous Output

The system synchronous output interface is an interface in which a common system clock is used to both transfer and capture the data. Since this interface uses a common system clock, only the data is transmitted from the FPGA device to the receiving device as shown in the following figure.

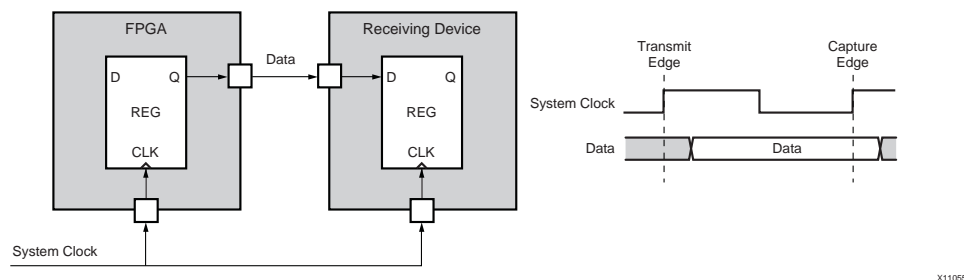


Figure 2-9: Simplified System Synchronous Output Interface with Associated SDR Timing

If these paths must be constrained, the global OFFSET OUT constraint is the most efficient way to specify the output timing for the system synchronous interface. In the global method, one OFFSET OUT constraint is defined for each system synchronous output interface clock. This single constraint covers the paths of all output data bits sent from registers triggered by the specified input clock.

To specify the output timing:

- Define a time name (TNM) for the output clock to create a time group, which contains all output registers triggered, by the input clock
- Define the global OFFSET OUT constraint for the interface

#### Example

A timing diagram for a System Synchronous SDR output interface is shown in the following figure. The data in this example must become valid at the output pins a maximum of 5 ns after the input clock edge at the pin of the FPGA device.

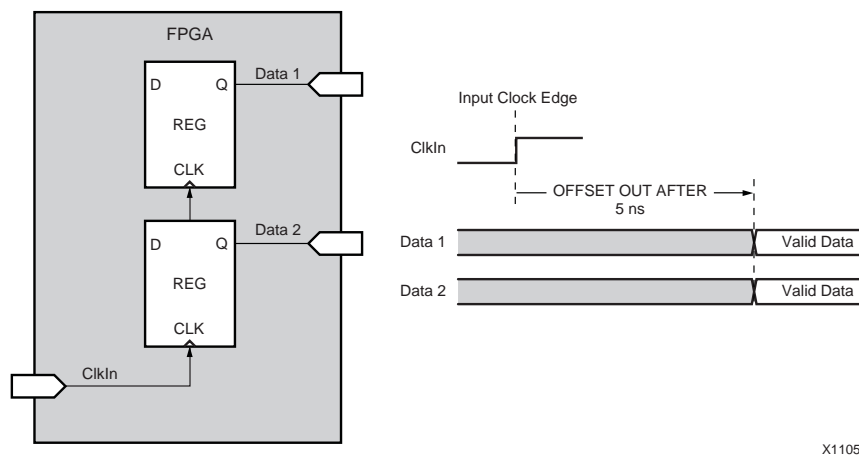


Figure 2-10: Timing Diagram for System Synchronous SDR Output Interface

The global OFFSET OUT constraint for the system synchronous interface is:

```
OFFSET = OUT value AFTER clock;
```

In the OFFSET OUT constraint, **OFFSET=OUT <value>** determines the maximum time from the rising clock edge at the input clock port until the data first becomes valid at the data output port of the FPGA device. In this system synchronous example, the output data must become valid at least 5 ns after the input clock edge.

For this example, the complete OFFSET OUT specification is:

```
NET "ClkIn" TNM_NET = "ClkIn";
OFFSET = OUT 5 ns AFTER "ClkIn";
```

This global constraint covers both the data bits of the bus:

- **data1**
- **data2**

## Source Synchronous Outputs

The source synchronous output interface is an interface in which a clock is regenerated and transmitted along with the data from the FPGA device. The regenerated clock is transmitted along with the data. The interface is primarily limited in performance by system noise and the skew between the regenerated clock and the data bits, as shown in the following figure. In this interface, the time from the input clock edge to the output data becoming valid is not as important as the skew between the output data bits. In most cases, it can be left unconstrained.

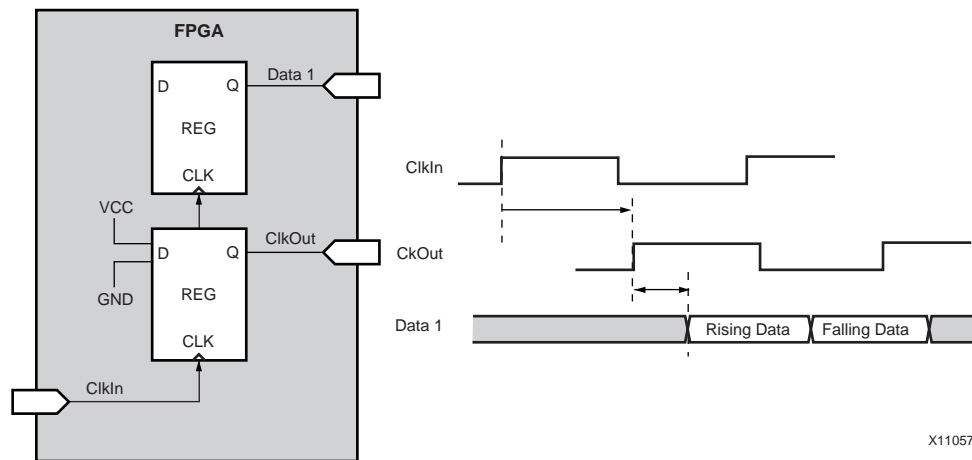


Figure 2-11: **Simplified Source Synchronous Output Interface with Associated DDR Timing**

The global OFFSET OUT constraint is the most efficient way to specify the output timing for a source synchronous interface. In the DDR interface, one OFFSET OUT constraint is defined for each edge of the output interface clock. These constraints cover the paths of all output data bits that are transmitted by registers triggered with the specified output clock edge.

To specify the input timing:

- Define a time name (TNM) for the output clock to create a time group which contains all output registers triggered by the output clock
- Define the global OFFSET OUT constraint for the rising edge (RISING) of the interface
- Define the global OFFSET OUT constraint for the falling edge (FALLING) of the interface

### Example

A timing diagram for an ideal Source Synchronous DDR interface is shown in the following figure. The interface has a clock period of 5 ns with a 50/50 duty cycle. The data for both bits of the bus remains valid for the entire  $\frac{1}{2}$  period.

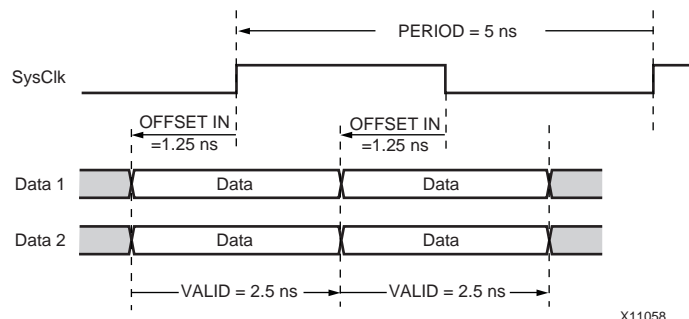


Figure 2-12: Timing Diagram for an Ideal Source Synchronous DDR

In the OFFSET OUT constraint, **OFFSET=OUT** *<value>* determines the maximum time from the rising clock edge at the input clock port until the data first becomes valid at the data output port of the FPGA device. When *<value>* is omitted from the OFFSET OUT constraint, the constraint becomes a report-only specification which reports the skew of the output bus. The REFERENCE\_PIN keyword defines the regenerated output clock as the reference point against which the skew of the output data pins is reported.

For this example, the complete OFFSET OUT specification for both the rising and falling clock edges is :

```
NET "ClkIn" TNM_NET = "ClkIn";
OFFSET = OUT AFTER "ClkIn" REFERENCE_PIN "ClkOut" RISING;
OFFSET = OUT AFTER "ClkIn" REFERENCE_PIN "ClkOut" FALLING;
```

## Timing Exceptions

Using the global definitions of the input, register-to-register, and output timing constraints, properly constrains the majority of the paths. In certain cases a small number of paths contain exceptions to the global constraint rules. The most common types of exceptions are:

- [False Paths](#)
- [Multi-Cycle Paths](#)

### False Paths

In some cases, you may want to remove a set of paths from timing analysis if you are sure that these paths do not affect timing performance.

One common way to specify the set of paths to be removed from timing analysis is to use the FROM-TO constraint with the timing ignore (TIG) keyword. This allows you to:


- Specify a set of registers in a source time group
- Specify a set of registers in a destination time group
- Automatically remove all paths between those time groups from analysis.

To specify the timing ignore (TIG) constraint for this method, define:

- A set of registers for the source time group
- A set of registers for the destination time group
- A FROM-TO constraint with a TIG keyword to remove the paths between the groups

#### Example

A hypothetical case in which a path between two registers does not affect the timing of the design, and is desired to be removed from analysis, is shown in the following figure

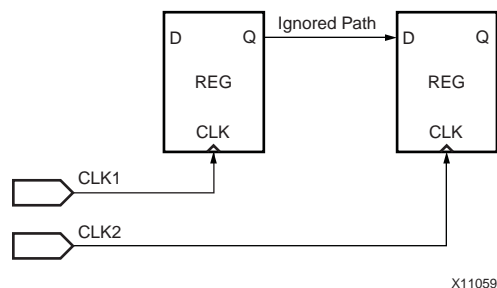

**Figure 2-13: Path Between Two Registers That Does Not Affect the Timing of the Design**

The generic syntax for defining a timing ignore (TIG) between time groups is:

```
TIMESPEC "TSid" = FROM "SRC_GRP" TO "DST_GRP" TIG;
```

In the FROM-TO TIG example, the SRC\_GRP defines the set of source registers at which path tracing begins. The DST\_GRP defines the set of destination registers at which the path tracing ends. All paths that begin in the SRC\_GRP and end in the DST\_GRP are ignored.

The specific syntax for this example is:

```
NET "CLK1" TNM_NET = FFS "GRP_1";
NET "CLK2" TNM_NET = FFS "GRP_2";
TIMESPEC TS_Example = FROM "GRP_1" TO "GRP_2" TIG;
```

## Multi-Cycle Paths

In a multi-cycle path, data is transferred from source to destination synchronous elements at a rate less than the clock frequency defined in the PERIOD specification.

This occurs most often when the synchronous elements are gated with a common clock enable signal. By defining a multi-cycle path, the timing constraints for these synchronous elements are relaxed over the default PERIOD constraint. The multi-cycle path constraint can be defined with respect to the PERIOD constraint identifier (**TS\_clk125**) and state the multiplication or the number of period cycles (**TS\_clk125 \* 3**). The implementation tools are then able to appropriately prioritize the implementation of these paths.

One common way to specify the set of multi-cycle paths is to define a time group using the clock enable signal. This allows you to:


- Define one time group containing both the source and destination synchronous elements using a common clock enable signal
- Automatically apply the multi-cycle constraint to all paths between these synchronous elements

To specify the FROM:TO (multi-cycle) constraint for this method, define:

- A PERIOD constraint for the common clock domain
- A set of registers based on a common clock enable signal
- A FROM:TO (multi-cycle) constraint describing the new timing requirement

### Example

The following figure shows a hypothetical case in which a path between two registers is clocked by a common clock enable signal. In this example, the clock enable is toggled at a rate that is one-half of the reference clock.

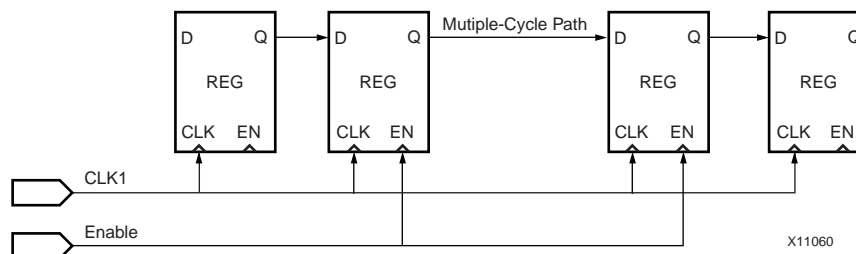

**Figure 2-14: Path Between Two Registers Clocked by a Common Clock Enable Signal**

The generic syntax for defining a multi-cycle path between time groups is:

```
TIMESPEC "TSid" = FROM "MC_GRP" TO "MC_GRP" <value>;
```

In the FROM:TO (multi-cycle) example, the MC\_GRP defines the set of registers which are driven by a common clock enable signal. All paths that begin in the MC\_GRP and end in the MC\_GRP have the multi-cycle timing requirement applied to them. Paths into and out of the MC\_GRP are analyzed with the appropriate PERIOD specification.

The specific syntax for this example is:

```
NET "CLK1" TNM_NET = "CLK1";  
TIMESPEC "TS_CLK1" = PERIOD "CLK1" 5 ns HIGH 50%;  
NET "Enable" TNM_NET = FFS "MC_GRP";  
TIMESPEC TS_Example = FROM "MC_GRP" TO "MC_GRP" TS_CLK1*2;
```





## Chapter 3

# Timing Constraint Principles

---

This chapter:

- Discusses the fundamentals of timing constraints, including:
  - [PERIOD Constraints](#)
  - [OFFSET Constraints](#)
  - [FROM:TO \(Multi-Cycle\) Constraints](#)
- Discusses the ability to group elements in order to provide a better understanding of the constraint system subsystem

## Constraint System

This section discusses the Constraint System and includes:

- [About the Constraint System](#)
- [DLL/DCM/PLL/BUFR/PMCD Components](#)
- [Timing Group Creation with TNM/TNM\\_NET Attributes](#)
- [Grouping Constraints](#)

### About the Constraint System

The constraint system is that portion of the implementation tools (NGDBUILD) that parses and understands the physical and timing constraints for the design.

The constraint system:

- Parses the constraints from the following files and delivers this information to the other implementation tools:
  - NCF
  - XCF
  - EDN/EDF/EDIF
  - NGC
  - NGO
- Confirms that the constraints are correctly specified for the design
- Applies the necessary attributes to the corresponding elements
- Issues error and warning messages for constraints that do not correlate correctly with the design

## DLL/DCM/PLL/BUFR/PMCD Components

This section discusses DLL/DCM/PLL/BUFR/PMCD Components and includes:

- [About DLL/DCM/PLL/BUFR/PMCD Components](#)
- [Transformation Conditions](#)
- [New PERIOD Constraints on DCM Outputs](#)
- [Synchronous Elements](#)
- [Analysis with NET PERIOD](#)
- [PHASE Keyword](#)
- [DLL/DCM/PLL Manipulation with PHASE](#)

### About DLL/DCM/PLL/BUFR/PMCD Components

When a TIMESPEC PERIOD specification on the input pad clock net is traced or translated through the DCM/DLL/PLL/BUFR/PMCD component (also known as a clock-modifying block), the derived or output clocks are constrained with new PERIOD constraints.

In order to generate the destination-element-timing group, during transformation each clock output pin of the clock-modifying block is given:

- A new TIMESPEC PERIOD constraint
- A corresponding TNM\_NET constraint

The new TIMESPEC PERIOD constraint is based upon the manipulation of the clock modifying block component. The transformation:

- Takes into account the phase relationship factor of the clock outputs
- Performs the appropriate multiplication or division of the PERIOD requirement value

### Transformation Conditions

The transformation occurs when:

- The TIMESPEC PERIOD constraint is traced into the CLKIN pin of the clock modifying block component, and
- The following conditions are met:
  - The group associated with the PERIOD constraint is used in exactly *one* PERIOD constraint
  - The group associated with the PERIOD constraint is *not* used in any other timing constraints, including FROM:TO (multicycle) or OFFSET constraints
  - The group associated with the PERIOD constraint is *not* referenced or related to any other user group definition

### New PERIOD Constraints on DCM Outputs

If the Transformation Conditions are met, the **TIMESPEC "TS\_clk20" = PERIOD "clk20\_grp" 20 ns HIGH 50 %;** constraint is translated into the following constraints based upon the clock structure shown in the following figure.

```
CLK0: TS_clk20_0=PERIOD clk20_0 TS_clk20*1.000000 HIGH 50.000000%
CLK90: TS_clk20_90=PERIOD clk20_90 TS_clk20*1.000000 PHASE + 5.000000
      nS HIGH 50.000000%
```

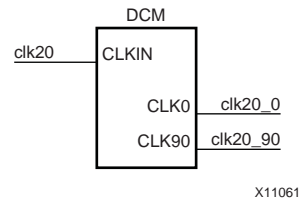


Figure 3-1: New PERIOD Constraints on DCM Outputs

The following message appears in the NGDBuild (design.bld) or MAP (design.mrp) report:

```
INFO:XdmHelpers:851 - TNM " clk20_grp ", used in period specification
"TS_clk20", was traced into DCM instance "my_dcm". The following new TNM
groups and period specifications were generated at the DCM output(s):
```

```
clk0: TS_clk20_0=PERIOD clk20_0 TS_clk20*1.000000 HIGH 50.000000%
clk90: TS_clk20_90=PERIOD clk20_90 TS_clk20*1.000000 PHASE + 5.000000
nS HIGH 50.000000%
```

If the CLKIN\_DIVIDE\_BY\_2 attribute is set to TRUE for the DCM in the figure above, the translated PERIOD constraints are adjusted accordingly. The following constraints are the result of this attribute:

```
CLK0: TS_clk20_0=PERIOD clk20_0 TS_clk20*2.000000 HIGH 50.000000%
CLK90: TS_clk20_90=PERIOD clk20_90 TS_clk20*2.000000 PHASE + 5.000000
nS HIGH 50.000000%
```

If the [Transformation Conditions](#) are *not* met:

- The PERIOD constraint is *not* placed on the output or derived clocks of the clock modifying block component, and
- An error or warning message is reported in the NGDBuild report

### Error Message Example

Following is an example of an error message:

```
"ERROR:NgdHelpers:702 - The TNM "PAD_CLK" drives the CLKIN pin of CLKDLL
"$I1". This TNM cannot be traced through the CLKDLL because it is not
used in exactly one PERIOD specification. This TNM is used in the
following user groups and/or specifications:
```

```
TS_PAD_CLK=PERIOD PAD_CLK 20000.000000 pS HIGH 50.000000%
TS_01=FROM PAD_CLK TO PADS 20000.000000 pS"
```

**Note:** The original TIMESPEC PERIOD constraint is reported in the timing report and shows "0 items analyzed."

The newly created TIMESPEC PERIOD constraints contain all the paths associated with the clock modifying block component. If the PERIOD constraint is not translated and then traces only to the clock modifying block component, the timing report show **0 items analyzed**. No other PERIOD constraints are reported.

If the PERIOD constraint traces to other synchronous elements, the analysis includes only those synchronous elements.

## Synchronous Elements

Synchronous elements include:

- Flip Flops
- Latches
- Distributed RAM
- Block RAM
- Distributed ROM
- ISERDES
- OSERDES
- PPC405
- PPC440
- MULT18X18
- DSP48
- MGTs (GT, GT10, GT11, GTP)
- SRL16
- EMAC
- FIFO (16, 18, & 36)
- PCIE
- TEMAC

## Analysis with NET PERIOD

When a NET PERIOD constraint is applied to the input clock pad or net, this constraint is not translated through the clock modifying block component. This can result in zero items or paths analyzed for these constraints.

The NET PERIOD is analyzed only during MAP, PAR, and Timing analysis. When "MAP - timing" and PAR call the timing tools, the timing tools do the clock modifying block manipulation for placement and routing, but not for the timing analysis timing reports.

When a TIMESPEC PERIOD constraint is traced into an input pin on a clock modifying block, NGDDBuild or the translate process transforms the original TIMESPEC PERIOD constraint into new TIMESPEC PERIOD constraints based upon the derived output clocks. The NGDDBuild report (`design.bld`) indicates this transformation.

MAP, PAR, and Timing Analyzer use the new derived clock TIMESPEC PERIOD constraints that are propagated to the Physical Constraints File (PCF). The original TIMESPEC PERIOD is unchanged during this transformation. It is used as a reference for the new TIMESPEC PERIOD constraints.

**Note:** Constraints Editor sees only the original PERIOD constraint and not the newly transformed PERIOD constraints.

## PHASE Keyword

The PHASE keyword is used in the relationship between related clocks. The timing analysis tools use this relationship for the OFFSET constraints and cross-clock domain path analysis. The PHASE keyword can be entered in the UCF/NCF or through the translation of the DCM/DLL/PLL components during NGDDBuild.

**Note:** If the phase shifted value of DCM/PLL/DLL component is changed in FPGA Editor, the change is not reflected in the PCF file.

The timing analysis tools use the PHASE keyword value in the PCF to emulate the DLL/DCM/PLL phase shift value. In order to see the change that was made in FPGA Editor, the PCF must also be modified manually with the corresponding change.

## DLL/DCM/PLL Manipulation with PHASE

The following table displays the new DCM/DLL/PLL component output clock net derived TIMESPEC PERIOD constraints, based upon the original PERIOD (TS\_CLKIN) constraints. TS\_CLKIN is expressed as a time value.

If TS\_CLKIN is expressed as a frequency value, the multiply and divide operations are reversed. If the DCM attributes FIXED\_PHASE\_SHIFT or VARIABLE\_PHASE\_SHIFT are used, the amount of the phase-shifted value is included in the PHASE keyword value.

The DCM attributes FIXED\_PHASE\_SHIFT or VARIABLE\_PHASE\_SHIFT phase shifting amount on the DCM is not reflected in the following table.

**Table 3-1: Transformation of PERIOD Constraint Through DCM**

Output Pin	PERIOD Value	PHASE Shift value
CLK0	TS_CLKIN * 1	None
CLK90	TS_CLKIN * 1	PHASE + (clk0_period * ¼)
CLK180	TS_CLKIN * 1	PHASE + (clk0_period * ½)
CLK270	TS_CLKIN * 1	PHASE + (clk0_period * ¾)
CLK2x	TS_CLKIN / 2	None
CLK2x180	TS_CLKIN / 2	PHASE + (clk2x_period * ½)
CLKDV	TS_CLKIN * clkdv_divide  (clkdv_divide = value of CLKDV_DIVIDE property (default = 2.0))	None
CLKFX	TS_CLKIN / clkfx_factor  (clkfx_factor = value of CLKFX_MULTIPLY property (default = 4.0) divided by value of CLKFX_DIVIDE property (default = 1.0))	None
CLKFX180	TS_CLKIN / clkfx_factor  (clkfx_factor = value of CLKFX_MULTIPLY property (default = 4.0) divided by value of CLKFX_DIVIDE property (default = 1.0))	PHASE + (clkfx_period * ½)

## Timing Group Creation with TNM/TNM\_NET Attributes

This section discusses Timing Group Creation with TNM/TNM\_NET Attributes and includes:

- [About Timing Group Creation with TNM/TNM\\_NET Attributes](#)
- [Net Connectivity \(NET\)](#)
- [Predefined Time Groups](#)
- [Propagation Rules for TNM\\_NET](#)
- [Instance or Hierarchy](#)
- [Instance Pin](#)

### About Timing Group Creation with TNM/TNM\_NET Attributes

All design elements with same TNM/TNM\_NET attribute are considered a timing group. A design element may be in multiple timing groups (TNM/TNM\_NET).

The TNM/TNM\_NET attributes can be applied to:

- Net Connectivity (NET)
- Instance/Module - INST
- Instance Pin - PIN


**Note:** To ensure correct timing analysis, Xilinx® recommends that you place only one TNM/TNM\_NET on each element, driver pin, or macro driver pin.

### Net Connectivity (NET)

Identifying groups by net connectivity allows the grouping of elements by specifying a net or signal that eventually drives synchronous elements and pads. This method is a good way to identify multi-cycle path elements that are controlled by a clock enable and can be constrained as a FROM:TO (multi-cycle) constraint. This method uses TNM\_NET (timing net) or TNM (timing name) on a net of the design. The timing name attribute is commonly used on HDL port declarations, which are directly connected to pads.


If a timing name attribute is placed on a net or signal, the constraints parser traces the signal or net downstream to the synchronous elements. A timing name is an attribute that can be used to identify the elements that make up a time group that can be then used in a timing constraint. Those synchronous elements are then tagged with the same timing name attribute. The timing name attribute name is then used in a TIMESPEC or Timing Constraint.

An example is the clock net in following schematic is traced forward to the two flip-flops in the following figure.

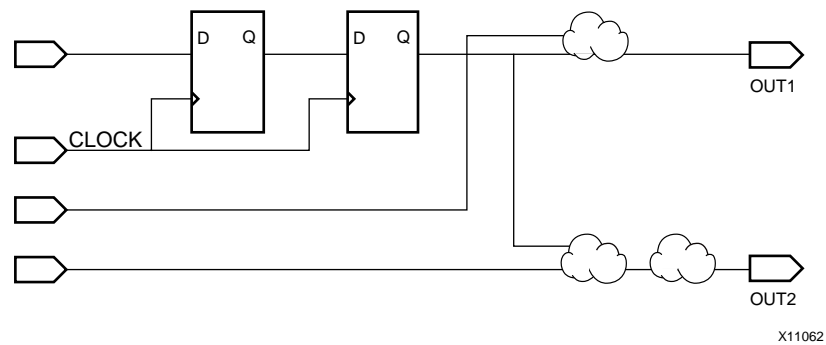

**Figure 3-2: TNM on the CLOCK Pad or Net Traces Downstream to the Flip-Flops**

Flagging a common input (typically a clock signal or clock enable signal) can be used to group flip-flops, latches, or other synchronous elements. The TNM is traced forward along the path (through any number of gates, buffers, or combinatorial logic) until it reaches a flip-flop, input latch, or synchronous element. Those elements are added to the specified TNM or time group. Using TNM on a net that traces forward to create a group of flip-flops is shown in the following figure.

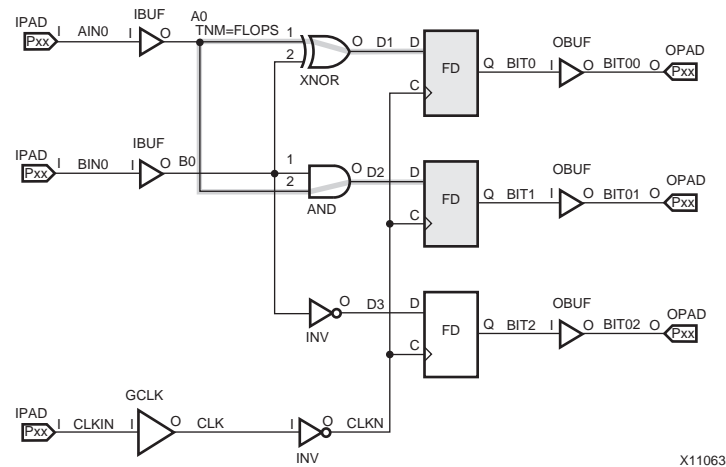

**Figure 3-3: TNM on the CLK Net Traced Through Combinatorial Logic to Synchronous Elements (Flip-flops)**

When you place a TNM constraint on a net, use a qualifier to narrow the list of elements in the time group. A qualified TNM is traced forward until it reaches the first synchronous element that matches the qualifier type. The qualifier types are the predefined time groups. If that type of synchronous element matches the qualifier, the synchronous element is given that TNM attribute. Whether or not there is a match, the TNM is not traced through the synchronous element.

## Predefined Time Groups

The following keywords are predefined time groups:

- FFS  
All SLICE and IOB edge-triggered flip-flops and shift registers
- PADS  
All I/O pads
- DSPS
  - All DSP48 in Virtex™-4 devices
  - All DSP48E in Virtex-5 devices
- RAMS  
All single-port and dual-port SLICE LUT RAMs and block RAMs
- MULTS  
All synchronous and asynchronous multipliers in the following devices:
  - VirtexII-Pro
  - VirtexII-ProX
  - Virtex-4
  - Virtex-5
- HSIOs
  - All GT and GT10 in the following devices:
    - VirtexII-Pro
    - VirtexII-ProX
    - Virtex-4
  - All GTP in Virtex-5 devices
- CPUS
  - All PPC405 in the following devices:
    - VirtexII-Pro
    - VirtexII-ProX
    - Virtex-4
  - All PPC450 in Virtex-5 devices
- LATCHES  
All SLICE level-sensitive latches
- BRAMS\_PORTA  
Port A of all dual-port block RAMs
- BRAMS\_PORTB  
Port B of all dual-port block RAMs

The TNM\_NET is equivalent to TNM on a net, but produces different results on pad nets. The Translate Process or NGDBuild command never transfers a TNM\_NET constraint from the attached net to an input pad, as it does with the TNM constraint. You can use TNM\_NET only with nets. If TNM\_NET is used with any other objects (such as a pin or instance), a warning is generated and TNM\_NET definition is ignored.



A TNM attribute on a pad net or the net between the IPAD and the IBUF, the constraints parser traces the signal or net upstream to the pad element, as shown in the following figure. The TNM\_NET attribute is traced through the buffer to the synchronous elements. In HDL designs, the IBUF output signal is the same as the IPAD or port name, so there are not differences between the TNM\_NET and TNM attributes. In this case, both timing name attributes trace downstream to the synchronous elements.

## Propagation Rules for TNM\_NET

The propagation rules for TNM\_NET are:

- If applied to a pad net, TNM\_NET propagates forward through the IBUF elements and any other combinatorial logic to synchronous elements or pads.
- If applied to a clock-pad net, TNM\_NET propagates forward through the clock buffer to synchronous elements or pads.
- If applied to an input clock net of a DCM/DLL/PLL/PMCD/BUFR and associated with a PERIOD constraint, TNM\_NET propagates forward through the clock-modifying block to synchronous elements or pads.

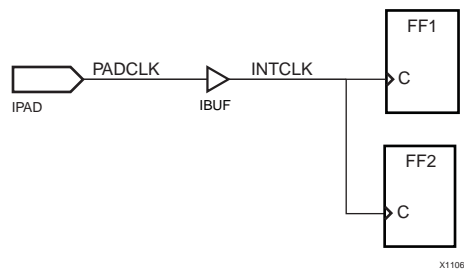


Figure 3-4: Differences between TNM and TNM\_NET

In the design shown in the figure above, a TNM associated with the IPAD signal includes only the PAD symbol as the member of a time group. A TNM\_NET associated with the IPAD signal includes all the synchronous elements after the IBUF as members of a time group.

Following are examples of different ways to create time groups using the IPAD signal:

- **NET PADCLK TNM = PAD\_grp;**  
Use the **padclk** net to define the time group **PAD\_grp**. Contains the IPAD element.
- **NET PADCLK TNM = FFS "FF\_grp";**  
Use the **padclk** net to define the time group **FF\_grp**. Contains no flip-flop elements.
- **NET PADCLK TNM\_NET = FFS FF2\_grp;**  
Use the **padclk** net to define the time group **FF2\_grp**. Contains all flip-flop elements associated with this net.

In the design shown in the figure above, a TNM associated with the IBUF output signal can only include the synchronous elements after the IBUF as members of a time group.

Following are examples of time groups that use only the IBUF output signal:

- **NET INTCLK TNM = FFS FF1\_grp;**  
Use the **intclk** net to define the time group **FF1\_grp**. Contains all flip-flop elements associated with this net.

- **NET INTCLK TNM\_NET = RAMS Ram1\_grp;**

Use the **intclk** net to define the time group **Ram1\_grp**. Contains all distributed and block RAM elements associated with this net.

## Instance or Hierarchy

When a TNM attribute is placed on a module or macro, the constraints parser traces the macro or module down the hierarchy to the synchronous elements and pads. The attribute transverses through all levels of the hierarchy rather than forward along a net or signal. This feature is illustrated in:

- [Figure 3-2, TNM on the CLOCK Pad or Net Traces Downstream to the Flip-Flops](#)
- [Figure 3-3, TNM on the CLK Net Traced Through Combinatorial Logic to Synchronous Elements \(Flip-flops\)](#)

Those synchronous elements are then tagged with the same TNM attribute. The TNM attribute name is then used in a TIMESPEC or timing constraint. This method uses a TNM on a block of the design. Multiple instances of the same TNM attribute are used to identify the time group.

A macro or module is an element that performs some general purpose higher level function. It typically has a lower level design that consists of primitives or elements, other macros or modules, or both, connected together to implement the higher level function.

A TNM constraint attached to a module or macro indicates that all elements inside the macro or module (at all levels of hierarchy below the tagged module or macro) are part of the named time group. Use the **keep\_hierarchy** attribute to ensure that the design hierarchy is maintained. This feature is illustrated in the following figures.

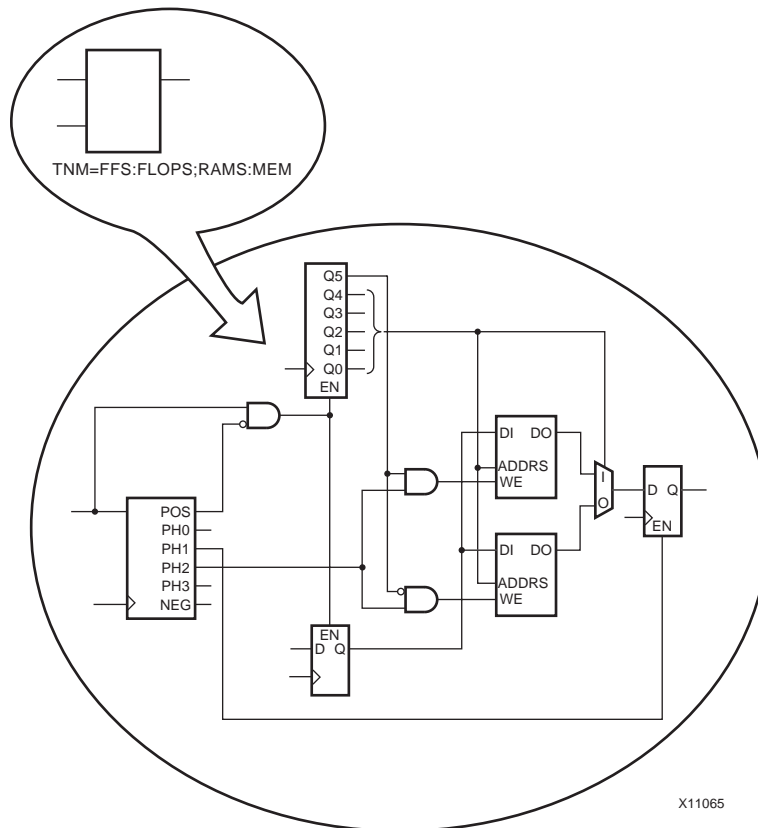


Figure 3-5: The TNM on the Upper Left Hierarchy is Traced Down to the Lower Level Element

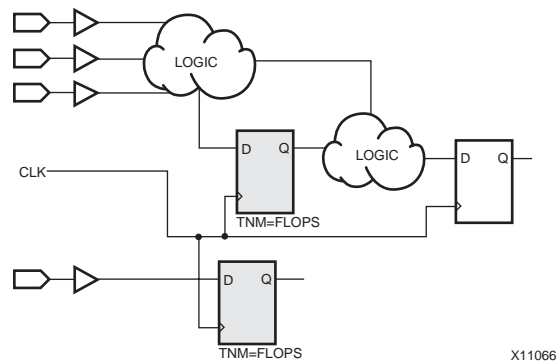


Figure 3-6: Grouping via Instances

You can use wildcard characters to transverse the hierarchy of a design.

- A question mark (?) represents one character.
- An asterisk (\*) represents multiple characters.

The following example uses a wildcard character to transverse the hierarchy where **Level11** is a top level module:

- **Level11/\***

Transverses all blocks in Level1 and below

- **Level1/\*/**

Transverses all blocks in Level1 but no further

The instances described below are either:

- Symbols on a schematics, or
- A symbol name as it appears in the EDIF netlist

An example of the wildcard transversing the design hierarchy is shown in the figure above, for the following instances:

- **INST \***

All synchronous elements are in this time group

- **INST /\***

All synchronous elements are in this time group

- **INST /\*/**

Top level elements or modules are in this time group:

- **A1**
- **B1**
- **C1**

- **INST A1/\***

All elements one or more levels of hierarchy below the A1 hierarchy are in this time group:

- **A21**
- **A22**
- **A3**
- **A4**

- **INST A1/\*/\***

All elements one level of hierarchy below the A1 hierarchy are in this time group:

- **A21**
- **A22**

- **INST A1/\*/\*/\***

All elements two or more levels of hierarchy below the A1 hierarchy are in this time group:

- **A3**
- **A4**

- **INST A1/\*/\*/\*/\***

All elements two levels of hierarchy below the A1 hierarchy are in this time group:

- **A3**

- **INST A1/\*/\*/\*/\*/\***

All elements three or more levels of hierarchy below the A1 hierarchy are in this time group:

- **A4**

- **INST A1/\*/\*/\*/\***

All elements three levels of hierarchy below the A1 hierarchy are in this time group:

- **A4**

- **INST /\*/\*22/**


All elements with instance name of 22 are in this time group:

- **A22**
- **B22**
- **C22**

- **INST /\*/\*22**

All elements with instance name of 22 and elements one level of hierarchy below are in this time group:

- **A22**
- **A3**
- **A4**
- **B22**
- **B3**
- **C22**
- **C3**

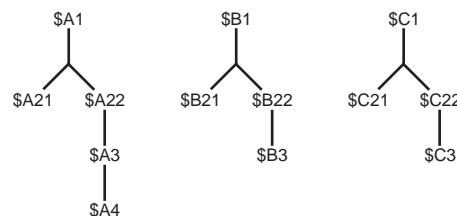


X11067

Figure 3-7: Transversing Hierarchy with Wildcards

## Instance Pin

Identifying groups by pin connectivity allows you to group elements by specifying a pin that eventually drives synchronous elements and pads. This method uses TNM (timing name) on a pin of the design. If a TNM attribute is placed on a pin, the constraints parser traces the pin downstream to the synchronous elements. A TNM is an attribute that can be used to identify the elements that make up a time group that can be then used in a timing constraint.

An example of this method is shown in the following figure.

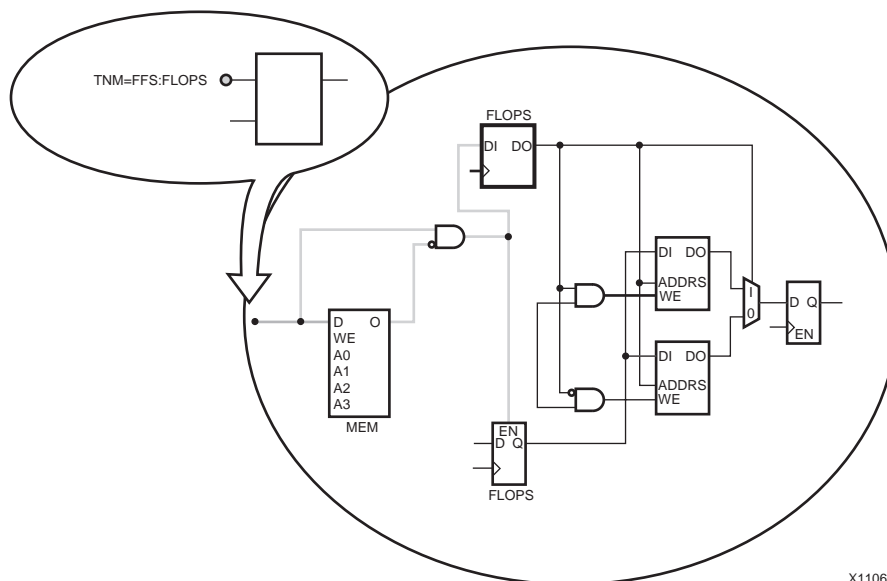

X11068

**Figure 3-8: TNM Placed on Macro Pin Traces Downstream to Synchronous Elements**

When placing a TNM constraint on a pin, a qualifier can be used to narrow the list of elements in the time group. A qualified TNM is traced forward until it reaches the first synchronous element that matches the qualifier type. The qualifier types are the predefined time groups. If that type of synchronous element matches the qualifier, the synchronous element is given that TNM attribute. Whether or not there is a match, the TNM is not traced through the synchronous element. For more information, see [Predefined Time Groups](#).

## Grouping Constraints

Grouping constraints allow you to group similar elements together for timing analysis. They can be defined in the following files:

- UCF
- NGC
- EDN
- EDIF/EDF

The timing analysis is on timing constraints, which are applied to logical paths. The logic paths typically start and stop at pads and synchronous elements. The grouped elements signify the starting and ending points for timing analysis. These starting and ending points can be based upon predefined groups, user-defined groups, or both. The timing groups are ideal for identifying groups of logic that operate at different speeds, or have different timing requirements.

The time groups are used in the timing analysis of the design. The user-defined and predefined time group informs the timing analysis tools the start and end points for each path being analyzed. The time groups are used in the following constraints:

- PERIOD
- OFFSET IN
- OFFSET OUT
- FROM:TO (Multi-cycle)
- TIG (Timing Ignore)

When using a specific net or instance name, you must use its full hierarchical path name. This allows the implementation tools to find the net or instance. The pattern matching wildcards can be used to specify when creating time groups with predefined time group qualifiers. This is done by using placing a pattern in parenthesis after the time group qualifier.

The predefined groups can reference all the following (among others):

- Flip-flops
- Latches
- Pads
- RAMs
- CPUs
- Multipliers
- High-speed-input/outputs

The predefined group keywords can be used globally, and to create user-defined sub-groups. The predefined time groups are considered reserved keywords that define the types of synchronous elements and pads in the FPGA device.

For more information, see [Predefined Time Groups](#).

The user-defined time group name is case sensitive and can overlap with other user-defined time group and with predefined time groups. An example of design elements being is multiple time groups. In those cases, a register is in the FFS predefined time group, but is also in the `clk` time group, which is associated with the PERIOD constraint.

Use the following keywords to define user-defined time groups:

- TNM
- TNM\_NET
- TIMEGRP

If the instance or net associated with the user-defined time group matches internal reserved words, the time group or constraint is rejected. The same is true for the user-defined time group name. In all the constraints files (NCF, UCF, and PCF), instances, or variable names that match internal reserved words, may be rejected unless the names are enclosed in double quotes. If the instance or net name does match an internal reserved word, enclose the name in double quotes. Double quotes are mandatory if the instance or net name contains special characters such as the tilde (~) or dollar sign (\$). Xilinx recommends using double quotes on all net and instances.

All elements with the same TNM or TNM\_NET attributes are considered a timing group. For more information about TNM and TNM\_NET attributes, see [Constraint System](#).

The TIMEGRP attribute is to combine existing time groups (pre-defined or user-defined) together or remove common elements from existing time groups, and create a new user-defined time group. The TIMEGRP attribute is also a method for creating a new time group by pattern matching (grouping a set of objects that all have output nets that begin with a given string).

Use the following keywords to create subsets of an existing time group:

- Rising edge synchronous elements (RISING)
- Falling edge synchronous elements (FALLING)
- Remove common elements (EXCEPT)

Use the EXCEPT keyword with a TIMEGRP attribute to remove elements from an already-created time group. The overlapping items to be removed from the original time group must be in the excluded or EXCEPT time group. If the excluded time group does not overlap with the original time group, none of the design elements are removed. In that case, the new time group contains the same elements as the original time group.

In addition to using TIMEGRP to include multiple time groups or exclude multiple time groups, it also can be used to create sub-groups using the RISING and FALLING keywords. Use RISING and FALLING to create groups based upon the synchronous element triggered clocking edge (rising or falling edges).

## Pattern Matching

Pattern matching on either net or instance names can define the user-defined time group. Use wildcard characters to define a user-defined time group of symbols whose associated net name or instance name matches a specific pattern. Wildcards are used to generalize the group selection of synchronous elements. Wildcards can also be used to shorten and simplify the full hierarchical path to the synchronous elements.

Pattern matching is as follows:

- Asterisk (\*)  
Matches any string of zero or more characters
- Question Mark (?)  
Matches a single character



Table 3-2: Pattern Matching Examples

String	Indicates	Examples
<b>DATA*</b>	any net or instance name that begins with <b>DATA</b>	<b>DATA1</b> , <b>DATA22</b> , and <b>DATABASE</b>
<b>NUMBER?</b>	any net names that begin with <b>NUMBER</b> and ends with one single character	<b>NUMBER1</b> or <b>NUMBERS</b> , but not <b>NUMBER</b> or <b>NUMBER12</b>

A pattern may contain more than one wildcard character. For example, **\*AT?** specifies any net name that:

- Begins with one or more characters followed by **AT**, and
- Ends with any one character

Following are examples of net names included in **\*AT?**:

- **BAT2**
- **CAT4**
- **THAT9**

## Time Group Examples

Following are six time group examples.

### Time Group Example One (Predefined Group of RAMs)

Following is an example of a time group created with a search string and a predefined group of RAMs in a multicycle constraint:

- **INST my\_core TNM = RAMS my\_rams;**  
This time group (**my\_rams**) is the RAM components of the hierarchical block **my\_core**
- **TIMSPEC TS01 = FROM FFS TO my\_rams 14.24ns;**
- **NET clock\_enable TNM\_NET = RAMS(address\*) fast\_rams;**  
This time group (**fast\_rams**) is the RAM components driven by net name of **clock\_enable** with an output net name of **address\***
- **TIMSPEC TS01 = FROM FFS TO fast\_rams 12.48ns; OR**
- **TIMSPEC TS01 = FROM FFS TO RAMS(address\*) 12.48ns;**  
The Destination time group is based upon RAM components with an output net name of **address\***,

### Time Group Example Two (Predefined Group of FFS)

Following is an example of a time group created with a search string and a predefined group of FFS in a multi-cycle constraint:

```
TIMSPEC TS01 = FROM RAMS TO FFS(macro_A/Qdata?) 14.25ns;
```

The Destination time group is based upon Flip Flop components with an output net named **macro\_A/Qdata?**,

### Time Group Example Three (Predefined Group on a Hierarchical Instance)

Following is an example of a time group created with the predefined group on a hierarchical instance:

- **INST macroA TNM = LATCHES latch\_grp;**  
This time group (**latch\_grp**) consists of the latch components of the hierarchical instance **macroA**,
- **INST macroB TNM = RAMS memory\_grp;**  
This time group (**memory\_grp**) consists of the RAM components of the hierarchical instance **macroB**,
- **INST tester TNM = overall\_grp;**  
This time group (**overall\_grp**) consists of synchronous components (such as RAMS, FFS, LATCHES, and PADS) of the hierarchical instance **tester**.

### Time Group Example Four (Combining Time Groups)

The following example shows how to define a new time group by combining it with other time groups:

- **TIMEGRP "larger\_grp" = "small\_grp" "medium\_grp";**  
Combines **small\_grp** and **medium\_grp** into a larger group called **larger\_grp**
- **TIMEGRP memory\_and\_latch\_grp = latch\_grp memory\_grp;**  
Combine the elements of **latch\_grp** and **memory\_grp**.

### Time Group Example Five (Removing Time Groups)

Following are examples using the EXCEPT keyword with the TIMEGRP attribute:

- **TIMEGRP new\_time\_group = Original\_time\_group EXCEPT a\_few\_items\_time\_grp;**  
Removes the elements of **a\_few\_items\_time\_grp** from **Original\_time\_group**.
- **TIMEGRP "medium\_grp" = "small\_grp" EXCEPT "smaller\_grp";**  
Creates a time group **medium\_grp** from the elements of **small\_grp** and removes the elements of **smaller\_grp**.
- **TIMEGRP all\_except\_mem\_and\_latches\_grp = overall\_grp EXCEPT memory\_and\_latch\_grp;**  
Removes the common elements between **memory\_and\_latch\_grp** and **overall\_grp**

### Time Group Example Six (Clock Edges)

Following is an example of defining a sub-group based upon the triggering clock edge:

- **TIMEGRP "rising\_clk\_grp" = RISING clk\_grp;**  
Creates a time group **rising\_clk\_grp** and includes all the rising edged synchronous elements of **clk\_grp**.
- **TIMEGRP "rising\_clk\_grp" = FALLING clk\_grp;**  
Creates **rising\_clk\_grp** and includes all the falling edged synchronous elements of **clk\_grp**.

## Constraint Priorities

During design analysis, the timing analysis tools determine which constraint analyzes which path. Each constraint type has different priority levels.

Following are the constraint priorities, from highest to lowest:

- Timing Ignore (TIG)
- FROM:THRU:TO
  - Source and Destination are User-Defined Groups
  - Source or Destination are User-Defined Groups
  - Source and Destination are Pre-defined Groups
- FROM:TO
  - Source and Destination are User-Defined Groups
  - Source or Destination are User-Defined Groups
  - Source and Destination are Pre-defined Groups
- OFFSET
  - Specific Data IOB (NET OFFSET)
  - Time Group of Data IOBs (Grouped OFFSET)
  - All Data IOBs (Global OFFSET)
- PERIOD

**Note:** This determination is based upon the constraint prioritization or which constraint appears later in the PCF file, if there are overlapping constraints of the same priority.


If the design has two PERIOD constraints that cover the same paths, the later PERIOD constraint in the PCF file covers or analyzes these paths. The previous PERIOD constraints show **0 paths analyzed** in the timing report. In order to force the timing analysis tools to use the previous PERIOD constraints, instead of the later one, use the PRIORITY keyword on the PERIOD constraints. In addition to the PRIORITY keyword, a multi-cycle or FROM:TO constraint can be used to cover these paths.

In order to prioritize within a constraint type or to avoid a conflict between two timing constraints that cover the same path, the PRIORITY keyword must be used with a value. The value for the PRIORITY can range from -255 to +255. The lower the value, the higher the priority. The value does not affect which paths are placed and routed first. It only affects which constraint covers and analyzes the path with two timing constraints of equal priority. A constraint with a PRIORITY keyword always has a higher priority than the one without it.

Use the following syntax to define the priority of a timing constraint:

- **TIMESPEC TS\_01 = FROM A\_grp TO B\_grp 10 ns PRIORITY 5;**  
TS\_01 has a lower priority than TS\_02.
- **TIMESPEC TS\_02 = FROM A\_grp TO B\_grp 20 ns PRIORITY 1;**

The PRIORITY keyword can be applied only to TIMESPEC constraints with TSidentifiers (for example, TS03) and not MAXDELAY, MAXSKEW, or OFFSET constraints. This situation can occur when two clock signals from the DCM drive the same BUFGMUX, as shown in the following figure:



*Figure 3-9: PRIORITY with a BUFGMUX Component*

Following are examples of a PERIOD constraint using the PRIORITY keyword:

```
TIMESPEC "TS_Clk0" = PERIOD "clk0_grp" 10 ns HIGH 50% PRIORITY 2;  
TIMESPEC "TS_Clk2X" = PERIOD "clk2x_grp" TS_Clk0 / 2 PRIORITY 1;
```

# Timing Constraints

This section discusses Timing Constraints and includes:

- [About Timing Constraints](#)
- [PERIOD Constraints](#)
- [OFFSET Constraints](#)
- [FROM:TO \(Multi-Cycle\) Constraints](#)

## About Timing Constraints

Timing constraints provide a basis for the design of timing goals. This is done with global timing constraints that set timing requirements that cover all constrainable paths. Creating global constraints for a design is the easiest way to provide coverage of constrainable connections in a design, and to guide the implementation tools to meeting timing requirements for all paths. Global constraints constrain the entire design.

Following are the fundamental timing constraints needed for every design:

- Clock definitions with a PERIOD constraint for each clock  
Constrains synchronous element to synchronous element paths
- Input requirements with Global OFFSET IN constraints  
Constrains interfacing inputs to synchronous elements paths
- Output requirements with Global OFFSET OUT constraints  
Constrains interfacing synchronous elements to outputs to paths
- Combinatorial path requirements with Pad to Pad constraint

You can use more specific path constraints for multi-cycle or static paths. A multi-cycle path is a path between two registers or synchronous elements with a timing requirement that is a multiple of the clock PERIOD constraint for the registers or synchronous elements. A static path does not include clocked elements such as Pad-to-Pad paths.

## Timing Constraint Exceptions

Once the foundation of timing constraints is laid, then the exceptions need to be specified and constrained.

- Use FROM:TO (multi-cycle) constraints to create exceptions to the PERIOD constraints.
- Use Pad Time Group based OFFSET constraints and NET based OFFSET constraints to create exceptions to the Global OFFSET constraints.

## Setting Timing Constraint Requirements

Xilinx recommends that you set the timing constraint requirements to the exact timing requirement value required for a path, as opposed to over-tightening the requirement. Specifying tighter constraint requirements can cause:

- Lengthened Place and Route (PAR) or implementation runtimes
- Increased memory usage
- Degradation in the quality of results

## PERIOD Constraints

This section discusses PERIOD Constraints and includes:

- [About PERIOD Constraints](#)
- [Related TIMESPEC PERIOD Constraints](#)
- [Paths Covered by PERIOD Constraints](#)

### About PERIOD Constraints


The PERIOD (Clock Period Specification) constraint is a fundamental timing and synthesis constraint. PERIOD constraints:

- Define each clock within the design
- Cover all synchronous paths within each clock domain
- Cross checks clock domain paths between related clock domains
- Define the duration of the clock
- Can be configured to have different duty cycles.

The PERIOD constraint is preferred over FROM:TO constraints, because the PERIOD constraint covers a majority of the paths and decreases the runtime of the implementation tools.

The Clock Period Specification defines:

- The timing between synchronous elements (FFS, RAMS, LATCHES, HSIOs, CPUs, and DSPS) clocked by a specific clock net that is terminated at a registered clock pin, as shown in the following figure.
- The timing between related clock domains based upon the destination clock domain.

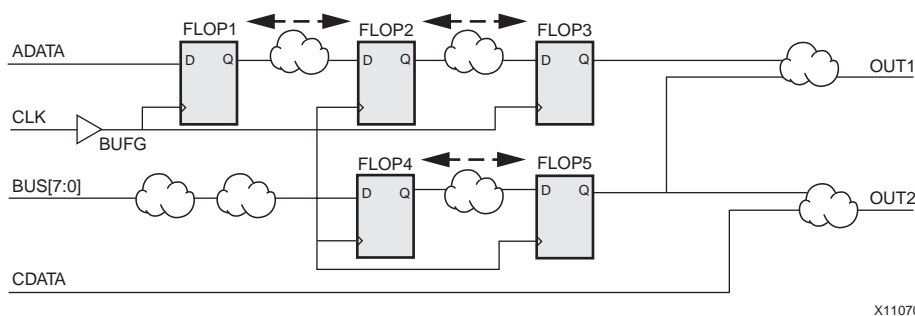

X11070

**Figure 3-10: PERIOD Constraints Covering Register to Register Paths**

The PERIOD constraint on a clock net analyzes all delays on all paths that terminate at a pin with a setup and hold analysis relative to the clock net. A typical analysis includes the data paths of:

- Intrinsic Clock-to-Out delay of the synchronous elements
- Routing and Logic delay
- Intrinsic Setup/hold delay of the synchronous elements
- Clock Skew between the source and destination synchronous elements
- Clock Phase - DCM Phase and Negative Edge Clocking
- Clock Duty Cycles

The PERIOD constraint includes:

- Clock path delay in the clock skew analysis for global and local clocks
  - Local clock inversion
  - Setup and hold time analysis
  - Phase relationship between related clocks
- Note:** Related/Derived clocks can be a function of another clock (\* and /)
- DCM Jitter, Duty-Cycle Distortion, and DCM Phase Error for Virtex-4, DCM Jitter, PLL Jitter, Duty-Cycle Distortion, and DCM Phase Error for Virtex-5, and new families as Clock Uncertainty
  - User-Defined System and Clock Input Jitter as Clock Uncertainty
  - Unequal clock duty cycles (non 50%)
  - Clock phase including DCM phase and negative edge clocking

## Related TIMESPEC PERIOD Constraints

Xilinx recommends that you associate a PERIOD constraint with every clock. The preferred way to define PERIOD constraints is to use the TIMESPEC Period Constraint. TIMESPEC allows you to define derived clock relationships with other TIMESPEC PERIOD constraints.

An example of this complex derivative relationship is done automatically through the [DLL/DCM/PLL/BUFR/PMCD Components](#) component outputs. The derived relationship is defined with one TIMESPEC PERIOD in terms of another TIMESPEC PERIOD. When a data path goes from one clock domain to another clock domain, and the PERIOD constraints are related, the timing tools perform a cross-clock domain analysis. This is very common with the outputs from the [DLL/DCM/PLL/BUFR/PMCD Components](#). For more information, see [Constraint System](#).

**Note:** During cross-clock domain analysis of related PERIOD constraints, the PERIOD constraint on the destination element covers the data path.

In the following figure, **TS\_PERIOD#1** is related to **TS\_PERIOD#2**. The data path is analyzed by **TS\_PERIOD#2**.

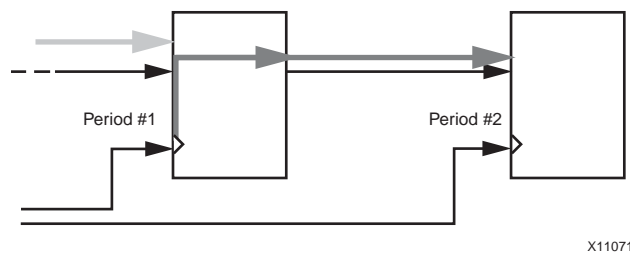


Figure 3-11: Related PERIOD Constraints

When PERIOD constraints are related to each other, the design tools can determine the inter-clock domain path requirements as shown in the following figure.

Following is an example of the PERIOD constraint syntax. The **TS\_Period\_2** constraint value is a multiple of the **TS\_Period\_1** **TIMESPEC**.

```
TIMESPEC TS_Period_1 = PERIOD "clk1_in_grp" 20 ns HIGH 50%;
TIMESPEC TS_Period_2 = PERIOD "clk2_in_grp" TS_Period_1 * 2;
```

**Note:** If the two PERIOD constraints are not related in this method, the cross clock domain data paths is not covered or analyzed by any PERIOD constraint.

In the following figure, since CLKA and CLKB are not related or asynchronous to each other, the data paths between register four and register five are not analyzed by either PERIOD constraint.

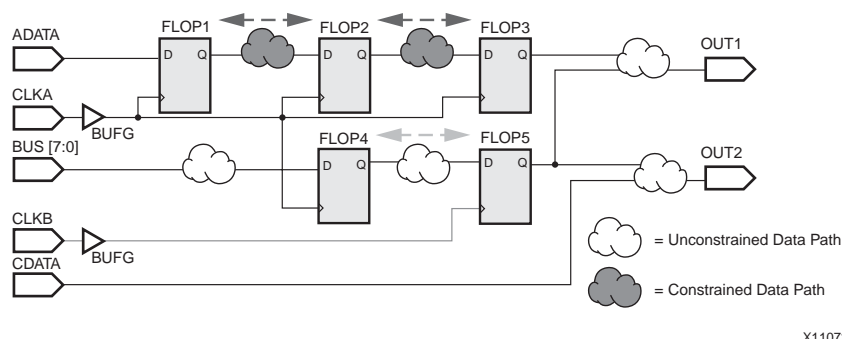


Figure 3-12: Unrelated Clock Domains

## Paths Covered by PERIOD Constraints

The PERIOD constraint covers paths only between synchronous elements. Pads are not included in this analysis. NGDBuild issues a warning if you have pad elements in the PERIOD time group. Analysis between unrelated or asynchronous clock domains is also not included.

The PERIOD constraint analysis includes the setup and hold analysis on synchronous elements. The setup analysis ensures that the data changes at the destination synchronous element prior to the clock arrival.

**Note:** The data must become valid at its input pins at least a setup time before the arrival of the active clock edge at its pin.

The equation for the setup analysis is the data path delay plus the synchronous element setup time minus the clock path skew.

$$\text{Setup Time} = \text{Data Path Delay} + \text{Synchronous Element Setup Time} - \text{Clock Path Skew}$$

The timing report analysis includes Clock Uncertainty and determines the slack value for the setup analysis. The Data Path includes the Data Path Delay and the Synchronous Element Setup Time.

$$\text{Slack} = \text{Requirement} - (\text{Data Path} - \text{Clock Path Skew} + \text{Clock Uncertainty})$$



As clock uncertainty increases, the setup margin decreases. This is shown in the following figure.

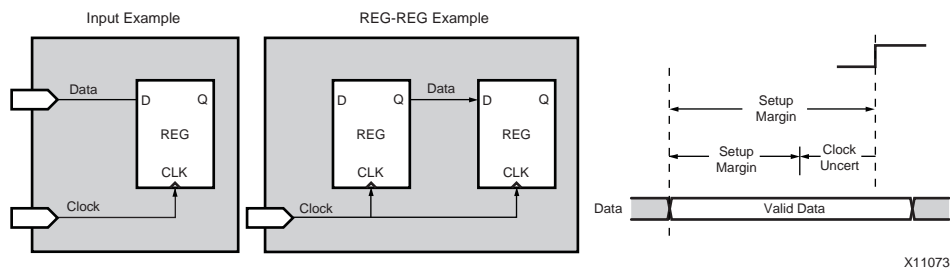


Figure 3-13: Reduced Setup Margin by Clock Uncertainty/Jitter

The hold analysis ensures that the data changes at the destination synchronous element after the clock arrival.

**Note:** The data must stay valid at its input pins at least a hold time after the arrival of the active clock edge at its pin.

The equation for the hold analysis is the clock path skew plus the synchronous element hold time minus the data path delay. A hold time violation occurs when the positive clock skew is greater than the data path delay.

$$\text{Hold Time} = \text{Clock Path Skew} + \text{Synchronous Element Hold Time} - \text{Data Path Delay}$$

The timing report analysis includes Clock Uncertainty and determines the slack value for the hold analysis. The Data Path includes the Data Path Delay and the Synchronous Element Hold Time.

$$\text{Slack} = \text{Requirement} - (\text{Clock Path Skew} + \text{Clock Uncertainty} - \text{Data Path})$$

As clock uncertainty increases, the hold margin decreases. This is shown in the following figure.

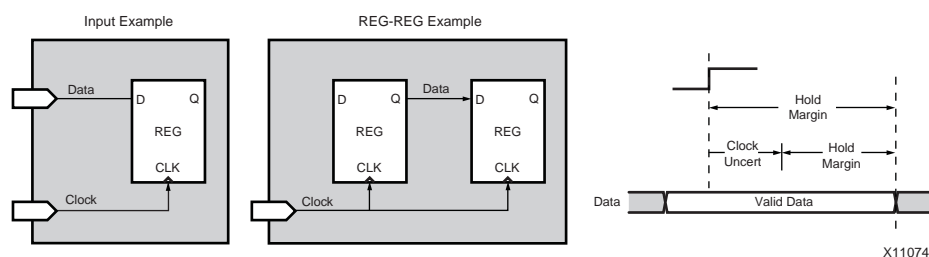


Figure 3-14: Reduce Hold Margin by Clock Uncertainty/Jitter

Both equations also include the **Clock-to-Out** time of the synchronous source element as a portion of the data path delay. In the following figure, since the positive clock skew is greater than the data path delay, the timing analysis issues a hold violation.


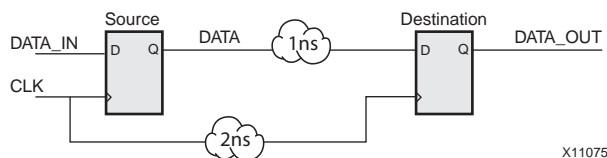


Figure 3-15: Hold Violation (Clock Skew > Data Path)

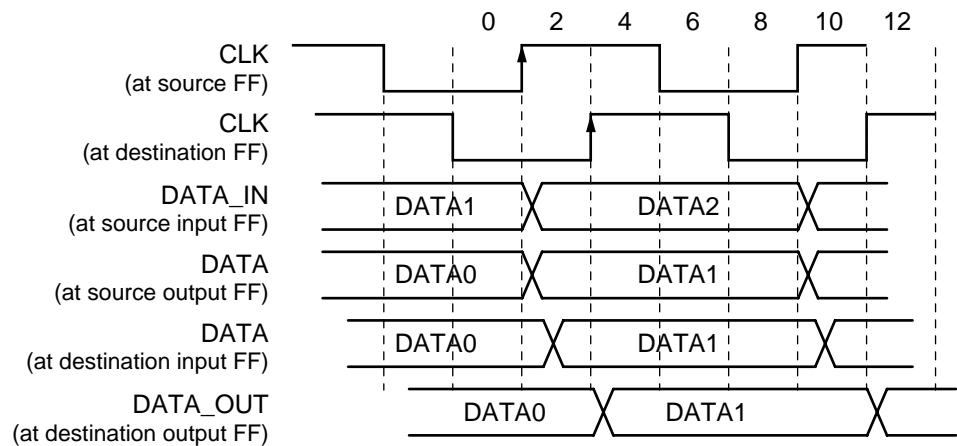

X11076


Figure 3-16: Hold Violation Waveform

**Note:** The timing report does not list the hold paths unless the path causes a hold violation.

To report the hold paths for each constraint, use the **-fastpaths** switch in **trce** or **Report Fast Paths Option** in Timing Analyzer. An example of setup and hold times from the device data sheet is shown in the following figure.

**Note:** Historically, the setup and hold analysis in the timing report is smaller than the values in the device data sheet.

The values in the data sheet cover every pin and synchronous element, but the timing report is specific to your design for a specific pin or synchronous element.

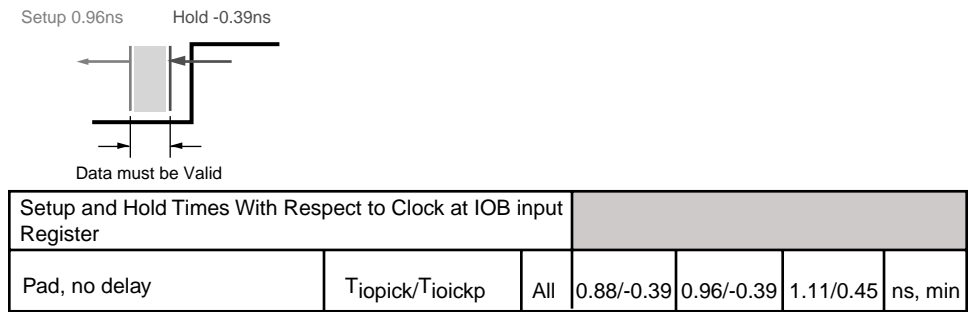

X11077

Figure 3-17: Setup/Hold Times from Data Sheet

## OFFSET Constraints

This section discusses OFFSET Constraints and includes:

- [About OFFSET Constraints](#)
- [Paths Covered by OFFSET Constraints](#)

### About OFFSET Constraints

The OFFSET constraint is a fundamental timing constraint. OFFSET constraints are used to define the timing relationship between an external clock pad and its associated data-in or data-out pad. This relationship is also known as constraining the **Pad to Setup** or **Clock to Out** paths on the device. These constraints are important for specifying timing interfaces with external components.

**Note:** The **Pad to Setup** (OFFSET IN BEFORE) constraint allows the external clock and external input data to meet the setup time on the internal flip-flop.

**Note:** The **Clock to Out** (OFFSET OUT AFTER) constraint gives you more control over the setup/hold requirement of the downstream devices and with respect to the external output data pad and the external clock pad.

The OFFSET IN BEFORE and OFFSET OUT AFTER constraints allow you to specify the internal data delay from the input pads or to the output pads with respect to the clock.

Alternatively, the OFFSET IN AFTER and OFFSET OUT BEFORE constraints allow you to specify external data and clock relationship for the timing on the path to the input pads and to the output pads for the Xilinx device. The timing software determines the internal requirements without the need of a FROM PADS TO FFS or FROM FFS TO PADS constraint.

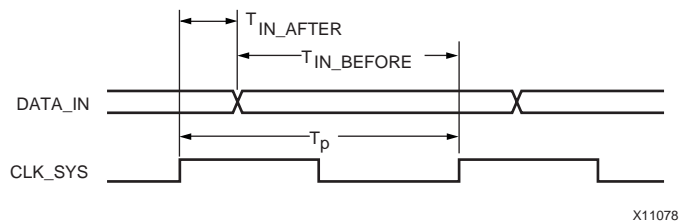


Figure 3-18: Timing Reference Diagram of OFFSET IN Constraint

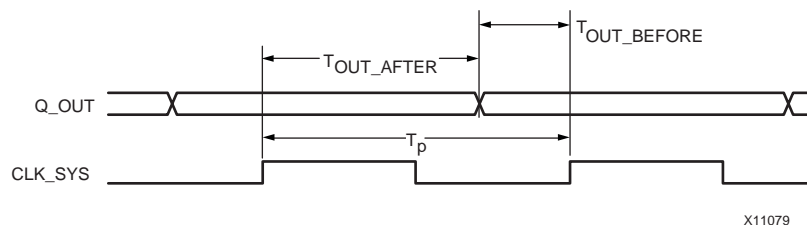


Figure 3-19: Timing Reference Diagram of OFFSET OUT Constraint

The OFFSET constraint:

- Includes clock path delay in the analysis for each individual synchronous element
- Includes paths for all synchronous element types (FFS, RAMS, LATCHES, etc.)

- Allows a global syntax that allows all inputs or outputs to be constrained with respect to an external clock
- Analyzes setup and hold time violation on inputs

The OFFSET constraint automatically accounts for the following clocking path delays when defined and analyzed with the PERIOD constraint:

- Provides accurate timing information and uses the jitter defined on the associated PERIOD constraint
- Increases the amount of time for input signals to arrive at synchronous elements (clock and data paths are in parallel)
  - Subtracts the clock path delay from the data path delay for inputs
- Reduces the amount of time for output signals to arrive at output pins (clock and data paths are in series)
  - Adds the clock path delay to the data path delay for outputs
- Includes clock phase introduced by a DLL/DCM for each individual synchronous element defined by the associated PERIOD constraint
- Includes clock phase introduced by a rising or falling clock edge

The initial clock edge for analysis of OFFSET constraints is defined by the HIGH/LOW keyword of the PERIOD constraint:

- HIGH keyword => the initial clock edge is rising
- LOW keyword => the initial clock edge is falling

The initial clock edge for analysis of OFFSET constraints can override the PERIOD constraints default clock edge with the following keywords of the OFFSET constraints:

- RISING keyword => the initial clock edge is rising
- FALLING keyword => the initial clock edge is falling

The OFFSET constraints define the relationship between the external clock pad and the external data pads. The common component between the external clock pad and the external data pads are the synchronous elements. If the synchronous element is driven by an internal clock net, a FROM:TO constraint is needed to analyze this data path. Internal clocks generated by a DCM/PLL/DLL/PMCD/BUFR are exceptions to this rule. The FROM:TO constraint provides similar analysis as the OFFSET constraints in the following situations:

- Calculate whether a setup time is violated at a synchronous element whose data or clock inputs are derived from internal nets
- Specify the delay of an external output net derived from the Q output of an internal synchronous element that is clocked from an internal net

## Paths Covered by OFFSET Constraints

The OFFSET constraints cover the following paths and are shown in the following figure.

- From input pads to synchronous elements (OFFSET IN)
- From synchronous elements to output pads (OFFSET OUT)

**Note:** If the clock net that clocks a synchronous element does not come from an input pad (for example, it is derived from another clock or from a synchronous element), then the OFFSET constraint does not return any paths during timing analysis.

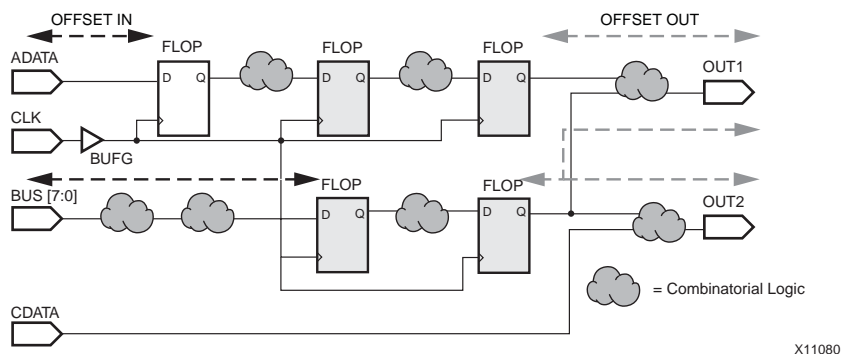


Figure 3-20: Circuit Diagram of OFFSET Constraints

The OFFSET constraint is analyzed with respect to only a single clock edge. If the OFFSET Constraint needs to analyze multiple clock phases or clock edges, as in source synchronous designs or Dual-Data Rate applications, then the OFFSET constraint must be manually adjusted by the clock phase.

The OFFSET constraint does not optimize paths clocked by an internally generated clock. Use FROM:TO or multi-cycle constraints for these paths, taking into account the clock delay.

Use the following option to obtain I/O timing analysis on internal clocks or derived clocks:

- Create a FROM:TO or multi-cycle constraint on these paths
- Or determine if the internal clock is related to an external clock signal
  - Change the requirement based upon the relationship between the two clocks
  - For example, the internal clock is a divide by two version of the external clock, and the original requirement of the OFFSET OUT with the internal clock was 10 ns, then the requirement of the OFFSET OUT with the external clock is 20 ns.

You can specify OFFSET constraints in three levels of coverage:

- A Global OFFSET applies to all inputs or outputs for a specific clock
- A Group OFFSET identifies a group of input or outputs clocked by a common clock, that have the same timing requirement
- A Net-Specific OFFSET specifies the timing by each input or output

**Note:** OFFSET constraints with a more specific scope override a more general scope.

A group OFFSET overrides a global OFFSET specified for the same I/O. Net-specific OFFSET overrides both global and group OFFSET if used. This priority rule allows you to start with global OFFSETs, and then to create group or net-specific OFFSET constraint for I/O with special timing requirements.

**Note:** Use global and group OFFSET constraints to reduce memory usage and runtime. Using wildcards in net-specific OFFSET constraint creates multiple net-specific OFFSET constraints, not a group OFFSET constraint.

A group OFFSET constraint can include both a register group and a pad group. Group OFFSET allows you to group pads or registers, or both, to use the same requirement. The register group can be used to identify path source or destination that has different requirements from or to a single pad on a clock edge. The pad group can be used to identify path sources or destinations that have different requirements from or to a group of pads, on the same clock edge. You can group and constrain the pads and registers all at once, which is useful if a clock is used on the rising and falling edge for inputs and outputs.

The rising and falling groups require different group OFFSET constraints. In the following figure, registers A, B, and C are different time groups (TIMEGRP AB = RISING FFS; TIMEGRP C = FALLING FFS;), even though these registers have the same data and clock source. This allows you to perform two different timing analyses for these registers.

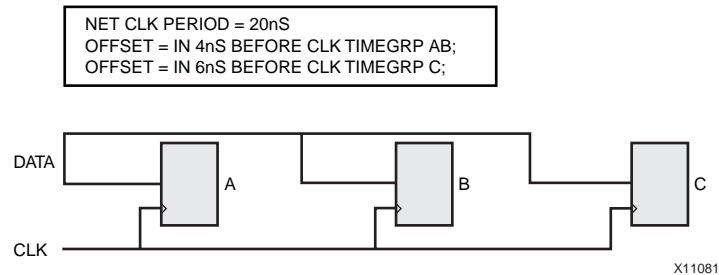


Figure 3-21: OFFSET with Different Time Groups

**Note:** For CPLD designs, the clock inputs referenced by the OFFSET constraints must be explicitly assigned to a global clock pin using either a BUFG symbol or applying the BUFG=CLK constraint to an ordinary input. Otherwise, the OFFSET constraint is not used during timing driven optimization of the design.

## FROM:TO (Multi-Cycle) Constraints

This section discusses FROM:TO (Multi-cycle) Constraints and includes:

- [About FROM:TO \(Multi-Cycle\) Constraints](#)
- [False Paths or Timing Ignore \(TIG\) Constraint](#)
- [Paths Covered by FROM:TO Constraints](#)

### About FROM:TO (Multi-Cycle) Constraints

A multi-cycle path is path that is allowed to take multiple clock cycles. These types of paths are typically covered by a PERIOD constraint by default. They may cause errors since a PERIOD is a one-cycle constraint. To eliminate these errors, remove the paths from the PERIOD constraint by putting a specific multi-cycle constraint on the path.

A multi-cycle constraint is applied by using a FROM:TO constraint.

FROM:TO constraints:

- Have a higher priority than a PERIOD constraint,
- Removes the specified paths from the PERIOD to the FROM:TO constraint

Multicycle constraints:

- Have a higher priority than PERIOD and OFFSET constraints. It pulls paths out of the lower priority constraints and the paths are analyzed by the multicycle constraints.
- Can be tighter or looser than lower priority constraints.
- Constrain a specific path

The specific path can be within the same clock domain, but have a different requirement than the PERIOD constraint. Alternatively, the specific path with a data path, which crosses clock domains are constrained with a multicycle constraint.

A FROM:TO constraint begins at a synchronous element and ends at a synchronous element. For example, if a portion of the design needs to run slower than the PERIOD requirement, use a FROM:TO constraint for the new requirement. The multi-cycle path can also mean that there is more than one cycle between each enabled clock edges. When using a FROM:TO constraint, you must specify the constrained paths by declaring the start and end points, which must be pre-specified time groups (such as PADS, FFS, LATCHES, RAMS), user-specified time groups, or user-specified synchronous points (see TPSYNC).

FROM or TO is optional when constraining a specific path. A FROM multicycle constraint covers a **from** or source time group to the next synchronous elements or pads elements. A TO multicycle constraint covers all previous synchronous elements or pad elements to a **to** or destination time group. Following are some possible combinations:

- FROM:TO
- FROM:THRU:TO
- THRU:TO
- FROM:THRU
- FROM
- TO
- FROM:THRU:THRU:THRU:TO

A FROM:TO constraint can cover the multi-cycle paths that cover the path between clock domains. For example, one clock covers a portion of the design and another clock covers

the rest, but there are paths that go between these two clock domains, as shown in the following figure. You must have a clear idea of the design specifics, and take into account the multiple clock domains.

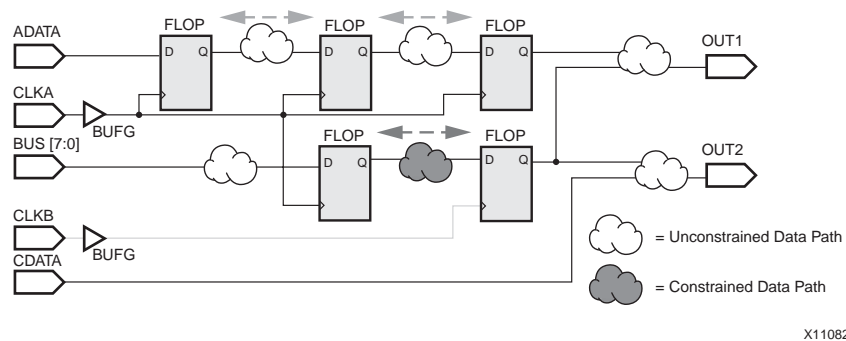


Figure 3-22: Multicycle Constraint Covers a Cross Clock Domain Path

The cross clock domain paths between unrelated PERIOD constraints are analyzed in the Unconstrained Paths report. If these paths are related incorrectly, or if they require a different timing requirement, then create a multicycle or FROM:TO constraint. The FROM:TO constraint can be a specific value, related to another TIMESPEC identifier, or TIG (Timing Ignore). A path can be ignored during timing analysis with the label of TIG.

If the clocks are unrelated by the definition of the constraints, but have valid paths between them, then create a FROM:TO constraint to constrain them. To constrain the paths between two clock domains, create time groups based upon each clock domain, then create a FROM:TO for each direction that the paths pass between the two clock domains. Following is an example of a cross clock domain using a FROM:TO constraint. See the following figure.

```
TIMESPEC TS_clk1_to_clk2 = FROM clk1 TO clk2 8 ns;
```

Constrain from time group **clkA** to time group **clkB** to be 8 ns.

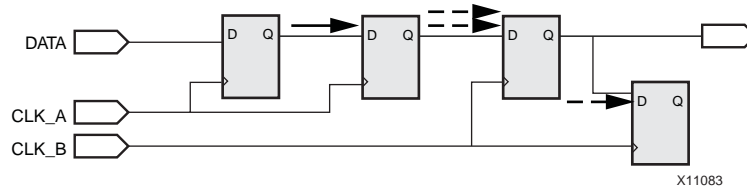



Figure 3-23: Cross Clock Domain Path Analyzed Between CLK\_A Clock Domain and CLK\_B Clock Domain

One of the fundamental FROM:TO constraints is the **Pad to Pads** path or asynchronous paths of the design. The FROM:PADS:TO:PADS constraint constrains purely combinatorial paths with the start and endpoints are the Pads of the design. These types of paths are traditionally left unconstrained, since the paths are asynchronous. See the following figure.

Following is an example of this type of constraint:

```
TIMESPEC TS_Pad2Pad = FROM PADS TO PADS 14.4 ns;
```



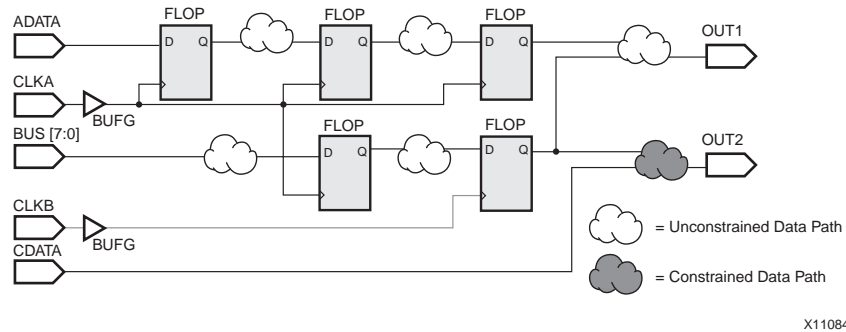

X11084

Figure 3-24: Pad-to-Pad Multicycle Constraint Covers Path

In addition to using multicycle constraints in the Pad-to-Pad path, multicycle constraints can be used to define a slow exception of the design. This is an exception from the PERIOD constraint, which constrains the majority of the design. The following figure shows the use of a FROM:TO slow exception in conjunction with a PERIOD


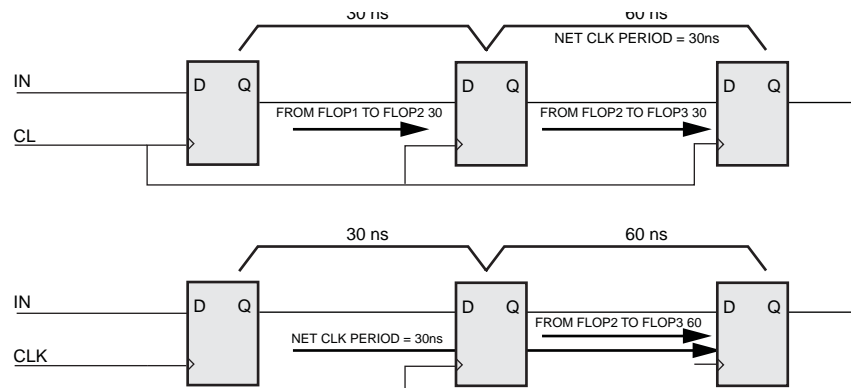


Figure 3-25: Slow Exception Multicycle Constraint Overlaps a PERIOD Constraint

The top graphic uses FROM:TO only and is not recommended. The bottom graphic uses PERIOD with a FROM:TO slow exception. This is the recommended method.

A Clock Enable net can define a slow exception, as shown in the following figure.

```
NET clk_en TNM = slow_exception;
NET clk TNM = normal;
TIMESPEC TS01 = PERIOD normal 8 ns;
TIMESPEC TS02 = FROM slow_exception TO slow_exception TS01*2;
```

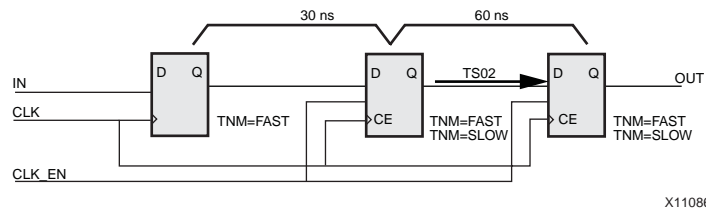

X11086

Figure 3-26: Slow Time Group Overlaps the Fast Time Group for a FROM:TO Exception

Use a TIG constraint to ignore a path between **flopa** and **flop b** passing through net **netand**. See the following figure. To create this from the FROM:TO:TIG constraint:

1. Tag **flopa** for time group **FFA\_grp**
2. Tag **flop b** for time group **FFB\_grp**
3. Create the following constraint:

```
TIMESPEC TS_FFA_to_FFB = FROM FFA_grp TO FFB_grp TIG;
```

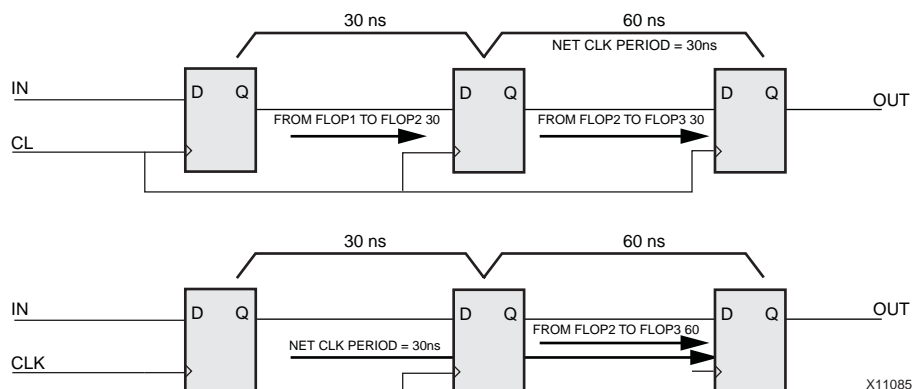


Figure 3-27: Ignore a Path Between Registers

If a specific path needs to be constrained at a faster or slower than the PERIOD constraint, create a FROM:TO for that path. If there are multiple paths between a source and destination synchronous elements, create a FROM:THRU:TO constraint to capture specific paths.

This constraint applies to a specific path that begins at a source time group, passes through intermediate points, and ends at a destination time group. The source and destination time groups can be either user-defined or predefined time groups. The intermediate points of the path are defined using the TPTHU constraint. There is no limitation on the number of intermediate points in a FROM:TO constraint.

#### FROM:THRU:TO Constraint Example

Following is an example of a FROM:THRU:TO constraint:

```
NET $3M17/On_the_Way TPTHU = abc;
TIMESPEC TS_mypath = FROM my_src_grp THRU abc TO my_dest_grp 9 ns;
```

Constrain from time group **my\_src\_grp** through thru group **abc** to the time group **my\_dest\_grp** to be 9 ns.

- The **my\_src\_grp** constrains the FIFO shown in the following figure.
- The **my\_dest\_grp** constrains the registers shown in the following figure.

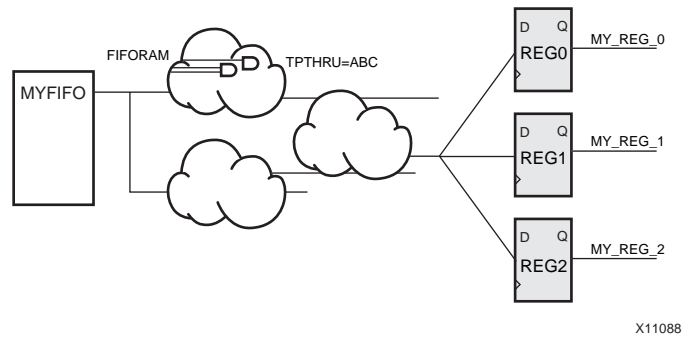


Figure 3-28: **NET TPTHU Example with Previous FROM:THRU:TO cOnstraint Example**

## False Paths or Timing Ignore (TIG) Constraint

A NET TIG constraint covers a specific net and marks nets that are to be ignored for timing analysis purposes. A FROM:TO TIG covers several paths between two synchronous groups or pad groups, and marks all the nets going between the synchronous groups that are to be ignored for timing analysis purposes. An example is shown in the following figure.

Actual Target - Figure 3-29

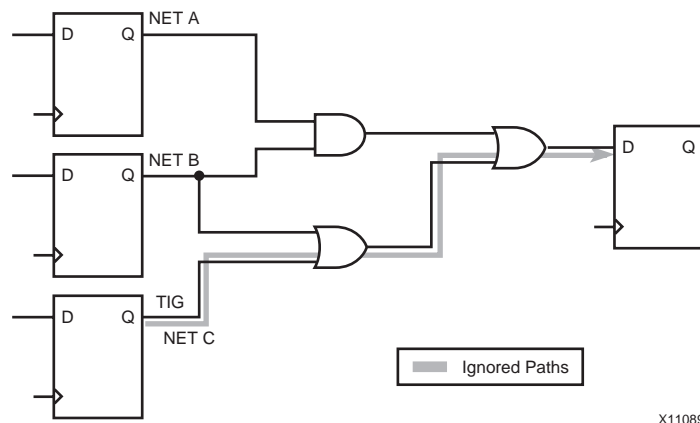


Figure 3-29: **Timing Ignore on a Path Between Two Flip-Flops**

You can also use the FROM:THRU:TO constraint to define a non-synchronous path, such as using a common bus for several modules. The timing analysis constrains between these modules, even though the modules do not interact with each other. Since these modules do not interact with each other, you can use a TIG (Timing Ignore) constraint or set the FROM:TO constraint to a large requirement. The following figure shows an example.

```
NET DATA_BUS* TPTHU = DataBus;
TIMESPEC TS_TIG = FROM FFS THRU DataBus TO FFS TIG;
OR
TIMESPEC TS_data_bus = FROM FFS THRU DataBus TO FFS 123ns;
```

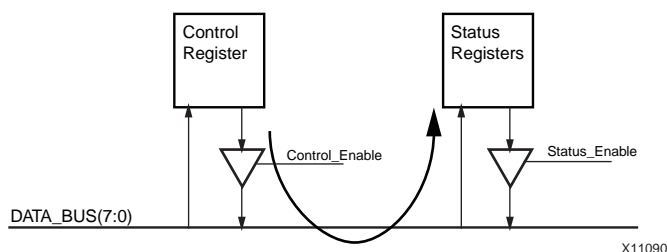


Figure 3-30: Common Bus is the Through Point

In addition to using a TPTHRU constraint, you can apply a TPSYNC constraint to specific pins or combinatorial logic in order to force the timing analysis to stop or start at a non-synchronous point. The TPSYNC constraint defines non-synchronous points as synchronous points for multicycle constraints and analysis. The path to a three-state buffer, for example, can be constrained with the TPSYNC constraint.

The following figure shows an example of constraining the path to the three-state buffer:

```
NET $3M17/Blue TPSYNC = Blue_S;
TIMESPEC TS_1A = FROM FFS TO Blue_S 15;
```

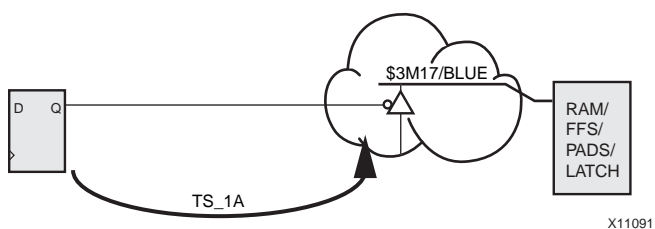


Figure 3-31: Constraint to Three-State Buffer with FROM:TO

## Paths Covered by FROM:TO Constraints

The FROM:TO constraint defines a timing requirement between two time groups. It is intended to be used in conjunction with the PERIOD and OFFSET IN/OUT constraints and to define the fast and slow exceptions. It is very versatile as shown in the following examples for a simple design in the following figure.

```
TIMESPEC TS_C2S = FROM FFS TO FFS 12 ns;
TIMESPEC TS_P2S = FROM PADS TO FFS 10 ns;
TIMESPEC TS_P2P = FROM PADS TO PADS 13 ns;
TIMESPEC TS_C2P = FROM FFS TO PADS 8 ns;
```

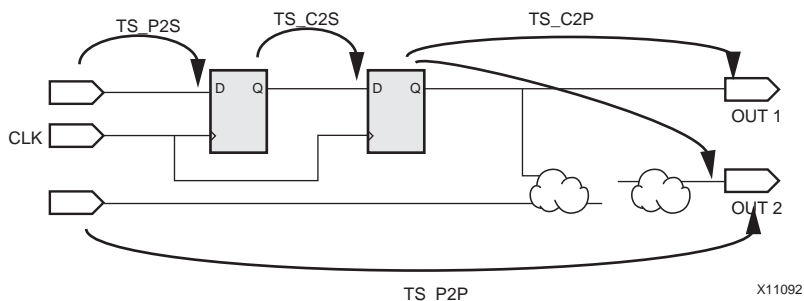


Figure 3-32: All Paths Constrained on a Sample Design

When changing analysis from PERIOD to FROM:TO, the number of paths analyzed can be larger than when a path is covered with a PERIOD constraint but the number of Unconstrained Path does not increase. The destination TIMEGRP for the FROM:TO constraint probably contains distributed Dual-Port Synchronous RAMs. Paths to this RAM are both synchronous and asynchronous. For example, the path to the data input (D) is synchronous but the paths to the read address inputs (DPRA) are asynchronous.

A PERIOD constraint constrains only synchronous paths; but a FROM:TO constraint constrains both the synchronous and asynchronous paths to this RAM. For example, a path from an FF to the D input of this RAM is a synchronous path. Constraining this data path is covered by a PERIOD or a FROM:TO constraint. A path from a flip-flop to the DPRA input of this RAM is an asynchronous path to the read address input and is covered only by a FROM:TO constraint.

## Timing Constraint Syntax

The grouping constraint syntax is conversational and easy to understand. For more information, see the TNM, TNM\_NET, and TIMEGRP constraints in the *Constraints Guide*.

The PERIOD constraint syntax is conversational and easy to understand. For more information, see the PERIOD constraint in the *Constraints Guide*.

The OFFSET IN/OUT constraint syntax is conversational and easy to understand. For more information, see the OFFSET constraint in the *Constraints Guide*.

The multicycle constraint syntax is conversational and easy to understand. For more information, see the FROM:TO (Multicycle) constraint in the *Constraints Guide*.

## Creating Timing Constraints

Timing constraints are added to the design in two methodologies:

- Add timing constraints through the HDL design
  - [Specifying Timing Constraints in XST](#)
  - [Specifying Timing Constraints in Synplify](#)
- Add timing constraints through Constraints Editor (UCF)

The Constraints Editor uses the design information from the NGD file to create constraints in the UCF. Since Constraints Editor parses the NGD file for the design information, the exact UCF syntax for each design element and constraint is used by the implementation tools.

The Constraints Editor allows you to create timing groups and timing constraints for the design. The clocks and IOs are supplied, so the exact spelling of the names is not needed. You only need to define the timing requirements, and not the syntax, of the constraints. When creating specific time groups, element names are provided, and exceptions to the global constraints can be made using those groups.

Since the Constraints Editor does not create time groups or constraints with wildcards, you must manually modify the UCF to condense the size of the time groups. The condensing of the size of the time groups in the UCF is done with wildcards on the unique portions of the design element and the common portion remains.

Following is an example of condensed time groups:

```
INST my_bus* TNM = my_output_bus_grp;
```

The asterisk (\*) wildcard causes the constraint system to apply the TNM attribute to all instances with the base name **my\_bus**.

## Chapter 4

# Specifying Timing Constraints in XST

This chapter discusses how to specify timing constraints in the Xilinx Synthesis Tool (XST) either in Hardware Description Language (HDL) code, or in an XST Constraints File (XCF). For information on how to specify timing constraints for Synplify, see [Chapter 3, Timing Constraint Principles](#).

For more information, see the *Xilinx Synthesis and Simulation Design Guide* and *XST Users Guide*.

## Specifying Timing Constraints in HDL or XCF

You can specify timing constraints either in your Hardware Description Language (HDL) code, or in an XST Constraints File (XCF).

To specify timing constraints before synthesis:

- Specify the timing constraints into your design:
  - HDL
    - VHDL
    - Verilog
  - Schematic
- OR
- Specify the timing constraints in an XCF.

### Specifying Timing Constraints in HDL

When you specify timing constraints in your HDL code, they are written in the style of the attributes.

### Specifying Timing Constraints in XCF

XST supports an XST Constraints File (XCF) syntax to specify synthesis and timing constraints.

The constraint file method allows you to use the native XCF timing constraint syntax. Using the XCF syntax, XST supports constraints such as:

- TNM\_NET
- TIMEGRP
- PERIOD

- TIG
- FROM-TO

This includes wildcards and hierarchical names.

XCF syntax has the following limitations:

- Nested model statements are not supported.
- Instance or signal names listed between the BEGIN MODEL statement and the END statement are only those visible inside the entity. Hierarchical instance or signal names are not supported.

## Enabling the Command Line Switch

Timing constraints supported by XST can also be applied using the `-glob_opt` command line switch. Using the `-glob_opt` command line switch is the same as selecting **Process > Properties > Synthesis Options > Global Optimization Goal**. Using this method allows you to apply global timing constraints to the entire design. You cannot specify a value for these constraints; XST optimizes them for the best performance. These constraints are overridden by constraints specified in the constraints file.



## XST Timing Constraints

The sections below give syntax examples for individual Xilinx timing constraints in VHDL, Verilog, and an XCF file. Not all constraints give examples of all three methods.

- [Asynchronous Register \(ASYNC\\_REG\)](#)
- [Clock Signal \(CLOCK\\_SIGNAL\)](#)
- [Multi-Cycle Path](#)
- [Maximum Delay \(MAXDELAY\)](#)
- [Maximum Skew \(MAXSKEW\)](#)
- [Offset \(OFFSET\)](#)
- [Period \(PERIOD\)](#)
- [System Jitter \(SYSTEM\\_JITTER\)](#)
- [Timing Ignore \(TIG\)](#)
- [Time Group \(TIMEGRP\)](#)
- [Timing Specifications \(TIMESPEC\)](#)
- [Timing Name \(TNM\)](#)
- [Timing Name Net \(TNM\\_NET\)](#)

### Asynchronous Register (ASYNC\_REG)

The Asynchronous Register (ASYNC\_REG) constraint can be attached only on registers or latches with asynchronous input (D input or the CE input). For more information, see the *Constraints Guide*.

#### Asynchronous Register (ASYNC\_REG) VHDL Syntax

```
attribute ASYNC_REG : string;
attribute ASYNC_REG of instance_name: signal is "{TRUE|FALSE}";
```

#### Asynchronous Register (ASYNC\_REG) VHDL Syntax Example

```
architecture behavioral of top_yann_mem_infrastructure is
begin
  signal sys_rst      : std_logic;
  attribute ASYNC_REG : string;
  attribute ASYNC_REG of sys_rst: signal is "TRUE";
  --source code
End behavioral;
```

#### Asynchronous Register (ASYNC\_REG) Verilog Syntax

```
(* ASYNC_REG = "{TRUE|FALSE}" *)
```

#### Asynchronous Register (ASYNC\_REG) Verilog Syntax Example

```
module mig_22
( inout [7:0]  cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input      sys_clk_p,
  input      sys_clk_n,
  input      clk200_p,
```

```

        input      clk200_n,
        input      sys_reset_in_n,
        inout [0:0] cntrl0_ddr2_dqs
    );
    wire clk_0;
    wire clk_90;
    wire clk_200;
    (* ASYNC_REG = "TRUE" *)
    reg sys_rst;
    // source code
End module;

```

## Clock Signal (CLOCK\_SIGNAL)

**Note:** Clock Signal applies to all FPGA devices. Clock Signal does not apply to CPLD devices.

If a clock signal goes through combinatorial logic before being connected to the clock input of a flip-flop, XST cannot identify which input pin or internal signal is the real clock signal. Clock Signal (CLOCK\_SIGNAL) allows you to define the clock signal.

### Clock Signal (CLOCK\_SIGNAL) VHDL Syntax

```

attribute clock_signal : string;
attribute clock_signal of signal_name : signal is "{yes|no}";

```

### Clock Signal (CLOCK\_SIGNAL) VHDL Syntax Example

```

entity top_yann_mem is
port ( cntrl0_DDR2_DQ : inout std_logic_vector(71 downto 0);
      SYS_CLK_P : in std_logic;
      SYS_CLK_N : in std_logic;
      CLK200_P : in std_logic;
      CLK200_N : in std_logic
    );
    attribute clock_signal : string;
    attribute clock_signal of clk200_p : signal is "yes";
end entity;

```

### Clock Signal (CLOCK\_SIGNAL) Verilog Syntax

```

(* clock_signal = "{yes|no}" *)

```

### Clock Signal (CLOCK\_SIGNAL) Verilog Syntax Example

```

module mig_22
( inout [7:0] cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input      sys_clk_p,
  input      sys_clk_n,
  input      clk200_p,
  input      clk200_n,
  input      sys_reset_in_n,
  inout [0:0] cntrl0_ddr2_dqs
);
    (* clock_signal = "yes" *)

```

```

wire clk_0;
wire clk_90;
wire clk_200;
reg sys_rst;
// source code
End module;

```

## Clock Signal (CLOCK\_SIGNAL) XCF Syntax

```

BEGIN MODEL "entity_name"
NET "primary_clock_signal" clock_signal={yes|no|true|false};
END;

```

## Clock Signal (CLOCK\_SIGNAL) XCF Syntax Example

```

BEGIN MODEL "top_yann_mem"
NET "CLK200_P" clock_signal = yes;
END;

```

## Multi-Cycle Path

The Multi-Cycle Path constraint specifies a timing constraint between two groups. For more information, see [Chapter 3, Timing Constraint Principles](#).

## Multi-Cycle Path XCF Syntax

```
TIMESPEC TSname =FROM "group1" TO "group2" value;
```

where

- **TSname** must always begin with **TS**. Any alphanumeric character or underscore may follow.
- **group1** is the source timing group
- **group2** is the destination timing group
- **value** is **ns** by default. Other possible values are **MHz** or another timing specification such as **TS\_C2S/2** or **TS\_C2S\*2**.

XST supports the FROM-TO constraint with the following limitations:

- FROM-THRU-TO is not supported
- Linked timing specification is not supported
- Pattern matching for predefined groups is not supported, such as:

```
TIMESPEC TS_1 = FROM FFS(machine/*) TO FFS 2 ns;
```

## Multi-Cycle Path XCF Syntax Example

```

TIMESPEC TS_MY_PathA = FROM "my_src_grp" TO "my_dst_grp" 23.5 ns;
TIMESPEC TS_DQS_UNUSED = FROM FFS TO "control_unused_dqs" TIG;

```

## Maximum Delay (MAXDELAY)

**Note:** Maximum Delay (MAXDELAY) applies to the nets in FPGA devices only.

The Maximum Delay (MAXDELAY) attribute defines the maximum allowable delay on a net. For more information, see the *Constraints Guide*.

## Maximum Delay (MAXDELAY) VHDL Syntax

```
attribute maxdelay of signal_name: signal is "value [units]";
```

where

- **value** is a positive integer;  
Valid units are ps, ns, us, ms, Hz, kHz, MHz. The default is ns.

## Maximum Delay (MAXDELAY) VHDL Syntax Example

```
entity top_yann_mem_data_path_iobs_0 is
port (
    CLK          : in std_logic;
    dqs_delayed  : out std_logic_vector(31 downto 0);
    READ_EN_DELAYED_RISE : out std_logic_vector(31 downto 0);
    READ_EN_DELAYED_FALL : out std_logic_vector(31 downto 0);
);
attribute maxdelay: string;
attribute maxdelay of READ_EN_DELAYED_RISE: signal is "800 ps";
attribute maxdelay of READ_EN_DELAYED_FALL: signal is "800 ps";
end entity;
```

## Maximum Delay (MAXDELAY) Verilog Syntax

```
(*MAXDELAY = "value [units]" *)
```

## Maximum Delay (MAXDELAY) Verilog Syntax Example

```
module mig_22
( inout [7:0]  cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input       sys_clk_p,
  input       sys_clk_n,
  input       clk200_p,
  input       clk200_n,
  input       sys_reset_in_n,
  inout [0:0]  cntrl0_ddr2_dqs
);
wire clk_0;
wire clk_90;
wire clk_200;
(*MAXDELAY= " 800 ps" *)
wire read_en;
reg sys_rst;
// source code
End module;
```

## Maximum Skew (MAXSKEW)

Maximum Skew (MAXSKEW) controls the amount of skew on a net. Skew is the difference between the delays of all loads driven by the net. For more information, see the *Constraints Guide*.

## Maximum Skew (MAXSKEW) VHDL Syntax

```
attribute maxskew: string;
attribute maxskew of signal_name : signal is "allowable_skew [units]";
```

where

- **allowable\_skew** is the timing requirement
- valid units are **ms**, **micro**, **ns**, or **ps**. The default is **ns**.

## Maximum Skew (MAXSKEW) VHDL Syntax Example

```
entity top_yann_mem_infrastructure is
port (
    SYS_CLK_P: in std_logic;
    SYS_CLK_N: in std_logic;
    CLK200_P: in std_logic;
    CLK200_N: in std_logic;
    CLK      : out std_logic;
    REFRESH_CLK : out std_logic;
    sys_rst   : out std_logic;
);
attribute maxskew: string;
attribute maxskew of sys_rst : signal is "3 ns";
end entity;
```

## Maximum Skew (MAXSKEW) Verilog Syntax

```
(* MAXSKEW = "allowable_skew [units]" *)
```

where

- **allowable\_skew** is the timing requirement
- valid units are **ms**, **micro**, **ns**, or **ps**. The default is **ns**.

## Maximum Skew (MAXSKEW) Verilog Syntax Example

```
module mig_22
( inout [7:0]  cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input       sys_clk_p,
  input       sys_clk_n,
  input       clk200_p,
  input       clk200_n,
  input       sys_reset_in_n,
  inout [0:0]  cntrl0_ddr2_dqs
);
wire clk_0;
wire clk_90;
wire clk_200;
(*MAXSKEW= " 3 ns" *)
wire read_en;
reg sys_rst;
// source code
End module;
```

## Offset (OFFSET)

The Offset (OFFSET) constraint specifies the timing relationship between an external clock and its associated data-in or data-out pin. OFFSET is used only for pad related signals, and cannot be used to extend the arrival time specification method to the internal signals in a design. For more information, see [Chapter 3, Timing Constraint Principles](#).

### Offset (OFFSET) XCF Syntax

```
OFFSET = {IN|OUT} offset_time [units] {BEFORE|AFTER}
        clk_name [TIMEGRP group_name];
```

where

- **offset\_time [units]** is the difference in time between the capturing clock edge and the start of the data to be captured. The time can be specified with or without explicitly declaring the units. If no units are specified, the default value is nanoseconds. The valid values are **ps**, **ns**, micro, and **ms**.
- **BEFORE | AFTER** defines the timing relationship of the start of data to the clock edge. The best method of defining the clock and data relationship is to use the BEFORE option. BEFORE describes the time the data begins to be valid relative to the capturing clock edge. Positive values of BEFORE indicate the data begins prior to the capturing clock edge. Negative values of BEFORE indicate the data begins following the capturing clock edge.
- **clk\_name** defines the fully hierarchical name of the input clock pad net.
- The **valid** keyword is not applicable to the Offset constraint.

### Offset (OFFSET) XCF Syntax Example

```
OFFSET = IN 2 ns BEFORE "CLK200_N" ;
OFFSET = IN 3.85 ns BEFORE "SYS_CLK_P" ;
OFFSET = OUT 4 ns AFTER "CLK200_N" ;
OFFSET = OUT 7 ns AFTER "SYS_CLK_P" ;
NET "main_00/top_00/iobs_00/data_path_iobs_00/v4_dq_iob_0/DDR_DQ" TNM=
DDR2_DQ_Grp;
OFFSET = OUT 6.7 ns AFTER "SYS_CLK_P" TIMEGRP DDR2_DQ_Grp;
OFFSET = IN 3.2 ns BEFORE "SYS_CLK_P" TIMEGRP DDR2_DQ_Grp ;
```

## Period (PERIOD)

Period (PERIOD) is a basic timing constraint and synthesis constraint. A clock period specification checks timing between all synchronous elements within the clock domain as defined in the destination element group. The period specification is attached to the clock net. The timing analysis tools automatically take into account any inversions of the clock net at register clock pins, clock phase, and includes all synchronous item types in the analysis. It also checks for hold violations. For more information, see [Chapter 3, Timing Constraint Principles](#).

### Period (PERIOD) VHDL Syntax

Period (PERIOD) applies only to a specific clock signal.

```
attribute period: string;
attribute period of signal_name : signal is "period [units]";
```

### Period (PERIOD) VHDL Syntax Example

```
entity top_yann_mem is
port ( cntrl0_DDR2_DQ : inout std_logic_vector(71 downto 0);
      SYS_CLK_P : in std_logic;
      SYS_CLK_N : in std_logic;
      CLK200_P : in std_logic;
      CLK200_N : in std_logic
    );
attribute period: string;
attribute period of SYS_CLK_P : signal is "5 ns";
end entity;
```

### Period (PERIOD) Verilog Syntax

PERIOD applies only to a specific clock signal.

```
(* PERIOD = "period [units]" *)
```

*where*

- **period** is the required clock period
- **units** is an optional field to indicate the units for a clock period. The default is nanoseconds (**ns**), but the timing number can be followed by **ps**, **ns**, or **micro** to indicate the intended units.

### Period (PERIOD) Verilog Syntax Example

```
module mig_22
( inout [7:0] cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input sys_clk_p,
  input sys_clk_n,
  input clk200_p,
  input clk200_n,
  input sys_reset_in_n,
  inout [0:0] cntrl0_ddr2_dqs
);
```

```
(*PERIOD = "5 ns"*)
wire clk_0; // The clk_0 is assigned with the period of 5 ns
wire clk_90;
wire clk_200;
wire read_en;
reg sys_rst;
// source code
End module;
```

## TIMESPEC PERIOD XCF Syntax

This is the primary method for specifying Period (PERIOD) XCF syntax. Xilinx® recommends this version.

```
TIMESPEC "TSidentifier"=PERIOD "TNM_reference period" [units]
[ {HIGH |LOW} [high_or_low_time [hi_lo_units]] ] INPUT_JITTER value [units];
```

## NET PERIOD XCF Syntax

This is the secondary method for specifying Period (PERIOD) XCF syntax. Xilinx DOES NOT recommend this version.

```
NET "net_name" PERIOD=period [units]
[ {HIGH|LOW} [high_or_low_time [hi_lo_units]] ];
```

where

- **identifier** is a reference identifier that has a unique name
- **TNM\_reference** is the identifier name that is attached to a clock net (or a net in the clock path) using the TNM or TNM\_NET constraint. When a TNM\_NET constraint is traced into the CLKIN input of a DLL, DCM or PLL component, new PERIOD specifications may be created at the DLL/DCM/PLL outputs.
- **period** is the required clock period.
- **units** is an optional field to indicate the units for a clock period. The default is nanoseconds (ns), but the timing number can be followed by ps, ms, micro, or % to indicate the intended units.
- **HIGH** or **LOW** indicates whether the first pulse is to be High or Low.  
**HIGH** and **LOW** values are not taken into account during timing estimation and optimization. They are propagated to the final netlist only if **WRITE\_TIMING\_CONSTRAINTS = yes**.
- **high\_or\_low\_time** is the optional **HIGH** or **LOW** time, depending on the preceding keyword. If an actual time is specified, it must be less than the period. If no **high\_or\_low\_time** is specified, the default duty cycle is 50 percent.
- **hi\_lo\_units** is an optional field to indicate the units for the duty cycle. The default is nanoseconds (**ns**), but the **high\_or\_low\_time** number can be followed by **ps**, **micro**, **ms**, or **%** if the **HIGH** or **LOW** time is an actual time measurement.

The following statement assigns a clock period of 40 ns to the net named **CLOCK**, with the first pulse being **HIGH** and having duration of 25 nanoseconds.

```
NET "CLOCK" PERIOD=40 HIGH 25;
```

The following statement assigns a clock period of 5 ns in the style of TIMESPEC.

```
NET "infrastructure0/SYS_CLK_IN" TNM_NET = "SYS_CLK";
TIMESPEC "TS_SYS_CLK" = PERIOD "SYS_CLK" 5 ns HIGH 50 %;
```



## System Jitter (SYSTEM\_JITTER)

System Jitter specifies the system jitter of the design. System Jitter depends on various design conditions, such as the number of flip-flops changing at one time and the number of I/Os changing.

System Jitter applies to all clocks within a design. System Jitter can be combined with the INPUT\_JITTER keyword on the PERIOD constraint to generate the Clock Uncertainty value shown in the timing report. For more information, see [Chapter 3, Timing Constraint Principles](#).

System Jitter is another way to specify an additional timing margin where there is no real way to characterize the jitter of the system. This constraint is useful to test the limitations of a design when a tight timing margin exists. System Jitter is used within the clock uncertainty calculation for all constraints that analyze a clock in the design.

Some devices have a default System Jitter included in the speed files. This can be checked by using SpeedPrint.

Another way to perform the same test is to modify the Input Jitter for a specific input clock. This works only for a specific clock domain rather than the full system.

### System Jitter (SYSTEM\_JITTER) VHDL Syntax

```
attribute SYSTEM_JITTER: string;
attribute SYSTEM_JITTER of
{component_name|signal_name|entity_name|label_name}:
{component|signal|entity|label} is "value ps";
```

where

- **value** is a numerical value. The default is **ps**.

### System Jitter (SYSTEM\_JITTER) VHDL Syntax Example

```
entity top_yann_mem is
port ( cntrl0_DDR2_DQ : inout std_logic_vector(71 downto 0);
      SYS_CLK_P : in std_logic;
      SYS_CLK_N : in std_logic;
      CLK200_P : in std_logic;
      CLK200_N : in std_logic
      );
attribute SYSTEM_JITTER : string;
attribute SYSTEM_JITTER of top_yann_mem: entity is "10 ps";
end entity;
```

### System Jitter (SYSTEM\_JITTER) Verilog Syntax

```
(* SYSTEM_JITTER = "value ps" *)
```

where

- **value** is a numerical value. The default is **ps**.

## System Jitter (SYSTEM\_JITTER) Verilog Syntax Example

```

module mig_22
(
  inout [7:0]  cntrl0_ddr2_dq,
  output [14:0] cntrl0_ddr2_a,
  input        sys_clk_p,
  input        sys_clk_n,
  input        clk200_p,
  input        clk200_n,
  input        sys_reset_in_n,
  inout [0:0]  cntrl0_ddr2_dqs
);
(*SYSTEM_JITTER = "10 ps"*)
wire clk_0; // The clk_0 is assigned with system_jitter of 10 ps
wire clk_90;
wire clk_200;
wire read_en;
reg sys_rst;
// source code
End module;

```

## System Jitter (SYSTEM\_JITTER) XCF Syntax

```
MODEL "entity_name" SYSTEM_JITTER = value ps;
```

## System Jitter (SYSTEM\_JITTER) XCF Syntax Example

```
MODEL "top_yann_mem" SYSTEM_JITTER = 10;
```

## Timing Ignore (TIG)

**Note:** Timing Ignore (TIG) applies to FPGA devices only. Timing Ignore (TIG) does not apply to CPLD devices.

Timing Ignore (TIG) is a basic timing constraint and a synthesis constraint. Timing Ignore (TIG) causes paths that fan forward from the point of application (of TIG) to be treated as if they do not exist (for the purposes of the timing model) during implementation. For more information, see [Chapter 3, Timing Constraint Principles](#).

## Timing Ignore (TIG) XCF Syntax

```

NET "net_name" TIG;
PIN "ff_inst.RST" TIG=TS_1;
INST "instance_name" TIG=TS_2;
TIG=TSidentifier1,..., TSidentifiern

```

where

- **identifier** refers to a timing specification that should be ignored

When attached to an instance, TIG is pushed to the output pins of that instance. When attached to a net, TIG pushes to the drive pin of the net. When attached to a pin, TIG applies to the pin.

## Timing Ignore (TIG) XCF Syntax Example

```
NET "main_?0/top_?0/ddr2_controller_?0/load_mode_reg*" TIG;
```

The following statement specifies that the timing specifications `TS_fast` and `TS_even_faster` are ignored on all paths fanning forward from the net `RESET`.

```
NET "RESET" TIG=TS_fast, TS_even_faster;
```

## Time Group (TIMEGRP)

Time Group (TIMEGRP) is a basic grouping constraint. In addition to naming groups using the `TNM` identifier, you can also define groups in terms of other groups. You can place TIMEGRP constraints in a constraints file such as an XST Constraint File (XCF) or Netlist Constraints File (NCF). For more information, see [Chapter 3, Timing Constraint Principles](#).

### Time Group (TIMEGRP) XCF Syntax

```
TIMEGRP newgroup = existing_grp1 existing_grp2 [existing_grp3 ...];
```

where

- **newgroup** is a newly created group that consists of existing groups created by means of `TNM` constraints, predefined groups or other TIMEGRP attributes

### Time Group (TIMEGRP) XCF Syntax Example

```
TIMEGRP Top_Group = GroupA GroupB GroupC;
```

## Timing Specifications (TIMESPEC)

Timing Specifications (TIMESPEC) is a basic timing related constraint. Timing Specifications (TIMESPEC) serves as a placeholder for timing specifications, which are called `TS` attribute definitions. A `TS` attribute defines the allowable delay for paths in your design. Every `TS` attribute begins with the letters **TS** and ends with a unique identifier that can consist of letters, numbers, or the underscore character (`_`).

**Note:** The number of Timing Specifications constraints that you use in your design can significantly impact runtime.

### Timing Specifications (TIMESPEC) XCF Syntax

```
TIMESPEC "TSidentifier"=PERIOD "timegroup_name" value [units];
```

```
TIMESPEC "TSidentifier"=FROM "source_group" TO "dest_group" value units;
```

where

- **TSidentifier** is a unique name for the **TS** attribute
- **value** is a numerical value. It defines the maximum delay for the attribute. Nanoseconds are the default units for specifying delay time in **TS** attributes. You can also specify delay with other units, such as picoseconds or megahertz.
- **units** can be **ms**, **micro**, **ps**, **ns**

Keywords, such as `FROM`, `TO`, and `TS`, appear in the documentation in upper case. However, you can specify them in the TIMESPEC primitive in either upper or lower case.

## Timing Specifications (TIMESPEC) XCF Syntax Examples

- [Defining a Maximum Allowable Delay Timing Specifications \(TIMESPEC\) XCF Syntax Example](#)
- [Defining a Clock Period XCF Syntax Example](#)
- [Specifying Derived Clocks XCF Syntax Example](#)
- [Ignoring Paths XCF Syntax Example](#)

### Defining a Maximum Allowable Delay Timing Specifications (TIMESPEC) XCF Syntax Example

```
TIMESPEC "TSidentifier"=FROM "source_group" TO "dest_group" allowable_delay [units];
```

### Defining a Clock Period XCF Syntax Example

Defining a clock period allows more complex derivative relationships to be defined as well as a simple clock period.

```
TIMESPEC "TSidentifier"=PERIOD "TNM_reference" value [units] [{HIGH | LOW}
[high_or_low_time [hi_lo_units]]] INPUT_JITTER value;
```

where

- **identifier** is a reference identifier with a unique name
- **TNM\_reference** is the identifier name attached to a clock net (or a net in the clock path) using a TNM constraint
- **value** is the required clock period
- **units** is an optional field to indicate the units for the allowable delay. The default units are nanoseconds (**ns**), but the timing number can be followed by **micro**, **ms**, **ps**, **ns**, **GHz**, **MHz**, or **kHz** to indicate the intended units
- **HIGH** or **LOW** can be optionally specified to indicate whether the first pulse is to be High or Low
- **high\_or\_low\_time** is the optional High or Low time, depending on the preceding keyword. If an actual time is specified, it must be less than the period. If no High or Low time is specified, the default duty cycle is 50 percent.
- **hi\_lo\_units** is an optional field to indicate the units for the duty cycle. The default is nanoseconds (**ns**), but the High or Low time number can be followed by **ps**, **micro**, **ms**, **ns** or **%** if the High or Low time is an actual time measurement.

### Specifying Derived Clocks XCF Syntax Example

```
TIMESPEC "TSidentifier"=PERIOD "TNM_reference" "another_PERIOD_identifier" [/ | *] number
[{HIGH | LOW} [high_or_low_time [hi_lo_units]]] INPUT_JITTER value;
```

where

- **TNM\_reference** is the identifier name attached to a clock net (or a net in the clock path) using a TNM constraint
- **another\_PERIOD\_identifier** is the name of the identifier used on another period specification
- **number** is a floating point number
- **HIGH** or **LOW** can be optionally specified to indicate whether the first pulse is to be High or Low

- **high\_or\_low\_time** is the optional High or Low time, depending on the preceding keyword. If an actual time is specified, it must be less than the period. If no High or Low time is specified, the default duty cycle is 50 percent.
- **hi\_lo\_units** is an optional field to indicate the units for the duty cycle. The default is nanoseconds (**ns**), but the High or Low time number can be followed by **ps**, **micro**, **ms**, or **%** if the High or Low time is an actual time measurement.

## Ignoring Paths XCF Syntax Example

**Note:** This form is not supported for CPLD devices.

There are situations in which a path that exercises a certain net should be ignored because all paths through the net, instance, or instance pin are not important from a timing specification point of view.

```
TIMESPEC "TSidentifier"=FROM "source_group" TO "dest_group" TIG;
```

where

- **identifier** is an ASCII string made up of the characters A-Z, a-z 0-9, and \_
- **source\_group** and **dest\_group** are user-defined or predefined groups

The following statement says that the timing specification TS\_35 calls for a maximum allowable delay of 50 ns between the groups **here** and **there**.

```
TIMESPEC "TS_35"=FROM "here" TO "there" 50;
```

The following statement says that the timing specification TS\_70 calls for a 25 ns clock period for clock\_a, with the first pulse being High for a duration of 15 ns.

```
TIMESPEC "TS_70"=PERIOD "clock_a" 25 high 15;
```

## Timing Name (TNM)

Timing Name (TNM) is a basic grouping constraint. Use TNM to identify the elements that make up a group which you can then use in a timing specification. TNM tags specific predefined groups as members of a group to simplify the application of timing specifications to the group.

The RISING and FALLING keywords may also be used with TNMs. For more information, see [Chapter 3, Timing Constraint Principles](#).

## Timing Name (TNM) XCF Syntax

```
{NET|INST|PIN} "net_or_pin_or_inst_name" TNM=[predefined_group] identifier;
```

where

- **predefined\_group** can be all the members or a subset of a predefined group using the keywords FFS, RAMS, LATCHES, PADS, CPUS, HSIOS, BRAMS\_PORTA, BRAMS\_PORTB, DSPS, and MULTS
- **identifier** can be any combination of letters, numbers, or underscores.

## Timing Name (TNM) XCF Syntax Example

```
NET clk TNM = FFS (my_flop) Grp1;
INST clk TNM = FFS (my_macro) Grp2;
```

## Timing Name Net (TNM\_NET)

Timing Name Net(TNM\_NET) identifies the elements that make up a group, which can then be used in a timing specification. TNM\_NET is essentially equivalent to TNM on a net except for input pad nets. For more information, see [Chapter 3, Timing Constraint Principles](#).

### Timing Name Net (TNM\_NET) XCF Syntax

```
{NET|INST} "net_name" TNM_NET= [predefined_group] identifier;
```

where

- **predefined\_group** can be all the members of a predefined group using the keywords FFS, RAMS, PADS, MULTS, HSIOs, CPUS, DSPS, BRAMS\_PORTA, BRAMS\_PORTB or LATCHES. A subset of elements in a **predefined\_group** can be defined as follows:
  - **predefined\_group (name\_qualifier1... name\_qualifiern)**
  - **-name\_qualifiern** can be any combination of letters, numbers, or underscores. The **name\_qualifier** type (net or instance) is based on the element type that TNM\_NET is placed on. If the TNM\_NET is on a NET, the name\_qualifier is a net name. If the TNM\_NET is an instance (INST), the name\_qualifier is an instance name.
- **identifier** can be any combination of letters, numbers, or underscores  
The identifier cannot be any the following reserved words: FFS, RAMS, LATCHES, PADS, CPUS, HSIOs, MULTS, RISING, FALLING, TRANSHI, TRANSLO, or EXCEPT.

XST supports TNM\_NET with the limitation that only a single pattern is supported for predefined groups.

Table 4-1: TNM\_NET Support Limitations

<b>Supported</b>	NET "PADCLK" TNM_NET=FFS "GRP1"; #
<b>Not supported</b>	NET "PADCLK" TNM_NET = FFS(machine/*:xcounter/*) TG1; #

### Timing Name Net (TNM\_NET) XCF Syntax Example

```
NET clk TNM_NET = FFS (my_flop) Grp1;
INST clk TNM_NET = FFS (my_macro) Grp2;
```

# Chapter 5

## Specifying Timing Constraints in Synplify

This chapter discusses how to specify timing constraints in:

- Hardware Description Language (HDL) code
- An SDC (Tcl) file
- A SCOPE spreadsheet

For information on how to specify timing constraints for the Xilinx® Synthesis Tool (XST), see [Chapter 4, Specifying Timing Constraints in XST](#).

The sections below give syntax examples for individual Xilinx timing constraints in VHDL and Verilog. For more information, see the Xilinx *Synthesis and Simulation Design Guide* and the *Synopsys FPGA Synthesis Reference Manual*.

### Synplify Timing Constraints

You can specify timing constraints by using one of the following methods:

- Write source code attributes or directives  
You must enter black box timing directives in the source code. Do not include any other timing constraints in the source code. The source code becomes less portable, and you must recompile the design for the constraints to take effect. You can also enter attributes through the SCOPE interface, but you must use source code for directives.
- Write Tcl commands in an .sdc file.  
You can create the .sdc file manually in a text editor. Use the SCOPE spreadsheet to generate the constraint syntax.
- Use a SCOPE spreadsheet.  
The SCOPE (Synthesis Constraints Optimization Environment®) spreadsheet can automatically generate constraint files in Tcl format. Use this method for specifying constraints wherever possible. You can use it for most constraints, except for source code directives.

If there are multiple timing exception constraints on the same object, the synthesis tool uses the guidelines described in "Conflict Resolution for Timing Exceptions" in the *Synopsys FPGA Synthesis Reference Manual*, to determine which constraint takes precedence.

Table 5-1, [Constraint Types for Each Timing Constraint Entry in Synplify](#), lists the timing constraints and related commands in alphabetical order, according to the methods used to enter them. The timing constraints for HDL are all directives.

Table 5-1: **Constraint Types for Each Timing Constraint Entry in Synplify**

HDL	Tcl (.sdc File)	SCOPE
<a href="#">black_box_tri_pins</a>		
	<a href="#">define_clock</a>	Clocks Panel
	<a href="#">define_clock_delay</a>	Clock to Clock Panel
	<a href="#">define_compile_point</a>	Compile Points Panel
	<a href="#">define_current_design</a>	
	<a href="#">define_false_path</a>	False Paths Panel
	<a href="#">define_input_delay</a>	Inputs/Outputs Panel
	<a href="#">define_io_standard</a>	I/O Standard Panel
	<a href="#">define_multicycle_path</a>	Multicycle Paths Panel
	<a href="#">define_output_delay</a>	Inputs/Outputs Panel
	<a href="#">define_path_delay</a>	Max Delay Paths Panel
	<a href="#">define_reg_input_delay</a>	Registers Panel
	<a href="#">define_reg_output_delay</a>	Registers Panel
<a href="#">syn_force_seq_prim</a> *		
<a href="#">syn_gatedclk_clock_en</a> *		
<a href="#">syn_gatedclk_clock_en_polarity</a> *		
<a href="#">syn_isclock</a>		
<a href="#">syn_tpdn</a>		
<a href="#">syn_tcon</a>		
<a href="#">syn_tsun</a>		

\* This constraint is available in Synplify Pro and Synplify Premier only.



## Specifying Timing Constraints in HDL

The following sections list each type of HDL timing constraints in detail.

- [black\\_box\\_pad\\_pin](#)
- [black\\_box\\_tri\\_pins](#)
- [syn\\_force\\_seq\\_prim](#)
- [syn\\_gatedclk\\_clock\\_en](#)
- [syn\\_gatedclk\\_clock\\_en\\_polarity](#)
- [syn\\_isclock](#)
- [syn\\_tpdn](#)
- [syn\\_tcon](#)
- [syn\\_tsun](#)

### black\_box\_pad\_pin

The **black\_box\_pad\_pin** directive specifies pins on a user-defined black box component as I/O pads visible to the environment outside the black box.

If more than one port is an I/O pad, list the ports:

- Inside double-quotes separated by commas
- Without enclosed spaces

### black\_box\_pad\_pin Verilog Syntax

```
object /* synthesis syn_black_box black_box_pad_pin = "portList" */ ;  
where
```

- **portList** is a spaceless, comma-separated list of the names of the ports on black boxes that are I/O pads.

### black\_box\_pad\_pin Verilog Syntax Example

```
module BBDLHS(D,E,GIN,GOUT,PAD,Q)  
/* synthesis syn_black_box black_box_pad_pin="GIN[2:0],Q" */;
```

### black\_box\_pad\_pin VHDL Syntax

```
attribute black_box_pad_pin of object : objectType is "portList" ;  
where
```

- **object** is an architecture or component declaration of a black box. Data type is string.
- **portList** is a spaceless, comma-separated list of the black box port names that are I/O pads.

### black\_box\_pad\_pin VHDL Syntax Example

```
library ieee;  
use ieee.std_logic_1164.all;  
package my_components is  
component BBDLHS
```

```

port (D: in std_logic;
      E: in std_logic;
      GIN : in std_logic_vector(2 downto 0);
      Q : out std_logic );
end component;
attribute syn_black_box : boolean;
attribute syn_black_box of BBDLHS : component is true;
attribute black_box_pad_pin : string;
attribute black_box_pad_pin of BBDLHS : component is "GIN(2:0),Q";
end package my_components;

```

## black\_box\_tri\_pins

The **black\_box\_tri\_pins** directive specifies that an output port on a component defined as a black box is a tristate. The **black\_box\_tri\_pins** directive eliminates multiple driver errors when the output of a black box has more than one driver. A multiple driver error is issued unless you use the **black\_box\_tri\_pins** directive to specify that the outputs are tristates.

If there is more than one port that is a tristate, list the ports:

- Inside double-quotes separated by commas
- Without enclosed spaces

## black\_box\_tri\_pins Verilog Syntax

```

object /* synthesis syn_black_box black_box_tri_pins = "portList" */ ;
where

```

- **portList** is a spaceless, comma-separated list of multiple pins.

## black\_box\_tri\_pins Verilog Syntax Example

Following is a **black\_box\_tri\_pins** Verilog syntax example with a single port name.

```

module BBDLHS(D,E,GIN,GOUT,PAD,Q)
/* synthesis syn_black_box black_box_tri_pins="PAD" */;
Here is an example with a list of multiple pins:
module bbl(D,E,tri1,tri2,tri3,Q)
/* synthesis syn_black_box black_box_tri_pins="tri1,tri2,tri3" */;
For a bus, specify the port name followed by all the bits on the bus:
module bbl(D,bus1,E,GIN,GOUT,Q)
/* synthesis syn_black_box black_box_tri_pins="bus1[7:0]" */;

```

## black\_box\_tri\_pins VHDL Syntax

```

attribute black_box_tri_pins of object : objectType is "portList" ;
where

```

- **object** is a component declaration or architecture. Data type is string.
- **portList** is a spaceless, comma-separated list of the tristate output port names

## black\_box\_tri\_pins VHDL Syntax Example

```

library ieee;
use ieee.std_logic_1164.all;
package my_components is

```

```

component BBDLHS
port (D: in std_logic;
E: in std_logic;
GIN : in std_logic;
GOUT : in std_logic;
PAD : inout std_logic;
Q: out std_logic );
end component;
attribute syn_black_box : boolean;
attribute syn_black_box of BBDLHS : component is true;
attribute black_box_tri_pins : string;
attribute black_box_tri_pins of BBDLHS : component is "PAD";
end package my_components;

```

Multiple pins on the same component can be specified as a list:

```
attribute black_box_tri_pins of bbl : component is "tri,tri2,tri3";
```

To apply this directive to a port that is a bus, specify all the bits on the bus:

```
attribute black_box_tri_pins of bbl : component is "bus1[7:0]";
```

## syn\_force\_seq\_prim

The **syn\_force\_seq\_prim** directive indicates that gated clocks should be fixed for this black box, and the fix gated clocks algorithm can be applied to the associated primitive. The **syn\_force\_seq\_prim** directive is available only in Synplify Pro and Synplify Premier.

To use the **syn\_force\_seq\_prim** directive with a black box, you must also identify the clock signal with the **syn\_isclock** directive and the enable signal with the **syn\_gatedclk\_clock\_en** directive. The data type is Boolean.

### syn\_force\_seq\_prim Verilog Syntax

```
object /* synthesis syn_force_seq_prim = 1 */ ;
```

where

- **object** is the module name of the black box

### syn\_force\_seq\_prim Verilog Syntax Example

```

module bbe (ena, clk, data_in, data_out)
/* synthesis syn_black_box */
/* synthesis syn_force_seq_prim=1 */ ;
input clk /* synthesis syn_isclock = 1 */
/* synthesis syn_gatedclk_clock_en="ena" */;
input data_in,ena;
output data_out;
endmodule

```

### syn\_force\_seq\_prim VHDL Syntax

```
attribute syn_force_seq_prim of object: objectType is true ;
```

where

- **object** is the entity name of the black box.

## syn\_force\_seq\_prim VHDL Syntax Example

```

library ieee;
use ieee.std_logic_1164.all;
entity bbram is
port (addr: IN std_logic_VECTOR(6 downto 0);
din: IN std_logic_VECTOR(7 downto 0);
dout: OUT std_logic_VECTOR(7 downto 0);
clk: IN std_logic;
en: IN std_logic;
we: IN std_logic);
attribute syn_black_box : boolean ;
attribute syn_black_box of bbram : entity is true ;
attribute syn_isclock : boolean;
attribute syn_isclock of clk: signal is true;
attribute syn_gatedclk_clock_en : string;
attribute syn_gatedclk_clock_en of clk : signal is "en";
end entity bbram;
architecture bb of bbram is
attribute syn_force_seq_prim : boolean;
attribute syn_force_seq_prim of bb : architecture is true;
begin
end architecture bb;

```

## syn\_gatedclk\_clock\_en

The **syn\_gatedclk\_clock\_en** directive specifies the enable pin to be used in fixing the gated clocks. To use the **syn\_gatedclk\_clock\_en** directive with a black box, you must also identify the clock signal with the **syn\_isclock** directive and indicate that the fix gated clocks algorithm can be applied with the **syn\_force\_seq\_prim** directive. The data type is String.

## syn\_gatedclk\_clock\_en Verilog Syntax

```
object /* synthesis syn_gatedclk_clock_en = "value" */ ;
```

where

- **object** is the module name
- **value** is the name of the enable pin

## syn\_gatedclk\_clock\_en Verilog Syntax Example

```

module bbe (ena, clk, data_in, data_out)
/* synthesis syn_black_box */
/* synthesis syn_force_seq_prim=1 */;
input clk
/* synthesis syn_isclock = 1 */
/* synthesis syn_gatedclk_clock_en="ena" */;
input data_in, ena;
output data_out;
endmodule

```

## syn\_gatedclk\_clock\_en VHDL Syntax

```
attribute syn_gatedclk_clock_en of object: objectType is value ;
```

where

- **object** is the entity name of the black box

## syn\_gatedclk\_clock\_en VHDL Syntax Example

```
architecture top of top is component bbram
port (myclk : in bit;
opcode : in bit_vector(2 downto 0);
a, b : in bit_vector(7 downto 0);
rambus : out bit_vector(7 downto 0) );
end component;
attribute syn_black_box : boolean;
attribute syn_black_box of bbram: component is true;
attribute syn_force_seq_prim : boolean
attribute syn_force_seq_prim of bbram: component is true;
attribute syn_isclock : boolean;
attribute syn_isclock of myclk: signal is true;
attribute syn_gatedclk_clock_en : string;
attribute syn_gatedclk_clock_en of bbram: signal is "ena
//Other code
```

## syn\_gatedclk\_clock\_en\_polarity

The **syn\_gatedclk\_clock\_en\_polarity** directive indicates the polarity of the clock enable port on a black box. This allows the synthesis tool to apply the algorithm to fix gated clocks. If you do not set any polarity with this attribute, the synthesis tool assumes a positive polarity by default.

## syn\_gatedclk\_clock\_en\_polarity Verilog Syntax

```
object /* synthesis syn_gatedclk_clock_en_polarity = 1 | 0 */ ;
```

where

- **object** is the module name of the black box.

The value can be 1 or 0. A value of 1 indicates positive polarity of the enable signal (active high) and a value of 0 indicates negative polarity (active low). If the attribute is not defined, the synthesis tool assumes a positive polarity by default.

## syn\_gatedclk\_clock\_en\_polarity Verilog Syntax Example

```
module bbel (ena, clk, data_in, data_out)
/* synthesis syn_black_box */
/* synthesis syn_force_seq_prim=1 */;
input clk /* synthesis syn_isclock = 1 */
/* synthesis syn_gatedclk_clock_en="ena" */
/* synthesis syn_gatedclk_clock_en_polarity = 0 */;
input data_in,ena;
output data_out;
endmodule
```

## syn\_gatedclk\_clock\_en\_polarity VHDL Syntax

```
attribute syn_gatedclk_clock_en_polarity of object: objectType is true
| false;
```

## syn\_gatedclk\_clock\_en\_polarity VHDL Syntax Example

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_arith.all;
use ieee.std_logic_unsigned.all;
entity bbel is
port (ena : in std_logic;
      clk : in std_logic;
      data_in : in std_logic;
      data_out : out std_logic );
attribute syn_black_box : boolean;
attribute syn_force_seq_prim : boolean;
attribute syn_gatedclk_clock_en_polarity : boolean;
attribute syn_gatedclk_clock_en_polarity of clk: signal is false;
attribute syn_gatedclk_clock_en : string;
attribute syn_isclock : boolean;
attribute syn_isclock of clk : signal is true;
attribute syn_gatedclk_clock_en of clk: signal is "ena";
attribute syn_force_seq_prim of clk: signal is true ;
end bbel;
architecture arch_bbel of bbel is
attribute syn_black_box : boolean;
attribute syn_black_box of arch_bbel: architecture is true;
attribute syn_force_seq_prim of arch_bbel: architecture is true;
begin
end arch_bbel;
```

## syn\_isclock

The **syn\_isclock** directive specifies an input port on a black box as a clock. Use the **syn\_isclock** directive to specify that an input port on a black box is a clock, even though its name does not correspond to a recognized name. Using the **syn\_isclock** directive connects it to a clock buffer if appropriate. The data type is Boolean.

## syn\_isclock Verilog Syntax

```
object /* synthesis syn_isclock = 1 */ ;
```

where

- **object** is an input port on a black box

## syn\_isclock Verilog Syntax Example

```
module ram4 (myclk,out,opcode,a,b) /* synthesis syn_black_box */;
output [7:0] out;
input myclk /* synthesis syn_isclock = 1 */;
input [2:0] opcode;
input [7:0] a, b;
//Other code
```

## syn\_isclock VHDL Syntax

```
attribute syn_isclock of object: objectType is true ;
```

where

- **object** is a black box input port

## syn\_isclock VHDL Syntax Example

```
library synplify;
entity ram4 is
port (myclk : in bit;
opcode : in bit_vector(2 downto 0);
a, b : in bit_vector(7 downto 0);
rambus : out bit_vector(7 downto 0) );
attribute syn_isclock : boolean;
attribute syn_isclock of myclk: signal is true;
// Other code
```

## syn\_tpdn

The **syn\_tpdn** directive supplies information on timing propagation for combinational delay through a black box. The **syn\_tpdn** directive can be entered as an attribute using the Attribute panel of the SCOPE editor. The information in the object, attribute, and value fields must be manually entered.

## syn\_tpdn Verilog Syntax

```
object /* syn_tpdn = "bundle -> bundle = value" */ ;
```

where

- **bundle** is a collection of buses and scalar signals

To assign values to bundles, use the following syntax. The values are in **ns**.

```
"bundle -> bundle = value"
```

The objects of a bundle must be separated by commas with no intervening spaces. A valid bundle is A,B,C which lists three signals.

## syn\_tpdn Verilog Syntax Example

The following example defines **syn\_tpdn** along with other black box timing constraints:

```
module ram32x4(z,d,addr,we,clk); /* synthesis syn_black_box
syn_tpd1="addr[3:0]->z[3:0]=8.0"
syn_tsu1="addr[3:0]->clk=2.0"
syn_tsu2="we->clk=3.0" */
output [3:0] z;
input [3:0] d;
input [3:0] addr;
input we;
input clk;
endmodule
```

## syn\_tpdn VHDL Syntax

```
attribute syn_tpdn of object : objectType is "bundle -> bundle = value"
;
```

where

- **bundle** is a collection of buses and scalar signals.

To assign values to **bundle**, use the following syntax. The values are in **ns**.

```
"bundle -> bundle = value"
```

The objects of a **bundle** must be separated by commas with no spaces between. A valid bundle is A,B,C which lists three signals.

## syn\_tpdn VHDL Syntax Examples

In VHDL, there are ten predefined instances of each of these directives in the synplify library, for example:

```
syn_tpd1, syn_tpd2, syn_tpd3, ... syn_tpd10
```

If you are entering the timing directives in the source code and you require more than ten different timing delay values for any one of the directives, declare the additional directives with an integer greater than ten.

```
attribute syn_tpd11 : string;
attribute syn_tpd11 of bitreg : component is "di0,di1 -> do0,do1 = 2.0";
attribute syn_tpd12 : string;
attribute syn_tpd12 of bitreg : component is "di2,di3 -> do2,do3 = 1.8";
```

The following example assigns **syn\_tpdn** together with some of the black box constraints.

```
-- A USE clause for the Synplify Attributes package was included
-- earlier to make the timing constraint definitions visible here.
architecture top of top is
component rcfl6x4z
port (ad0, ad1, ad2, ad3 : in std_logic;
di0, di1, di2, di3 : in std_logic;
clk, wren, wpe : in std_logic;
tri : in std_logic;
do0, do1, do2, do3 : out std_logic );
end component;
attribute syn_tpd1 of rcfl6x4z : component is
"ad0,ad1,ad2,ad3 -> do0,do1,do2,do3 = 2.1";
attribute syn_tpd2 of rcfl6x4z : component is "tri -> do0,do1,do2,do3 = 2.0";
attribute syn_tsu1 of rcfl6x4z : component is "ad0,ad1,ad2,ad3 -> clk = 1.2";
attribute syn_tsu2 of rcfl6x4z : component is "wren,wpe -> clk = 0.0";
// Other code
```

## sdc File Syntax

```
define_attribute {v:blackboxModule} syn_tpdn { bundle -> bundle = value}
```

where

- **v**: indicates that the directive is attached to the view
- **blackboxModule** is the symbol name of the black-box
- **n** is a numerical suffix that lets you specify different input to output timing delays for multiple signals/bundles



- **bundle** is a collection of buses and scalar signals. The objects of a bundle must be separated by commas with no intervening spaces. A valid bundle is A, B, C, which lists three signals.
- **value** is input to output delay value in ns

### sdc File Syntax example

```
define_attribute {v:MEM} syn_tpd1 {MEM_RD->DATA_OUT[63:0]=20}
```

### syn\_tcon

The **syn\_tcon** directive supplies the clock to output timing delay through a black box. The **syn\_tcon** directive can be entered as an attribute using the Attribute panel of the SCOPE editor. The information in the object, attribute, and value fields must be manually entered.

### syn\_tcon Verilog Syntax

```
object /* syn_tcon = "[!]clock -> bundle = value" */ ;
```

where

- **bundle** is a collection of buses and scalar signals. To assign values to bundles, use the following syntax. The values are in **ns**.  
"[!]clock -> bundle = value"
- **!** is an optional exclamation mark indicating a negative edge for a clock. The objects of a bundle must be separated by commas with no spaces between. A valid bundle is A,B,C which lists three signals.

### syn\_tcon Verilog Syntax Example

Following is an example defining **syn\_tcon** with other black box constraints.

```
module ram32x4(z,d,addr,we,clk);
/* synthesis syn_black_box syn_tcon1="clk->z[3:0]=4.0"
syn_tpd1="addr[3:0]->z[3:0]=8.0"
syn_tsu1="addr[3:0]->clk=2.0"
syn_tsu2="we->clk=3.0" */
output [3:0] z;
input [3:0] d;
input [3:0] addr;
input we;
input clk;
endmodule
```

### syn\_tcon VHDL Syntax

```
attribute syn_tcon of object : objectType is "[!]clock -> bundle = value" ;
```

where

- **bundle** is a collection of buses and scalar signals. To assign values to **bundle**, use the following syntax. The values are in **ns**.  
"[!]clock -> bundle = value"

- **!** is an optional exclamation mark indicating a negative edge for a clock. The objects of a bundle must be separated by commas with no spaces between. A valid bundle is A,B,C which lists three signals.

In VHDL, there are ten predefined instances of each of these directives in the synplify library, for example:

```
syn_tco1, syn_tco2, syn_tco3, ... syn_tco10
```

If you are entering the timing directives in the source code and you require more than ten different timing delay values for any one of the directives, declare the additional directives with an integer greater than 10.

## syn\_tcon VHDL Syntax Examples

```
attribute syn_tco11 : string;
attribute syn_tco11 of bitreg : component is "clk -> do0,do1 = 2.0";
attribute syn_tco12 : string;
attribute syn_tco12 of bitreg : component is "clk -> do2,do3 = 1.8";
```

The following example assigns **syn\_tcon** along with other black box constraints.

```
-- A USE clause for the Synplify Attributes package
-- was included earlier to make the timing constraint
-- definitions visible here.
architecture top of top is
  component Dpram10240x8
  port (
    -- Port A
    ClkA, EnA, WeA: in std_logic;
    AddrA : in std_logic_vector(13 downto 0);
    DinA : in std_logic_vector(7 downto 0);
    DoutA : out std_logic_vector(7 downto 0);
    -- Port B
    ClkB, EnB: in std_logic;
    AddrB : in std_logic_vector(13 downto 0);
    DoutB : out std_logic_vector(7 downto 0) );
  end component;
  attribute syn_black_box : boolean;
  attribute syn_tsu1 : string;
  attribute syn_tsu2 : string;
  attribute syn_tco1 : string;
  attribute syn_tco2 : string;
  attribute syn_isclock : boolean;
  attribute syn_black_box of Dpram10240x8 : component is true;
  attribute syn_tsu1 of Dpram10240x8 : component is
    "EnA,WeA,AddrA,DinA -> ClkA = 3.0";
  attribute syn_tco1 of Dpram10240x8 : component is "ClkA -> DoutA[7:0] = 6.0";
  attribute syn_tsu2 of Dpram10240x8 : component is "EnB,AddrB -> ClkB = 3.0";
  attribute syn_tco2 of Dpram10240x8 : component is "ClkB -> DoutB[7:0] = 13.0";
  // Other code
```

## syn\_tcon sdc File Syntax

```
define_attribute {v:blackboxModule} syn_tcon { [!]clock -> bundle =
value}
```

where

- **v:** indicates that the directive is attached to the view
- **blackboxModule** is the symbol name of the black box
- **n** is a numerical suffix that lets you specify different clock to output timing delays for multiple signals/bundles
- **!** is an optional exclamation mark indicating that the clock is active on its falling (negative) edge
- **clock** is the name of the clock signal
- **bundle** is a collection of buses and scalar signals.  
The objects of a **bundle** must be separated by commas with no intervening spaces. A valid bundle is A, B, C, which lists three signals.
- **value** is the clock to output delay value in ns

## syn\_tcon sdc File Syntax Example

```
define_attribute {v:RCV_CORE} syn_tco1 {CLK-> R_DATA_OUT[63:0]=20}
define_attribute {v:RCV_CORE} syn_tco2 {CLK-> DATA_VALID=30<n>
```

## syn\_tsun

The **syn\_tsun** directive:

- Supplies information on timing setup delay required for input pins (relative to the clock) in a black box.
- Can be entered as an attribute using the Attribute panel of the SCOPE editor.

The information in the object, attribute, and value fields must be manually entered.

## syn\_tsun Verilog Syntax

```
object /* syn_tsun = "bundle -> [!]clock = value" */ ;
```

where

- **bundle** is a collection of buses and scalar signals  
To assign values to bundles, use the following syntax. The values are in **ns**.  
"bundle -> [!]clock = value"
- **!** is an optional exclamation mark indicating a negative edge for a clock.  
The objects of a bundle must be separated by commas with no spaces between. A valid bundle is A,B,C which lists three signals.

## syn\_tsun Verilog Syntax Example

The following example defines **syn\_tsun** together with other black box constraints:

```
module ram32x4(z,d,addr,we,clk);
/* synthesis syn_black_box syn_tpd1="addr[3:0]->z[3:0]=8.0"
syn_tsu1="addr[3:0]->clk=2.0" syn_tsu2="we->clk=3.0" */
output [3:0] z;
input [3:0] d;
input [3:0] addr;
input we;
input clk;
endmodule
```

## syn\_tsun VHDL Syntax

```
attribute syn_tsun of object : objectType is "bundle -> [!]  
clock = value" ;
```

In VHDL, there are ten predefined instances of each of these directives in the synplify library, for example:

```
syn_tsu1, syn_tsu2, syn_tsu3, ... syn_tsu10
```

If you are entering the timing directives in the source code and you require more than ten different timing delay values for any one of the directives, declare the additional directives with an integer greater than 10.

## syn\_tsun VHDL Syntax Examples

```
attribute syn_tsu11 : string;
attribute syn_tsu11 of bitreg : component is "di0,di1 -> clk = 2.0";
attribute syn_tsu12 : string;
attribute syn_tsu12 of bitreg : component is "di2,di3 -> clk = 1.8";
```

where

- **bundle** is a collection of buses and scalar signals.

To assign values to bundles, use the following syntax. The values are in **ns**.

```
"bundle -> [!]  
clock = value"
```

- **!** is an optional exclamation mark indicating a negative edge for a clock.

The objects of a bundle must be separated by commas with no spaces between. A valid bundle is A,B,C which lists three signals

In addition to the syntax used in the code above, you can also use the following Verilog-style syntax to specify this attribute:

```
attribute syn_tsu1 of inputfifo_coregen : component is "rd_clk->dout[48:0]=3.0";
```

The following example assigns **syn\_tsun** together with other black box constraints:

```
-- A USE clause for the Synplify Attributes package
-- was included earlier to make the timing constraint
-- definitions visible here.
architecture top of top is
  component rcfl6x4z
  port (ad0, ad1, ad2, ad3 : in std_logic;
        di0, di1, di2, di3 : in std_logic;
        clk, wren, wpe : in std_logic;
        tri : in std_logic;
        do0, do1, do2, do3 : out std_logic );
  end component;
  attribute syn_tcol of rcfl6x4z : component is
    "ad0,ad1,ad2,ad3 -> do0,do1,do2,do3 = 2.1";
  attribute syn_tpd2 of rcfl6x4z : component is "tri -> do0,do1,do2,do3 = 2.0";
  attribute syn_tsu1 of rcfl6x4z : component is "ad0,ad1,ad2,ad3 -> clk = 1.2";
  attribute syn_tsu2 of rcfl6x4z : component is "wren,wpe -> clk = 0.0";
  // Other code
```

## syn\_tsun sdc File Syntax

```
define_attribute {v:blackboxModule} syn_tsun { bundle -> [!]clock =
value}
```

where

- **v:** indicates that the directive is attached to the view
- **blackboxModule** is the symbol name of the black box
- **nA** is a numerical suffix that lets you specify different clock to output timing delays for multiple signals/bundles
- **!** is an optional exclamation mark indicating that the clock is active on its falling (negative) edge
- **clock** is the name of the clock signal
- **bundle** is a collection of buses and scalar signals.

The objects of a bundle must be separated by commas with no intervening spaces.  
A valid bundle is A,B,C, which lists three signals.

- **valueInput** is the clock setup delay value in **ns**

## syn\_tsun sdc File Syntax Example

```
define_attribute {v:RTRV_MOD} syn_tsu4 {RTRV_DATA[63:0]->!CLK=20}
```

## Specifying Timing Constraints in an SDC File (TCL)

Constraint files have an `.sdc` file extension. They can include timing constraints, general attributes, and vendor-specific attributes. You can manually create constraint files in a text editor using Tcl commands, but you typically use the SCOPE spreadsheet to generate the file automatically.

The following sections lists each type of Tcl timing constraints in detail.

- [define\\_clock](#)
- [define\\_clock\\_delay](#)
- [define\\_compile\\_point](#)
- [define\\_current\\_design](#)
- [define\\_false\\_path](#)
- [define\\_input\\_delay](#)
- [define\\_io\\_standard](#)
- [define\\_multicycle\\_path](#)
- [define\\_output\\_delay](#)
- [define\\_path\\_delay](#)
- [define\\_reg\\_input\\_delay](#)
- [define\\_reg\\_output\\_delay](#)

### define\_clock

The **define\_clock** constraint defines a clock with a specific duty cycle and frequency or clock period goal. You can have multiple clocks with different clock frequencies. Set the default frequency for all clocks with the **set\_option -frequency** Tcl command in the project file. If you do not specify a global frequency, the timing analyzer uses a default. Use the **define\_clock timing** constraint to override the default and specify unique clock frequency goals for specific clock signals. Additionally, you can use **define\_clock** to set the clock frequency for a clock signal output of clock divider logic. The clock name is the output signal name for the register instance.

### define\_clock Syntax

```
define_clock [ -disable ] [ -virtual ] {clockObject} [ -freq MHz | -period ns ] [ -clockgroup domain ] [ -rise value -fall value ] [ -route ns ] [ -name clockName ] [ -comment textString ]
```

where

- **disable** disables a previous clock constraint
- **virtual** specifies arrival and required times on top level ports that are enabled by clocks external to the chip (or block) that you are synthesizing.

When specifying **-name** for the virtual clock, the field can contain a unique name not associated with any port or instance in the design.

- **clockObject** is a required parameter that specifies the clock object name

Clocks can be defined on the following:

- Top-level input ports (p:)
- Nets (n:)
- Hierarchical ports (t:)
- Instances (i:)

For Xilinx technologies, specify the **define\_clock** constraint on an instance.

- Output pins of instantiated cells (t:)
- Internal pins of instantiated cells (t:)

Clocks defined on any of the following WILL NOT be honored:

- Top-level output ports
- Input pins of instantiated gates
- Pins of inferred instances
- **name** specifies a name for the clock if you want to use a name other than the clock object name. This alias name is used in the timing reports.
- **freq** defines the frequency of the clock in MHz. You can specify either **freq** or **period**, but not both.
- **period** specifies the period of the clock in ns. Specify either **period** or **freq**, but not both.
- **clockgroup** allows you to specify clock relationships

You assign related (synchronized) clocks to the same clock group and unrelated clocks in different groups. The synthesis tool calculates the relationship between clocks in the same clock group, and analyzes all paths between them. Paths between clocks in different groups are ignored (false paths).

- **rise/fall** specifies a non-default duty cycle

By default, the synthesis tool assumes that the clock is a 50% duty cycle clock, with the rising edge at 0 and the falling edge at period/2. If you have another duty clock cycle, specify the appropriate Rise At and Fall At values.

- **route** is an advanced user option that improves the path delays of all registers controlled by this clock

The value of **route** is the difference between the synthesis timing report path delays and the value in the Place and Route timing report. The **route** constraint applies globally to the clock domain, and can over constrain registers where constraints are not needed. Before you use this option, evaluate the path delays on individual registers in the optimization timing report and try to improve the delays by applying the constraints **define\_reg\_input\_delay** and **define\_reg\_output\_delay** only on the registers that need them.

## define\_clock Syntax Examples

In the following example, a clock is defined on the Q pins of instances **myInst1** and **myInst2**.

```
define_clock {CLK1} -period 10.0 -clockgroup default_clkgroup
define_clock {CLK3} -period 5.0 -clockgroup default_clkgroup -
uncertainty 0.2 -name INT_REF3
define_clock -virtual {CLK2} -period 20.0 -clockgroup g2
define_clock {CLK4} -period 20.000 -clockgroup g3 -rise 1.000 -fall
11.000 -ref_rise 0.000 -ref_fall 10.000
define_clock Pin-Level Constraint Examples
define_clock {i:myInst1.Q} -period 10.000 -clockgroup default -rise
0.200 -fall 5.200 -name myff1
define_clock {i:myInst2.Q} -period 12.000 -clockgroup default -rise
0.400 -fall 5.400 -name myff2
```

## define\_clock\_delay

The **define\_clock\_delay** command defines the delay between the clocks. By default, the synthesis tool automatically calculates clock delay based on the clock parameters you define with the **define\_clock** command. However, if you use **define\_clock\_delay**, the specified delay value overrides any calculations made by the synthesis tool. The results shown in the Clock Relationships section of the Timing Report are based on calculations made using this constraint.

### define\_clock\_delay Syntax

```
define_clock_delay [-rise|fall ] {clockName1} [-rise|fall ] {clockName2} delayValue
```

where

- **rise|fall** specifies the clock edge
- **clockName** specifies the clocks to constrain  
The clock must be already defined with **define\_clock**.
- **delayValue** specifies the delay, in nanoseconds, between the two clocks  
You can also specify a value false which defines the path as a false path.

### define\_clock\_delay Syntax Example

```
Define_clock_delay -rise {clk0} -rise {clk2x} 2
```

## define\_compile\_point

The **define\_compile\_point** command defines a compile point in a top-level constraint file. Use one **define\_compile\_point** command for each compile point you define.

**Note:** The **define\_compile\_point** command is available only for Synplify Pro and Synplify Premier.



## define\_compile\_point Syntax

```
define_compile_point [ -disable ] { regionName | moduleName } -type { locked }
[-cpfile { } ] [ -comment textString ]
```

where

- **disable** disables a previous compile point definition
- **type** specifies the type of compile point. This must be locked.
- **cpfile** is for Synplicity internal use only

## define\_compile\_point Syntax Example

```
define_compile_point {v:work.prgm_cntr} -type {locked}
```

## define\_current\_design

The **define\_current\_design** command:

- Specifies the compile-point region or module to which the constraints that follow it apply
- Must be the first command in a compile-point constraint file

**Note:** The **define\_current\_design** command is available only for Synplify Pro and Synplify Premier

## define\_current\_design Syntax

```
define_current_design {regionName | libraryName.moduleName }
```

## define\_current\_design Syntax Example

```
define_current_design {lib1.prgm_cntr}
```

Objects in all constraints that follow this command relate to **prgm\_cntr**.

## define\_false\_path

The **define\_false\_path** constraint defines paths to ignore (remove) during timing analysis and give lower (or no) priority during optimization. The false paths are also passed on to supported place and route tools.

## define\_false\_path Syntax

```
define_false_path {-from startPoint | -to endPoint | -through throughPoint}
[-comment textString]
```

where

- **from** specifies the starting point for the false path

The **From** point defines a timing start point. It can be any of the following:

- Clocks (c:)
- Registers (i:)
- Top-level input or bi-directional ports (p:)
- Black box outputs (i:)

For more information, see the *Synplify User's Guide*.

- **to** specifies the ending point for the false path  
The **to** point defines a timing end point. It can be any of the following:
  - Clocks (c:)
  - Registers (i:)
  - Top-level output or bi-directional ports (p:)
  - Black box inputs (i:)
- **through** specifies the intermediate points for the timing exception  
Intermediate points can be any of the following:
  - Combinational nets (n:)
  - Hierarchical ports (t:)
  - Pins on instantiated cells (t:)

By default, the **through** points are treated as an OR list. The constraint is applied if the path crosses any points in the list.

To keep the signal name intact through synthesis, set the **syn\_keep directive** (Verilog or VHDL) on the signal.

### define\_false\_path Syntax Example

The following example shows the syntax for setting **define\_false\_path** between registers:

```
define_false_path -from {i:myInst1_reg} -through {n:myInst2_net}
                 -to {i:myInst3_reg}
```

The constraint is defined from the output pin of **myInst1\_reg**, through **net myInst2\_net**, to the input of **myInst3\_reg**. If an instance is instantiated, a pin-level constraint applies on the pin, as defined. However, if an instance is inferred, the pin-level constraint is transferred to the instance.

For **through** points specified on pins, the constraint is transferred to the connecting net. You cannot define a **through** point on a pin of an instance that has multiple outputs. When specifying a pin on a vector of instances, you cannot refer to more than one bit of that vector.

### define\_input\_delay

The **define\_input\_delay** constraint:

- Specifies the external input delays on top-level ports in the design. It is the delay outside the chip before the signal arrives at the input pin.
- Is used to model the interface of the inputs of the FPGA device with the outside environment. The synthesis tool cannot detect the input delay unless you specify it in a timing constraint.

## define\_input\_delay Syntax

```
define_input_delay [ -disable ] { inputportName } | -default ns [ -route
ns ]
[ -ref clockName:edge ] [ -comment textString ]
```

where

- **disable** disables a previous delay specification on the named port
- **inputportName** is the name of the input port
- **default** sets a default input delay for all inputs.

Use this option to set an input delay for all inputs. You can then set **define\_input\_delay** on individual inputs to override the default constraint.

This example sets a default input delay of 3.0 ns:

```
define_input_delay -default 3.0
```

This example overrides the default and sets the delay on **input\_a** to 10.0 ns:

```
define_input_delay {input_a} 10.0
```

- **ref** (recommended) is the clock name and edge that triggers the event

The value must include either the rising edge or falling edge.

- **r**  
rising edge
- **f**  
falling edge

For example:

```
define_input_delay {portb[7:0]} 10.00 -ref clock2:f
```

- **route** is an advanced option that includes route delay when the synthesis tool tries to meet the clock frequency goal

Use the **-route** option on an input port when the place and route timing report shows that the timing goal is not met because of long paths through the input port.

## define\_input\_delay Syntax Examples

```
define_input_delay {porta[7:0]} 7.8 -ref clk1:r
define_input_delay -default 8.0
define_input_delay -disable {resetn}
```

## define\_io\_standard

The **define\_io\_standard** constraint specifies a standard I/O pad type to use for specific Actel, Altera, and Xilinx device families.

## define\_io\_standard Syntax

```
define_io_standard [-disable|-enable] {objectName} -delay_type
input_delay|output_delay columnTclName{value}
[columnTclName{value}...]
```

where

- **delay\_type** is either **input\_delay** or **output\_delay**

## define\_io\_standard Syntax Example

```
define_io_standard {DATA1[7:0]} -delay_type input_delay
syn_pad_type{LVCMOS_33} syn_io_slew{high} syn_io_drive{12}
syn_io_termination{pulldown}
```

## define\_multicycle\_path

The **define\_multicycle\_path** constraint:

- Specifies a path that is a timing exception because it uses multiple clock cycles
- Provides extra clock cycles to the designated paths for timing analysis and optimization

## define\_multicycle\_path Syntax

```
define_multicycle_path [ -start | -end ] { -from startPoint | -to endPoint |
-through throughPoint }clockCycles [ -comment textString ]
```

where

- **start** | **end** specifies the clock cycles to use for paths with different start and end clocks.

This option determines the clock period to use as the multiplicand in the calculation for clock distance. If you do not specify a **start** or **end** option, the **end** clock is the default.

- **from** specifies the start point for the multi-cycle timing exception

The **from** point defines a timing start point. It can be any of the following:

- Clocks (c:)
- Registers (i:)
- Top-level input or bi-directional ports (p:)
- Black box outputs (i:)

- **to** specifies the end point for the multi-cycle timing exception

The **to** point defines a timing start point. It can be any of the following:

- Clocks (c:)
- Registers (i:)
- Top-level input or bi-directional ports (p:)
- Black box outputs (i:)

- **through** specifies the intermediate points for the timing exception

Intermediate points can be:

- Combinational nets (n:)
- Hierarchical ports (t:)
- Pins on instantiated cells (t:)

By default, the intermediate points are treated as an OR list. The exception is applied if the path crosses any points in the list. For more information, see [Specify From/To/Through Points](#).

You can combine this option with **-to** or **-from** to get a specific path. To keep the signal name intact throughout synthesis when you use this option, set the **syn\_keep directive** (Verilog or VHDL) on the signal.

- **clockCycles** is the number of clock cycles to use for the path constraint

Timing exception constraints must contain object types in the specification. Timing exceptions, such as multi-cycle path and false path constraints, require that you explicitly specify the object type (**n:** or **i:**) in the instance name parameter. For example:

```
define_multicycle_path -from {i:inst2.lowreg_output[7]} -to {i:inst1.DATA0[7]} 2
```

If you use SCOPE to specify timing exceptions, it automatically attaches object type qualifiers to the object names. For more information, see the *Synopsys FPGA Synthesis Reference Manual*.

## define\_multicycle\_path Syntax Examples

```
define_multicycle_path -from{i:regs.addr[4:0]} -to{i:special_regs.w[7:0]} 2
define_multicycle_path -to {i:special_regs.inst[11:0]} 2
define_multicycle_path -from {p:porta[7:0]} -through {n:prgmcntr.pc_sel44[0]} -to
{p:portc[7:0]} 2
define_multicycle_path -from {i:special_regs.trisc[7:0]} -through {t:uc_alu.aluz.Q} -
through {t:special_net.Q} 2
```

The following example shows the syntax for setting a multi-cycle path constraint between registers:

```
define_multicycle_path -from {i:myInst1_reg} -through {n:myInst2_net} -to {i:myInst3_reg} 2
```

The constraint is defined from the output of **myInst1\_reg**, through net **myInst2\_net**, to the input pin **myInst3\_reg**. If the instance is instantiated, a pin-level constraint applies on the pin, as defined. However, if the instance is inferred, the pin-level constraint is transferred to the instance.

For **through** points specified on pins, the constraint is transferred to the connecting net. You cannot define a **through** point on a pin of an instance that has multiple outputs. When specifying a pin on a vector of instances, you cannot refer to more than one bit of that vector.

## define\_output\_delay

The **define\_output\_delay** constraint:

- Specifies the delay of the logic outside the FPGA device driven by the top-level outputs.
- Models the interface of the outputs of the FPGA device with the outside environment.

The default delay outside the FPGA device is 0.0 **ns**. Output signals typically drive logic that exists outside the FPGA device, but the synthesis tool cannot detect the delay for that logic unless you specify it with a timing constraint.

## define\_output\_delay Syntax

```
define_output_delay [ -disable ] { outputportName } [-default ns [ -route ns ]
[ -ref clockName:edge ] [ -comment textString ]
```

where

- **disable** disables a previous delay specification on the named port
- **outputportName** is the name of the output port
- **default** sets a default input delay for all outputs

Use this option to set a delay for all outputs. You can then set

**define\_output\_delay** on individual outputs to override the default constraint. This example sets a default output delay of 8.0 ns. The delay is outside the FPGA device.

## define\_output\_delay Syntax Examples

```
define_output_delay -default 8.0
```

The following example overrides the default and sets the output delay on **output\_a** to 10.0 ns. Accordingly, **output\_a** drives 10 ns of combinational logic before the relevant clock edge.

```
define_output_delay {output_a} 10.0
```

where

- **ref** defines the clock name and edge that controls the event

The value must be one of the following:

- **r**  
rising edge
- **f**  
falling edge

For example:

```
define_output_delay {portb[7:0]} 10.00 -ref clock2:f.
```

- **route** is an advanced option that includes route delay when the synthesis tool tries to meet the clock frequency goal

## Output Pad Clock Domain Default

By default, **define\_output\_delay** constraints with no reference clock are constrained against the global frequency, instead of the start clock for the path to the port. The synthesis tool assumes the register and pad are not in the same clock domain. This change affects the timing report and timing driven optimizations on any logic between the register and the pad.

You must specify the clock domain for all output pads on which you have set output delay constraints. For the pads for which you do not specify a clock, add the **-ref** option to the **define\_output\_delay** constraint.

```
define_output_delay {LDCOMP} 0.50 -improve 0.00 -route 0.25 -ref {CLK1:r}
```

## define\_path\_delay

The **define\_path\_delay** constraint specifies point-to-point delay in nanoseconds (ns) for maximum and minimum delay constraints. You can specify the start, end, or through points using the **-from**, **-to**, or **-through** options or any combination of these options.

If you specify both **define\_path\_delay -max** and **define\_multicycle\_path** for the same path, the synthesis tool uses the more restrictive of the two constraints.

When you specify **define\_path\_delay** and you also define input or output delays, the synthesis tool adds the input or output delays to the path delay. The timing constraint that is forward-annotated includes the I/O delay with the path delay. This could result in discrepancies with the Xilinx place and route tool, which ignores the I/O delays and reports the path delay only.

### define\_path\_delay Syntax

```
define_path_delay [-disable] {-from {startPoint} | -to {endPoint} | -through {throughPoint}
-max delayValue [-comment textString ]
```

where

- **disable** disables the constraint
- **from** specifies the starting point of the path.

The **from** point defines a timing start point. It can be any of the following:

- Clocks (c:)
- Registers (i:)
- Top-level input or bi-directional ports (p:)
- Black box outputs (i:)
- **to** specifies the ending point of the path.

The **to** point must be a timing end point. It can be any of the following:

- clocks (c:)
- registers (i:)
- top-level output or bi-directional ports (p:)
- black box inputs (i:)

You can combine this option with **-from** or **-through** to get a specific path.

- **through** specifies the intermediate points for the timing exception.

Intermediate points can be:

- combinational nets (n:)
- hierarchical ports (t:)
- pins on instantiated cells (t:)

By default, the intermediate points are treated as an OR list. The exception is applied if the path crosses any points in the list. You can combine this option with **-to** or **-from** to get a specific path. To keep the signal name intact throughout synthesis when you use this option, set the **syn\_keep** directive (Verilog or VHDL) on the signal.

- **max** sets the maximum allowable delay for the specified path

This is an absolute value in nanoseconds (ns) and is shown as **max analysis** in the timing report.

## define\_path\_delay Syntax Examples

```
define_path_delay -from {i:dmux.alu [5]} -to {i:regs.mem_regfile_15[0]} -max 0.800
```

The following example sets a max delay of 2 **ns** on all paths to the falling edge of the flip-flops clocked by **clk1**.

```
define_path_delay -to {c:clk1:f} -max 2
```

The following example sets the path delay constraint on the pins between registers:

```
define_path_delay -from {i:myInst1_reg} -through {t:myInst2_net.Y}
-to {i:myInst3_reg} -max 0.123
```

The constraint is defined from the output pin of **myInst1**, through pin **Y** of net **myInst2**, to the input pin of **myInst3**. If the instance is instantiated, a pin-level constraint applies on the pin, as defined. If the instance is inferred, the pin level constraint is transferred to the instance.

For through points specified on pins, the constraint is transferred to the connecting net. You cannot define a through point on a pin of an instance that has multiple outputs.

When specifying a pin on a vector of instances, you cannot refer to more than one bit of that vector.

## define\_reg\_input\_delay

The **define\_reg\_input\_delay** constraint speeds up paths feeding a register by a given number of nanoseconds. The synthesis tool attempts to meet the global clock frequency goals for a design as well as the individual clock frequency goals (set with **define\_clock**). Use this constraint to speed up the paths feeding a register.

### define\_reg\_input\_delay Syntax

```
define_reg_input_delay { registerName } [ -route ns ] [ -comment textString ]
```

where

- **registerName** is:
  - a single bit
  - an entire bus, or
  - a slice of a bus
- **route** is an advanced user option to tighten constraints during resynthesis  
You can use **route** when the place and route timing report shows the timing goal is not met because of long paths to the register.

## define\_reg\_output\_delay

The **define\_reg\_output\_delay** constraint speeds up paths coming from a register by a given number of nanoseconds. The synthesis tool attempts to meet the global clock frequency goals for a design as well as the individual clock frequency goals (set with **define\_clock**). Use this constraint to speed up the paths coming from a register.



## define\_reg\_output\_delay Syntax

```
define_reg_output_delay { registerName } [ -route ns ] [ -comment textString ]
```

where

- **registerName** is:
  - A single bit
  - An entire bus, or
  - A slice of a bus
- **route** is an advanced user option to tighten constraints during resynthesis  
 You can use **route** when the place and route timing report shows the timing goal is not met because of long paths to the register.

## Specify From/To/Through Points

This section discusses:

- [From/To Points](#)
- [Through Points](#)
- [Clocks as From/To Points](#)

### From/To Points

**From** specifies the starting point for the timing exception. **To** specifies the ending point for the timing exception. See the following table.

Table 5-2: **Objects That Can Serve as Starting and Ending Points**

From Points	To Point
Clocks.	Clocks.
Registers	Registers
Top-level input or bi-directional ports	Top-level output or bi-directional ports
Instantiated library primitive cells (gate cells)	
Black box outputs	Black box inputs

You can specify multiple from points in a single exception. This is most common when specifying exceptions that apply to all the bits of a bus. For example, you can specify constraints **From A[0:15] to B**. In this case, there is an exception, starting at any of the bits of **A** and ending on **B**.

Similarly, you can specify multiple to points in a single exception, and specify both multiple starting points and multiple ending points such as **From A[0:15] to B[0:15]**.

## Through Points

Although **through** points are limited to nets, there are many ways to specify these constraints:

- [Single Through Point](#)
- [Single List of Through Points](#)
- [Multiple Through Points](#)
- [Multiple Lists of Through Points](#)

You can also define these constraints in the appropriate SCOPE panels, or in the Sum of Products interface.

When a port and a net have the same name, preface the name of the through point with:

- **n:**  
nets
- **t:**  
hierarchical ports
- **p:**  
top-level ports

For example:

```
n:regs_mem[2] or t:dmux.bdpol
```

The **n:** prefix must be specified to identify nets. Otherwise, the associated timing constraint is not be applied for valid nets.

### Single Through Point

You can specify a single through point.

```
define_false_path -through regs_mem[2]
```

In this example, the constraint is applied to any path that passes through:

- **regs\_mem[2]:**

### Single List of Through Points

If you specify a single list of through points, the **-through** option:

- Behaves as an **OR** function
- Applies to any path that passes through any of the points in the list.

```
define_path_delay -through {regs_mem[2], prgcntr.pc[7], dmux.alub[0]}  
-max 5 -min 1
```

In this example, the constraint is applied to any path through:

- **regs\_mem[2]**  
OR
- **prgcntr.pc[7]**  
OR
- **dmux.alub[0]**

## Multiple Through Points

To specify multiple points for the same constraint, precede each point with the **-through** option.

```
define_path_delay -through regs_mem[2] -through prgcntr.pc[7] -through dmux.alub[0] -max 5
-min 1
```

In this example, the constraint operates as an **AND** function and applies to paths through:

- **regs\_mem[2]**  
AND
- **prgcntr.pc[7]**  
AND
- **dmux.alub[0]**

## Multiple Lists of Through Points

If you specify multiple **-through** lists, the constraint:

- Behaves as an **AND/OR** function
- Is applied to the paths through all points in the lists

### Multiple Lists of Through Points Example One

```
define_false_path -through {A1 A2...An} -through {B1 B2 B3}
```

In this example the constraint applies to all paths that pass through:

- **{A1 or A2 or ...An}**  
AND
- **{B1 or B2 or B3}**

### Multiple Lists of Through Points Example Two

```
define_multicycle_path -through {net1, net2} -through {net3, net4} 2
```

In this example, all paths that pass through the following nets are constrained at 2 clock cycles:

```
net1 AND net3
OR net1 AND net4
OR net2 AND net3
OR net2 AND net4
```

## Clocks as From/To Points

You can specify clocks as **from-to** points in your timing exception constraints.

## Clocks as From/To Points Syntax

```
define_timing_exception -from | -to { c:clock_name [: edge] }
```

where

- **timing\_exception** is one of the following constraint types:
  - **multicycle\_path**
  - **false\_path**
  - **path\_delay**
- **c:clock\_name:edge** is the name of the clock and clock edge (**r** or **f**)

If you do not specify a clock edge, both edges are used by default.

## Multi-Cycle Path Clock Points

When you specify a clock as a **from** or **to** point, the multicycle path constraint applies to all registers clocked by the specified clock.

The following example allows two clock periods for all paths from the rising edge of the flip-flops clocked by **clk1**:

```
define_multicycle_path -from {c:clk1:r} 2
```

You cannot specify a clock as a **through** point. However, you can set a constraint **from** or **to** a clock and **through** an object:

- net
- pin
- hierarchical port

The following example allows two clock periods for all paths to the falling edge of the flip-flops clocked by **clk1** and **through** bit 9 of the hierarchical net:

```
define_multicycle_path -to {c:clk1:f} -through (n:MYINST.mybus2[9]) 2
```

## False Path Clock Points

When you specify a clock as a **from** or **to** point, the false path constraint is set on all registers clocked by the specified clock. The timing analyzer ignores all false paths.

The following example disables all paths from the rising edge of the flip-flops clocked by **clk1**:

```
define_false_path -from {c:clk1:r}
```

You cannot specify a clock as a **through** point. However, you can set a constraint **from** or **to** a clock and **through** an object:

- net
- pin
- hierarchical port

The following example disables all paths to the falling edge of the flipflops clocked by **clk1** and **through** bit 9 of the hierarchical net.

```
define_false_path -to {c:clk1:f} -through (n:MYINST.mybus2[9])
```

## Path Delay Clock Points

When you specify a clock as a **from** or **to** point for the path delay constraint, the constraint is set on all paths of the registers clocked by the specified clock.

The following example sets a max delay of 2 **ns** on all paths to the falling edge of the flip-flops clocked by **clk1**:

```
define_path_delay -to {c:clk1:f} -max 2
```

You cannot specify a clock as a **through** point. However, you can set a constraint **from** or **to** a clock and **through** an object:

- net
- pin
- hierarchical port

The following example sets a max delay of 0.2 **ns** on all paths from the rising edge of the flip-flops clocked by **clk1** and **through** bit 9 of the hierarchical net:

```
define_path_delay -from {c:clk1:r} -through (n:MYINST.mybus2[9]) -max .2
```

## Specifying Timing Constraints in a SCOPE Spreadsheet

The SCOPE (Synthesis Constraints Optimization Environment®) window is a spreadsheet-like interface for entering and managing timing constraints and synthesis attributes.

To create and open a new SCOPE dialog:

- Choose **File > New > Constraint file (SCOPE)** from the Project view,  
OR
- Click the SCOPE icon on the toolbar

For each of the TCL timing constraint type, there is an equivalent SCOPE spreadsheet interface. For more information, see the *Synplify User's Guide* (SCOPE and Timing Constraints > Scope Constraints).

## Forward Annotation

The synthesis tool generates vendor-specific constraint files that can be forwarded and annotated with the place and route tools. The constraint files are generated by default. To disable this feature, select the **Project > Implementation Option > Implementation Results > Write Vendor Constraint File** option. The constraint file generated for Xilinx place and route tools has an **ncf** file extension (**.ncf**).

The timing constraints described in the TCL and SCOPE sections are forward-annotated to Xilinx in this file. In addition to these constraints, the synthesis tool forward-annotates relationships between different clocks. See the following for more information:

- [I/O Timing Constraints](#)
- [Clock Groups](#)
- [Relaxing Forward-Annotated I/O Constraints](#)
- [Digital Clock Manager/Delay Locked Loop](#)

## I/O Timing Constraints

By default, the synthesis tool forward-annotates the **define\_input\_delay** and **define\_output\_delay** timing constraints to the Xilinx .ncf file. The **syn\_forward\_io\_constraints** attribute controls forward annotation.

A value of **1** or **true** (default) enables forward annotation. A value of **0** or **false** disables it.

Use this attribute at the top level of a VHDL or Verilog file, or use the Attributes panel of the SCOPE spreadsheet to add the attribute as a global object.

## Clock Groups

If two clocks are in the same clock group, the synthesis tool writes out the Xilinx .ncf file for forward-annotation so that one clock is a fraction of the other.

In the following example, **clk1** is derived as a fraction of **clk2**, which signals the place and route tool that the two clocks are part of the same clock group.

```
NET "clk2" TNM_NET = "clk2";
TIMESPEC "TS_clk2" = PERIOD "clk2" 10.000 ns HIGH 50.00%;
NET "clk1" TNM_NET = "clk1";
TIMESPEC "TS_clk1" = PERIOD "clk1" "TS_clk2" * 2.000000 HIGH 50.00%;
```

In the following example, the clocks are declared independently, so the place and route tool considers the clocks separately for timing calculation:

```
NET "clk2" TNM_NET = "clk2";
TIMESPEC "TS_clk2" = PERIOD "clk2" 10.000 ns HIGH 50.00%;
NET "clk1" TNM_NET = "clk1";
TIMESPEC "TS_clk1" = PERIOD "clk1" 20.000 ns HIGH 50.00%;
```

## Relaxing Forward-Annotated I/O Constraints

If the **xc\_use\_timespec\_for\_io** attribute is enabled (1), then I/O constraints are forward-annotated using the Xilinx **TIMESPEC FROM ... TO** command. In this case, there is no relaxation of the constraints. For more information, see the *Synopsys FPGA Synthesis Reference Manual*.

The synthesis tool constrains input-to-register, register-to-register and register-to-output paths with the **FREQUENCY** constraint. However, if the **PERIOD** constraint is too tight for the input-to-register or register-to-output paths, the synthesis tool tries to relax the constraints to these paths.

## Digital Clock Manager/Delay Locked Loop

The synthesis tool can take advantage of the Frequency Synthesis and Phase Shifting features of Digital Clock Manager (DCM) and Delay Locked Loop (DLL) for Xilinx devices.

If you are using a DLL or DCM for on-chip clock generation, you need only define the clock at the primary inputs. The synthesis tool propagates clocks through any number of DLLs or DCMs. It automatically generates clocks at the outputs of a DLL or DCM, as needed, taking into account any phase shift or frequency change.

To specify the phase shift and frequency multiplication parameters, use Xilinx standard properties such as:

- `duty_cycle_correction`
- `clkdv_divide`
- `clkfx_multiply`
- `clkfx_divide`

The synthesis tool also takes into account the fact that these clocks are related (synchronized) to each other, and puts them in the same clock group. However, only the clock at the input of a DLL/DCM is forward-annotated in the `.ncf` file. The back end tools understand the DLL and DCMs, and do their own clock propagation across them.





## Timing Constraint Analysis

Use the **trce** command to analyze timing constraints. You can run the **trce** command from Timing Analyzer or from the command line. The following sections show the analysis of the timing constraints.

The analysis of the timing constraint is done through Timing Analyzer or the **trce** command. This timing analysis provides a detailed path analysis of the timing path with regards to the timing constraint requirements. This timing analysis ensures that the specific timing constraints are passed through the implementation tools. The path specific details and includes the following:

- Confirms that the timing requirements were met for all path per constraint
- Confirms the setup and hold requirements were met for all path per constraint
- Confirms that the device component are performing within operational frequency limits
- Provides a list of unconstrained path that may be a critical path that was not analyzed

A traditional timing report contains the following sections:

1. Constraint Details – Path details per constraint
2. Data Sheet Section – General Setup, Hold, and Clock to Out times
3. Summary – Timing Errors/Score, Constraint Coverage, and Design Statistics

The path details are shown under each timing constraint, including the following:

1. Constraint header, which includes the path analyzed, endpoints analysis, failing endpoints, and timing errors detected.
2. Minimum Period/OFFSET IN
3. Setup Paths – Individual path with setup analysis with a specific slack equation
4. Hold Paths – Individual path with hold analysis with a specific slack equation
5. Component Switching Limits for PERIOD constraints with a specific slack equation

## PERIOD Constraints

This section discusses PERIOD Constraints and includes:

- [Gated Clocks](#)
- [Single Clock Domain](#)
- [Two-Phase Clock Domain](#)
- [Multiple Clock Domains](#)
- [Clocks from DCM outputs](#)
- [Clk0 Clock Domain](#)
- [Clk90 Clock Domain](#)
- [Clk2x Clock Domain](#)
- [CLKDV/CLKFX Clock Domain](#)

The analysis of synchronous to synchronous elements is done in the PERIOD analysis. The PERIOD constraint defines the timing relationship of the clock domains of the design. The analysis includes paths within a single clock domain and all path between related clock domains and related PERIOD constraints. This analysis also includes the frequency/period, phase, and uncertainty differences between the source and destination synchronous elements. The analysis also is done for a single clock domain and cross-clock domain paths.

The analysis for the PERIOD constraint includes a header summary. The header summary summarizes information about the constraint, including the number of paths and number of endpoints analyzed for the constraint, and any setup, hold, or component switching limit errors. This information allows you to verify that the constraint covered the expected number of endpoints and paths and the overall worst-case performance of this constraint.

The component switching limit analysis is done in addition to the traditional setup and hold analysis. This analysis ensures that the operating frequency of the device component is not exceeded and within device specifications. This timing analysis is done on the larger device components (such as DSP and BRAM), smaller device components (such as ILOGIC, OLOGIC, and SLICE), and the clocking components (such as DCM and PLL) in a constrained clock domain. The most common component switching limits are MINPERIOD, MINLOWPULSE, and MINHIGHPULSE, but some components do have MAXPERIOD, MAXLOWPULSE, and MAXHIGHPULSE.

The details for each path analyzed are shown after the header summary for the PERIOD constraint. Each path is a synchronous element to another synchronous element with either the setup or hold timing of the destination synchronous element. The initial paragraph of the path details the path header, which includes the overall slack of the path, the synchronous path performance, the source design synchronous element, the destination design synchronous element, the source and destination clock signal with the corresponding clock edge, the total data path delay, and any clock uncertainty. The slack equation and the clock uncertainty equations are also provided.

The second paragraph of the path details includes the data path details between the source synchronous element and the destination synchronous element. This includes the individual elements that make up this data path, which is the device resource utilized and net routing delays of the data path.

PERIOD constraints constrain those data paths from synchronous elements to synchronous elements. The most common examples are single clock domain, two-phase clock domain, and multiple clock domains. A timing report example is provided for each common type of path a PERIOD constraint may cover in your design.

## Gated Clocks

The PERIOD constraint does not analyze gated or internally derived clocks correctly. If the clock is gated or goes through a LUT (Look-Up-Table), the timing analysis traces back through each input of the LUT to the source (synchronous elements or pads) of the signals and reports the corresponding [Clock Skew](#).

**Note:** The result of a clock derived from a LUT is that the [Clock Skew](#) is very large, depending on the levels of logic or number of LUTs.

If the clock has been divided by using internal logic and not by a DCM, the PERIOD constraint on the clock pin of the "Divide down Flip Flop" does not trace through this flip-flop to the Clk\_div signal, as shown in the following figure.

**Note:** The timing analysis does not include the downstream synchronous elements, which are driven by the new gated-clock signal.

Unless a global buffer is used, the new clock derived from the **Divide down Flip-Flop** is on local routing. If a PERIOD constraint is placed on the output of the **Divide down Flip-Flop** (shown as the `clk_div` signal in the following figure) and is related back to the original PERIOD constraint, the timing analysis includes the downstream synchronous elements.

To ensure that the relationship and the cross-clock domain analysis is correct, the difference between the divided clock and the original clock needs to be included in the PERIOD constraint with the PHASE keyword. The [Clock Skew](#) can be large, depending on the relationship between the two clocks. Since the PHASE keyword defines the difference between the two clocks, this becomes the timing constraint requirement for the cross clock domain path analysis. If the PHASE keyword value is too small, it is impossible to meet the cross clock domain path analysis.

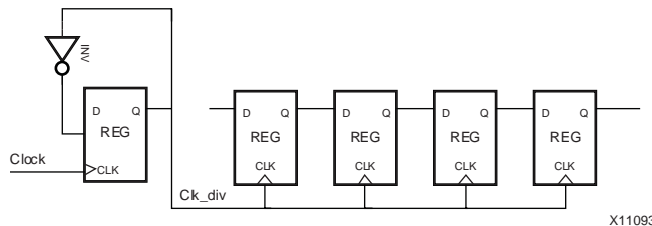


Figure 6-1: Gated Clock with Divide Down Flip Flop

## Single Clock Domain

A single clock domain is easy to understand and analyze. All the synchronous elements are on the same clock domain and are analyzed on the rising-edge of the clock or all elements are analyzed on the falling-edge of the clock. The clock source is driven by the same clock source, which can be a PAD or DCM/DLL/PLL/PMCD component with only one output.

**Note:** The timing analysis tool reports the active edges of the clock driver and the corresponding time for the data path between the synchronous elements.

A simple design is shown in the following figure. The PERIOD constraint is analyzed from the User Constraints File (UCF).

Xilinx Target - Figure 6-2

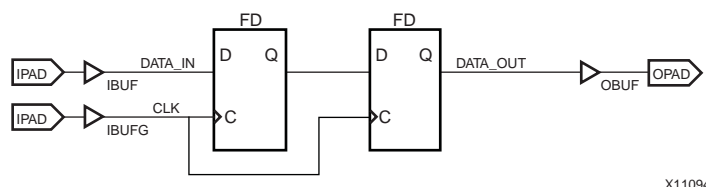


Figure 6-2: Single Clock Domain Schematic

### Timing Report Example

```
Slack (setup path): 3.904ns (requirement - (data path - clock path skew + uncertainty))
Source:                IntA_1 (FF)
Destination:           XorA_1 (FF)
Requirement:           8.000ns
Data Path Delay:       4.036ns (Levels of Logic = 1)
Clock Path Skew:       0.000ns
Source Clock:          clk0 rising at 0.000ns
Destination Clock:     clk0 rising at 8.000ns
Clock Uncertainty:     0.060ns
```

## Two-Phase Clock Domain

The analysis of a data path that uses both edges of the clock, as shown in the following figure, is known as a two-phase clock domain or two-phase data path. This clock can be driven by the same clock source, such as a PAD, DCM/DLL/PLL/PMCD component with only one output. These synchronous elements can also be driven by two related clocks, such as the CLK0 and CLK180 or CLK90 and CLK270 of a DCM/DLL/PLL/PMCD component.

Xilinx Target - Figure 6-3

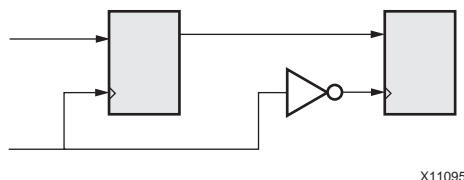


Figure 6-3: Two-Phase Clock


The timing analysis tool reports the active clock signal and the corresponding active clock arrival time for the source and destination synchronous element. The difference in clock arrival times for the source and destination synchronous elements determines the data path requirement. In a two-phase data path, the data path requirement is a fraction of the single-phase data path requirement, as shown in the following figure.

The timing analysis tool reports the data path details by the slack value. The slack value states the relationship between the data path requirement and the data path delays. The data paths are ordered based upon the slack value, with the largest negative values (falling) down to the largest positive values (passing).

**Note:** When the largest worst/negative slack value data path does not match the Minimum Period value, it is usually caused by the slack value of a two-phase data path not on the top of the list of data paths.

In the majority of the cases, the data path at the top of the list corresponds to the Minimum Period value. In some cases the two-phase data path will correspond to the Minimum Period value. In the two-phase data path situation, the timing analysis tools will determine the fractional relationship between the original single or full phase data path requirement and the two-phase data path requirement. This fractional value is used to convert the total data path delay of the two-phase data path back to a single or full phase data path delay equivalent. If the fractional relationship is determined to be half, then the two-phase data path delay will be doubled for the full phase data path delay equivalent. The Minimum Period value is only in full phase data path delay and not fractional data path delays.

Actual Target - Figure 6-4

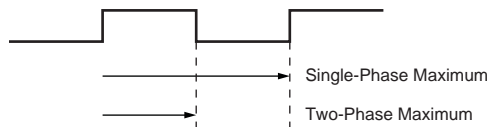

X11096

**Figure 6-4: Relationship Between Single-Phase and Two-Phase Clocks**

An example design with a Period constraint or full-phase data path requirement of 6ns has both full-phase and two-phase data paths. The full-phase data path has a total data path delay of 8ns, so the slack is "-2ns", and the two-phase data path has a total data path delay of 4.036ns, so the slack is "-1.096". The full-phase data path will be at the top of the listed, followed by the two-phase data path, yet the Minimum Period value is 8.192ns. The Minimum Period value corresponds to the two-phase data path and not the full-phase data path.

#### Timing Report Example

```
Slack (setup path): -1.096ns (requirement - (data path - clock path skew + uncertainty))
Source: IntA_1 (FF)
Destination: XorA_1 (FF)
Requirement: 3.000ns
Data Path Delay: 4.036ns (Levels of Logic = 1)
Clock Path Skew: 0.000ns
Source Clock: clk0 rising at 0.000ns
Destination Clock: clk0 falling at 3.000ns
Clock Uncertainty: 0.060ns
```

## Multiple Clock Domains

A cross clock domain path is a path that has two different clocks for the source and destination synchronous elements. One clock drives the source and a different clock drives the destination. If the source-clock-PERIOD constraint is related to the destination-clock-PERIOD constraint, the destination-clock-PERIOD constraint covers the cross-clock-domain analysis.

Xilinx recommends relating the clocks via PERIOD constraints, so that the analysis properly includes the cross clock domain paths.

If the clocks are not related, the cross clock domain paths are not analyzed. Xilinx recommends using a FROM:TO or multicycle constraint to either flag it as a false path or multi-cycle path.

## Clocks from DCM outputs

Since the clock signals produced by a DCM/DLL/PLL/PMCD are related to each other, the PERIOD constraints should also be related. This can be done in one of two ways


- Allow NGDDBuild to create new PERIOD constraints based upon the input clock signal PERIOD constraint.
- Manually create PERIOD constraints based upon the output clock signals of the DCM/DLL/PLL/PMCD and manually relate the PERIOD constraints.

## Clk0 Clock Domain

Since the clocks produced by the DCM/PLL/DLL/PMCD are related, the timing tools take this relationship into consideration during analysis. The synchronous element clock pin is driven by the same clock net from a DCM/DLL/PLL/PMCD component output. The timing analysis tool reports the active edges of the clock and the corresponding time for the data path between the synchronous elements.

The example in the following figure shows a **CLK0** clock circuit with a simple design. This clock domain has the same requirement and phase shifting as the original requirement.

Xilinx Target: Figure 6-5

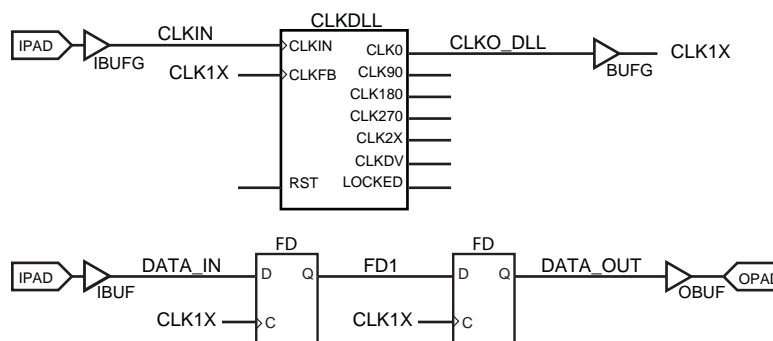

X11097

Figure 6-5: Clk0 DCM Output Schematic


### Timing Report Example

```
Slack (setup path): 3.904ns (requirement - (data path - clock path skew + uncertainty))
Source:                IntA_1 (FF)
Destination:           XorA_1 (FF)
Requirement:           8.000ns
Data Path Delay:       4.036ns (Levels of Logic = 1)
Clock Path Skew:       0.000ns
Source Clock:          clk0 rising at 0.000ns
Destination Clock:     clk0 rising at 8.000ns
Clock Uncertainty:     0.060ns
```

## Clk90 Clock Domain

Since the clocks produced by the DCM/PLL/DLL/PMCD are related, the timing tools take this relationship into consideration during analysis. The synchronous element clock pins are driven by different clock nets from a DCM/DLL/PLL/PMCD component outputs. The timing analysis tool reports the active edges of the clock and the corresponding time for the data path between the synchronous elements. The example in

the following figure shows **CLK0** and **CLK90** signals where the phase difference is 90 degrees.

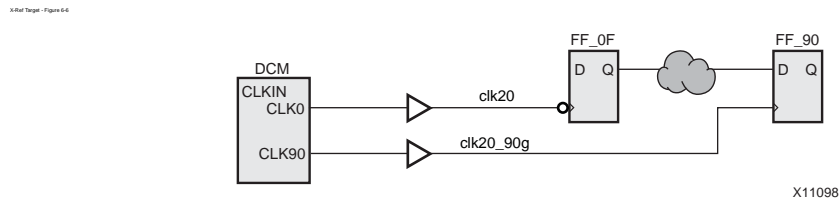


**Figure 6-6: Clock Phase Between DCM Outputs**

Another cause of the Minimum PERIOD value differing from the first path listed in the timing report is a cross-clock domain analysis of phase-shifted clocks.

**Note:** If the phase difference between the two clock domains is 90 degrees, the total data delay is multiplied by four to get to a full period value.

If the data path is 1.5ns for this clock90 constraint, the equivalent full period value is 6 ns.

In addition, for this example, the data path goes from a falling-edge of CLK0 clock signal to the rising-edge of CLK90 clock signal, and the timing analysis includes the two-phase information from CLK0 to do the analysis, as shown in the following figure. The original PERIOD constraint was set to 20 ns, but this cross-clock domain analysis has the new requirement of 15 ns, to compensate for the phase difference between the two clocks, as shown in the preceding figure.

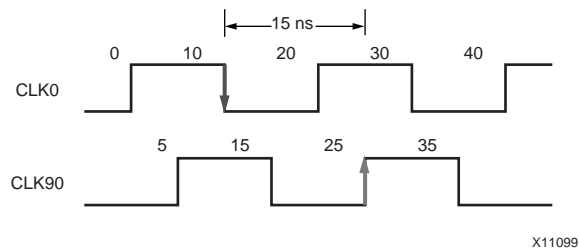

**Figure 6-7: Clock Edge Relationship**

## Timing Report Example

```
Slack (setup path): 5.398ns (requirement - (data path - clock path skew + uncertainty))
Source:                IntB_2 (FF)
Destination:           XorB_2 (FF)
Requirement:            8.000ns
Data Path Delay:        2.542ns (Levels of Logic = 1)
Clock Path Skew:        0.000ns
Source Clock:           clk0  falling at 2.000ns
Destination Clock:      clk90 rising at 10.000ns


...

Slack (setup path): 13.292ns (requirement - (data path - clock path skew + uncertainty))
Source:                IntC_2 (FF)
Destination:           XorB_2 (FF)
Requirement:            15.000ns
Data Path Delay:        2.594ns (Levels of Logic = 1)
Clock Path Skew:        -0.086ns
Source Clock:           clk0  falling at 10.000ns
Destination Clock:      clk90 rising at 25.000ns
Clock Uncertainty:      0.200ns
```

## Clk2x Clock Domain

Since the clocks produced by the DCM/PLL/DLL/PMCD are related, the timing tools take this relationship into consideration during analysis. A simple design of a CLK2X clock domain is illustrated in the following figure. The clock is driven by the same clock source, which is an output of a DCM/DLL/PLL/PMCD component. The timing analysis tool reports the active edges of the clock and the corresponding time for the data path between the synchronous elements. This clock domain has the requirement of the original requirement. The phase shifting is the same as the phase shifting of the original requirement.

X11100 Target - Figure 6-8

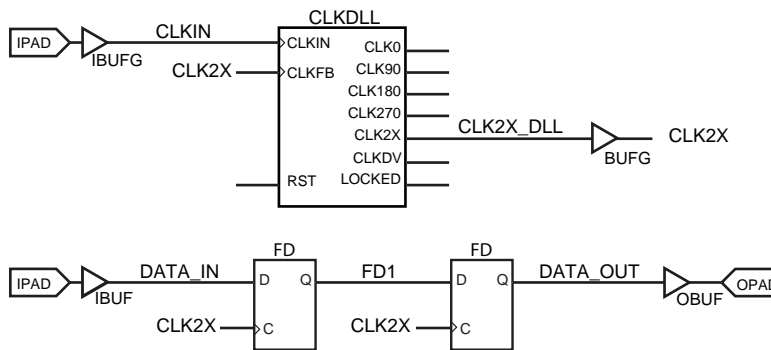

X11100

Figure 6-8: Clk2x DCM Output Schematic

### Timing Report Example

```
Slack (setup path): -1.663ns (requirement - (data path - clock path skew + uncertainty))
Source:             IntA_3 (FF)
Destination:        OutB_3 (FF)
Requirement:        2.000ns
Data Path Delay:    3.443ns (Levels of Logic = 0)
Clock Path Skew:    -0.020ns
Source Clock:        clk2x rising at 0.000ns
Destination Clock:   clk2x falling at 2.000ns
Clock Uncertainty:   0.200ns
```




## CLKDV/CLKFX Clock Domain

Since the clocks produced by the DCM/PLL/DLL/PMCD are related, the timing tools take this relationship into consideration during analysis. The CLKDV and CLKFX outputs can be used to make clock signals that are derivatives of the original input clock signal, as shown in [Table 3-1, Transformation of PERIOD Constraint Through DCM](#). The clock is driven by two different outputs of the DCM/DLL/PLL/PMCD component. The timing analysis tool reports the active edges of the clock and the corresponding time for the data path between the synchronous elements.

The simple design of a CLKDV clock domain, with the `DIVIDE_BY` factor set to 2, is shown in the following figure. This clock domain has twice the requirement as the original requirement, but the phase shifting is the same as the phase shifting of the original requirement.

X11101 Target: Figure 6-9

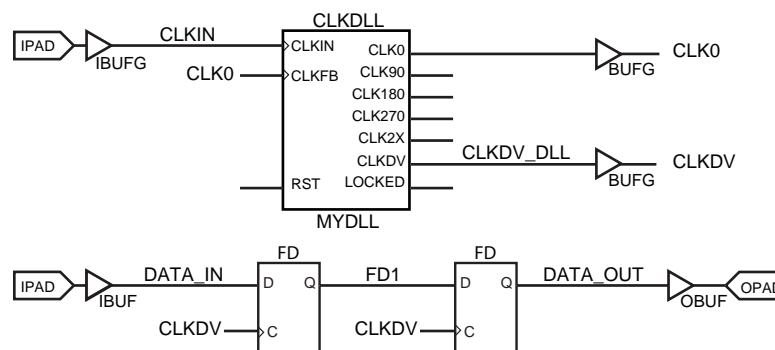

X11101

Figure 6-9: CLKDV DCM Output Schematic

### Timing Report Example

```
Slack (setup path): 1.909ns (requirement - (data path - clock path skew + uncertainty))
Source:                XorC_7 (FF)
Destination:           OutC_7 (FF)
Requirement:           4.000ns
Data Path Delay:       1.810ns (Levels of Logic = 0)
Clock Path Skew:       0.000ns
Source Clock:          clk0 rising at 0.000ns
Destination Clock:     clkdv rising at 4.000ns
Clock Uncertainty:     0.281ns
```

## FROM:TO (Multi-Cycle) Constraints

The analysis of path exceptions is associated with FROM-TO constraints. The path exception constraints override global constraints for a specific set of paths specified in the FROM:TO constraint. This constraint is designed to specify a unique timing requirement for specific set of paths with a faster or slower requirement than the global timing constraints. The requirement can be a value or a timing ignore (TIG). The analysis of the exception constraint starts with a header summary, which is a summary of the specific constraint. It contains the constraint syntax, the number of paths and endpoints covered by this constraint, and any setup/hold errors. This information provides verification that the constraint covers the expected number of paths and endpoint and a overall worst-case performance of this constraint.

The analysis of the exception constraint path includes the path details for the clock and data paths. This analysis contains all the information for a single path. The initial paragraph of the path details is a path summary, which includes the overall slack value, source and destination design element, source clock and destination clock signal and clock edges, total data path delay, clock skew, and clock uncertainty. The slack equation and clock uncertainty equations are also reported in the path summary.

The second paragraph provides the path details for the clock and data paths for the output interface. This includes the description of all device resources utilized and the routing delays for both clocking and data paths.

The analysis of the FROM:TO (multi-cycle) constraint includes the clock skew between the source and destination synchronous elements. Clock skew is calculated based upon the clock path to the destination synchronous element minus the clock path to the source synchronous element. The clock skew analysis is done automatically for all clocks being constrained. The analysis includes setup analysis for all device families and setup and hold analysis on Virtex-5 devices and newer. In order to ignore the clock skew in FROM:TO constraints, use the DATAPATHONLY keyword.

DATAPATHONLY indicates that the FROM:TO constraint does not take clock skew or phase information into consideration during the analysis of the design. This keyword results in only the data path between the groups being considered and analyzed.

Setup paths are sorted by slacks, based upon the following equation:

$$T_{\text{su slack}} = \text{constraint\_requirement} - T_{\text{clock\_skew}} - T_{\text{data\_path}} - T_{\text{su}}$$

The setup analysis of a FROM:TO is done by default. The hold analysis is reported for Virtex-5 devices and newer by default. For older devices, the environment variable (XIL\_TIMING\_HOLDCHECKING YES) must be set to enable the hold analysis.

Hold analyses are performed on register-to-register paths by taking the data path ( $T_{\text{cko}} + T_{\text{route\_total}} + T_{\text{logic\_total}}$ ) and subtracting the clock skew ( $T_{\text{dest\_clk}} - T_{\text{src\_clk}}$ ) and the register hold delay ( $T_{\text{h}}$ ). In the TWR report, slack is used to evaluate the hold check:

- Negative slack indicates a hold violations
- Positive slack means there is no hold violation.

The following equation is used for hold slack calculations:

$$\text{Hold Slack} = T_{\text{data}} - T_{\text{skew}} - T_{\text{h}}$$

The detailed path is reported under the constraint that contains that data path. The path is listed by the slack with respect to the requirement. There is a ( $-T_{\text{h}}$ ) identifier of the hold path delay type. This ( $-T_{\text{h}}$ ) appears after the hold delay type to help identify race conditions and hold violations.

Hold analyses are performed on all global and local clock resources. The data path is not adjusted to show possible variances in the PVT across the silicon. Hold violations are generally not seen, as a very short data path delay and a large clock skew is needed before this problem occurs. If a hold violation does occur, the current protocol of PAR and the timing engines is to reduce the clock skew and increase the clock delay for a specific data path if necessary. This means that PAR can change the routing to fix a hold violation.

The hold slack is not related to the constraint requirement. This may be confusing when reviewing the slack and the minimum delay NS period for the constraint. The hold slack is related to the relationship between the clock skew and the data path delay. Only the slack from setup paths affects the minimum delay ns period for the constraint.

The FROM:TO constraint requirement should account for any known external skew between the clock sources if the endpoint registers do not share a common clock or the clocks are unrelated to each other. If the registers share any single common clock source, the skew is calculated only for the unique portions of the clock path to the synchronous elements. If no common clock source points are found, the skew is the difference between the maximum and minimum clock paths. The clock skew is reported in the path header, but the delay details to the source clock pin and destination clock pin are not included.

To determine these delays, use **Analyze Against User Specified Paths ... by defining Endpoints...** in Timing Analyzer. Specify the clock pad input as the source. Specify the registers or synchronous elements in the hold/setup analysis as the destination. The clock delay from the pad to each register clock pin is reported. This custom analysis also works for DLL/DCM/PLL clock paths. To obtain the clock skew, subtract the destination clock delay from the source clock delay. The paths are sorted by total path delay and not slack.

#### Example One

Constrain the DQS path from an IDDR to the DQ CE pins to be approximately one-half cycle. This insures that the DQ clock enables are de-asserted before any possible DQS glitch at the end of the read postamble can arrive at the input to the IDDR. This value is clock-frequency dependent.

```
INST */gen_dqs*.u_iob_dqs/u_iddr_dq_ce TNM = TNM_DQ_CE_IDDR;
INST */gen_dq*.u_iob_dq/gen_stg2*.u_iddr_dq TNM = TNM_DQS_FLOPS;
TIMESPEC TS_DQ_CE = FROM TNM_DQ_CE_IDDR TO TNM_DQS_FLOPS TS_SYS_CLK * 2;
```

The requirement is based upon the system clock.

#### Example Two

Constrain the paths from a select pin of a MUX to the next stage of capturing synchronous elements. This value is clock-frequency dependent:

```
NET clk0 TNM = FFS TNM_CLK0;
NET clk90 TNM = FFS TNM_CLK90;
# MUX Select for either rising/falling CLK0 for 2nd stage read capture
INST */u_phy_calib_0/gen_rd_data_sel*.u_ff_rd_data_sel TNM = TNM_RD_DATA_SEL;
TIMESPEC TS_MC_RD_DATA_SEL = FROM TNM_RD_DATA_SEL TO TNM_CLK0 TS_SYS_CLK * 4;
```

This requirement is based upon the system clock.

### Example Three

Constrain the path between DQS gate driving IDDR and the clock enable input to each of the DQ capture IDDR in that DQS group. Note that this requirement is frequency dependent and the user set the following requirement:

```
INST */gen_dqs[*].u_iob_dqs/u_iddr_dq_ce TNM = TNM_DQ_CE_IDDR;  
INST */gen_dq[*].u_iob_dq/gen_stg2_*.u_iddr_dq TNM = TNM_DQS_FLOPS;  
TIMESPEC TS_DQ_CE = FROM TNM_DQ_CE_IDDR TO TNM_DQS_FLOPS 1.60 ns;
```

This requirement is based upon a system clock of 333 MHz.

## OFFSET IN Constraints

This section discusses OFFSET IN Constraints and includes:

- [OFFSET IN BEFORE Constraints](#)
- [OFFSET IN AFTER Constraints](#)

**Analyzing the Input Timing** in Timing Analyzer is used to analyze the input timing constraints, which can be the OFFSET IN and/or FROM:PADS:TO constraints. The input timing constraint covers the data path from the external pin or pad of the FPGA to the internal synchronous element or register that captures that data.

The traditional constraint for this path is OFFSET IN, which:

- Specifies the input timing for the design.
- Defines the relationship between the data and clock edge used to capture that data at the pin or pads of the device.

This analysis is used to analyze the setup and the hold paths of the synchronous elements, which capture the data. The internal routing and delays of the clock and data paths are included in the OFFSET IN analysis in the timing analysis tools. The frequency and the phase transformation of the clock, clock uncertainties, IOStandard, and other data delay adjustments.

The Timing Object Table shows the worst-case paths for the selected constraint by showing each patch per row, including common timing analysis details, which includes Slack, Data Path, Clock Path, Source, and Destination elements

The details of each timing report constraint shows a summary of the constraint, including:

- The number paths and the endpoints covered by the constraint.
- Any setup and hold errors that occurred.

The analysis information is used to:

- Verify that the constraint covered the expected number of path and endpoints.
- View a high-level view of the performance of the constraint.

The bus base analysis for input timing paths includes the input timing interfaces consisting of several data signals associated with a single input clock. The interface depends greatly on the entire bus operating correctly. The bus-based timing analysis of the interface and the analysis of each bit of the bus is included. The bus-base analysis provides specific detailed analysis for each bit of the bus to determine the common sources of errors and determine how to adjust clock and data delay to optimize bus performance.

During the bus-based analysis, the datasheet section of the timing report contains a sub-section with a summary of the bus analysis. This sub-section provides:

- A high level timing detail for each bit of the interface bus. These details:
  - Are based upon the detailed section of the timing report under the OFFSET IN constraint.
  - Include:
    - Setup and hold requirements
    - Setup and hold slacks for each bit of the capturing register or synchronous element inside the device
- More information on the overall performance of the bus, which includes the worst case summary row and source offset to center column.

**Source Offset to Center** provides the data path delay adjustments required to center the data bits of the interface over the clock edge to provide maximum timing margin for this interface.

**Ideal Clock Offset to Actual Clock** provides the clock path delay adjustment required to center the clock edge with respect to the bus. This additional clock path delay is usually done by Phase shifting the clock through a clock modifying block (DCM, PLL, MMCM).

**Worst Case Data** provides the overall worst-case setup plus hold time window for the bus interface.

The detailed path analysis section of the timing report provides clock and data path details of the input interface. This analysis includes all the necessary delays for the setup and hold analysis of the input interface. For each OFFSET IN constraint, a summary header provides information about the constraint syntax, the paths analyzed, and the endpoints analyzed. For each path analyzed, a path header provides a summary of the input timing path performance in a slack value, along with the slack equation of the timing check. It also includes the source pad and destination synchronous element information, capturing clock network name and clock edge, clock and data path delay totals, and any clock uncertainty. After the path header are the data and clock path details. These include a detailed description of all component and routing network delays utilized for both the clock and data paths of an input interface.

The OFFSET IN constraint defines the Pad-To-Setup timing requirement. OFFSET IN is an external clock-to-data relationship specification. It takes into account the clock delay, clock edge, and DLL/DCM introduced clock phase when analyzing the setup requirement ( $\text{data\_delay} + \text{setup} - \text{clock\_delay} - \text{clock\_arrival}$ ). Clock arrival takes into account any clock phase generated by the DLL/DCM or clock edge.

**Note:** If the timing report does not display a clock arrival time for an OFFSET constraint, then the timing analysis tools did not analyze a PERIOD constraint for that specific synchronous element.

When you create pad-to-setup requirements, make sure to incorporate any phase or PERIOD adjustment factor into the value specified for an OFFSET IN constraint. For the following example, see the schematic in [Figure 3-3, TNM on the CLK Net Traced Through Combinatorial Logic to Synchronous Elements \(Flip-flops\)](#). If the net from the CLK90 pin of the DLL/DCM clocks a register, then the OFFSET value should be adjusted by one quarter of the PERIOD constraint value. For example, the PERIOD constraint value is 20 ns and is from the CLK90 of the DCM, the OFFSET IN value should be adjusted by an additional 5 ns.

- Original Constraint

```
NET "PAD_IN" OFFSET = IN 10 BEFORE "PADCLKIN";
```

- Modified Constraint

```
NET "PAD_IN" OFFSET = IN 15 BEFORE "PADCLKIN"
```

**Note:** The clock net name required for OFFSET constraints is the clock net name attached to the IPAD. In above example, the clock pad is "PADCLKIN", not "CLK90".

## OFFSET IN BEFORE Constraints

The OFFSET IN BEFORE constraint defines the time available for data to propagate from the pad to setup at the synchronous element, as shown in the following figure. You can visualize this as the time that the data arrives at the edge of the device before the next clock edge arrives at the device. This **OFFSET = IN 2 ns BEFORE clock\_pad** constraint reads that the data is valid at the input data pad, some time period (2 ns) BEFORE the

reference clock edge arrives at the clock pad. The tools automatically calculate and control internal data and clock delays to meet the flip-flop setup time.

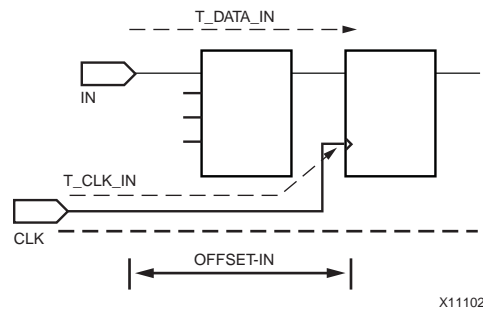


Figure 6-10: Circuit Diagram with Calculation Variables for OFFSET IN BEFORE Constraints

The following equation defines the setup relationship.

$$T_{Data} + T_{Setup} - T_{Clock} \leq T_{offset\_IN\_BEFORE}$$

where

$T_{Setup}$  = Intrinsic Flip Flop setup time  
 $T_{Clock}$  = Total Clock path delay to the Flip Flop  
 $T_{Data}$  = Total Data path delay from the Flip Flop  
 $T_{offset\_IN\_BEFORE}$  = Overall Setup Requirement

The OFFSET IN requirement value is used as a setup time requirement of the FPGA device during the setup time analysis.

The VALID keyword:

- Is used in conjunction with the requirement to create a hold time requirement during a hold time analysis.
- Specifies the duration of the incoming data valid window, and the timing analysis tools do a hold time analysis.

By default, the VALID value is equal to the OFFSET time requirement, which specifies a zero hold time requirement (see the following figure).

If the VALID keyword is not specified, no hold analysis is done by default. In order to receive hold analysis without the VALID keyword, use the **fastpaths** option (**trce - fastpaths**) during timing analysis.

The following equation defines the hold relationship.

$$T_{Clock} - T_{Data} + T_{hold} \leq T_{offset\_IN\_BEFORE\_VALID}$$

where

$T_{hold}$  = Intrinsic Flip Flop hold time  
 $T_{Clock}$  = Total Clock path delay to the Flip Flop  
 $T_{Data}$  = Total Data path delay from the Flip Flop  
 $T_{offset\_IN\_BEFORE\_VALID}$  = Overall Hold Requirement

Following is an example of the OFFSET IN with the VALID keyword:

```
TIMEGRP DATA_IN OFFSET IN = 1 VALID 3 BEFORE CLK RISING;
TIMEGRP DATA_IN OFFSET IN = 1 VALID 3 BEFORE CLK FALLING;
```

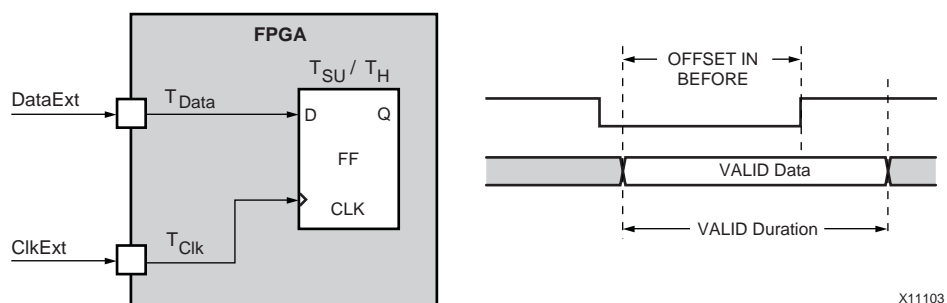


Figure 6-11: **OFFSET IN** Constraint with **VALID** Keyword

The **OFFSET** Constraint is analyzed with respect to the rising clock edge, which is specified with the **HIGH** keyword of the **PERIOD** constraint. Set the **OFFSET** constraint to **RISING** or **FALLING** to override the **HIGH** or **LOW** setting defined by the **PERIOD** constraint. This is extremely useful for **DDR** design, with a 50 percent duty cycle, when the signal is capturing data on the rising and falling clock edges or producing data on rising and falling clock edges. For example, if the **PERIOD** constraint is set to **HIGH**, and the **OFFSET** constraint is set to **FALLING**, the falling edged synchronous elements have the clock arrival time set to zero.

Following is an example of the **OFFSET IN** constraint set to **RISING** and **FALLING**:

```
TIMEGRP DATA_IN OFFSET IN = 1 VALID 3 BEFORE CLK FALLING;
TIMEGRP DATA_IN OFFSET IN = 1 VALID 3 BEFORE CLK RISING;
```

The equation for external setup included in the **OFFSET IN** analysis of the **FPGA** device is:

External Setup = Data Delay + Flip Flop Setup time - Prorated version of Clock Path Delay

The longer the clock path delay, the smaller the external setup time becomes. The prorated clock path delay is used to obtain an accurate setup time analysis. The general prorating factors are 85% for Global Routing and 80% for Local Routing.

**Note:** The prorated clock path delays are not used for families older than Virtex-II device families.

The equation for external hold included in the **OFFSET IN** analysis of the **FPGA** device is:

External Hold = Clock Path Delay + Flip Flop Hold time - Prorated version of Data Delay

If the data delay is longer than the clock delay, the result is a smaller hold time. The prorated data delays are similar to the prorated values in the setup analysis.

**Note:** The prorated data delays are not used for families older than Virtex-II device families.

### Simple Example

A simple example of the **OFFSET IN** constraint has an initial clock edge at zero ns based upon the **PERIOD** constraint. The timing report displays the initial clock edge as the Clock Arrival time.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the example report below)

If the timing report does not display a Clock Arrival time, then the timing analysis tools did not recognize a **PERIOD** constraint for that particular synchronous element.



In the following figure, the OFFSET requirement is three ns before the initial clock edge. The equation used in timing analysis is:

$$\text{Slack} = (\text{Requirement} - (\text{Data Path} - \text{Clock Path} - \text{Clock Arrival}))$$

### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = IN 3 ns BEFORE clock;
```

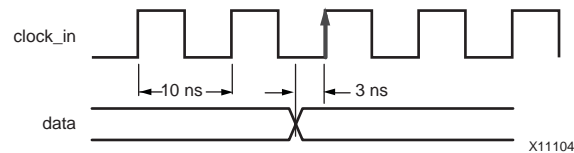


Figure 6-12: Timing Diagram of Simple OFFSET IN Constraint

### Timing Report Example

```
Slack: -0.191ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source:          reset (PAD)
Destination:     my_oddrA_ODDR_inst/FF0 (FF)
Destination Clock: clock0_ddr_bufg rising at 0.000ns
Requirement:     3.000ns
Data Path Delay:  2.784ns (Levels of Logic = 1)
Clock Path Delay: -0.168ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

### Two-Phase Example

A two-phase or both clock edge example of the OFFSET IN constraint has an initial clock edge which correlates to the two edges of the clock:

- The first clock edge is zero ns based upon the PERIOD constraint
- The second clock edge is one-half the PERIOD constraint

The timing report displays the Clock Arrival time for each edge of the clock.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the example report below)

In this example, the PERIOD constraint has the clock arrival on the falling edge, based upon the FALLING keyword. Therefore, the clock arrival time for the falling edge synchronous elements is zero. The rising edge synchronous elements is one-half the PERIOD constraint. If both edges are used, as in Dual-Data Rate, two OFFSET constraints are created: one for each clock edge.

In the following figure, the OFFSET requirement is three ns before the initial clock edge. If the PERIOD constraint is set to HIGH, and the OFFSET IN constraint is set to FALLING, the following constraints produce the same example report:

```
TIMESPEC TS_clock = PERIOD clock 10 ns HIGH 50%;
OFFSET = IN 3 ns BEFORE clock RISING;
OFFSET = IN 3 ns BEFORE clock FALLING;
```

## Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock 10 ns LOW 50%;
OFFSET=IN 3 ns BEFORE clock;
```

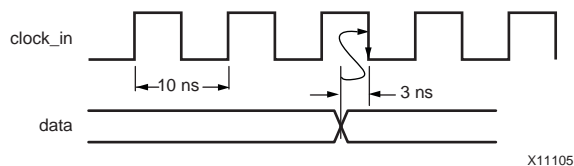


Figure 6-13: Timing Diagram with Two-Phase OFFSET IN Constraint

## Timing Report Example

```
Slack: 0.231ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source: DataD<9> (PAD)
Destination: TmpAa_1 (FF)
Destination Clock: clock0_ddr_bufg falling at 0.000ns
Requirement: 3.000ns
Data Path Delay: 2.492ns (Levels of Logic = 2)
Clock Path Delay: -0.038ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

## Phase-Shifted Example

A DCM phase-shifted clock, **CLK90**, example of the OFFSET IN constraint has an initial clock edge at zero ns based upon the PERIOD constraint. Since the clock is phase-shifted by the DCM, the timing report displays the Clock Arrival time as the phase-shifted amount. If the **CLK90** output is used, then the phase-shifted amount is one quarter of the PERIOD. In this example, the PERIOD constraint has the initial clock arrival on the rising edge, but the clock arrival value is at 2.5ns.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the example report below)

In the following figure, the OFFSET requirement is three ns before the initial clock edge.

## Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET=IN 3 ns BEFORE clock;
```

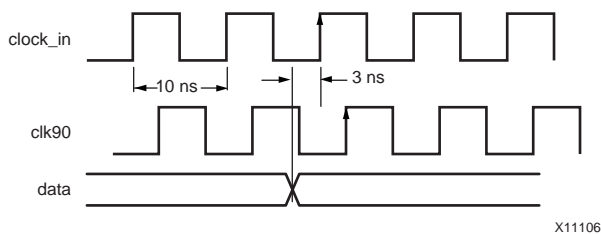


Figure 6-14: Timing Diagram for Phase Shifted Clock in OFFSET IN Constraint

### Timing Report Example

```
Slack: 2.309ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source:          reset (PAD)
Destination:     my_oddrA_ODDR_inst/FF0 (FF)
Destination Clock: clock90_bufg rising at 2.500ns
Requirement:     3.000ns
Data Path Delay:  2.784ns (Levels of Logic = 1)
Clock Path Delay: -0.168ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

### Fixed Phase-Shifted Example

A DCM fixed phase-shifted clock example of the OFFSET IN constraint has an initial clock edge at zero ns based upon the PERIOD constraint. Since the clock is phase-shifted by the DCM, the timing report displays the Clock Arrival time as the phase-shifted amount.

If the CLK0 output is phase-shifted by a user-specified amount, then the phase-shifted amount is a percentage of the PERIOD. In the following example, the PERIOD constraint has the initial clock arrival on the rising edge, but the clock arrival value is at the fixed phase shifted amount, as seen in the example timing report. The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the example report below)

In the following figure, the OFFSET requirement is three ns before the initial clock edge.

### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = IN 3 ns BEFORE clock;
```

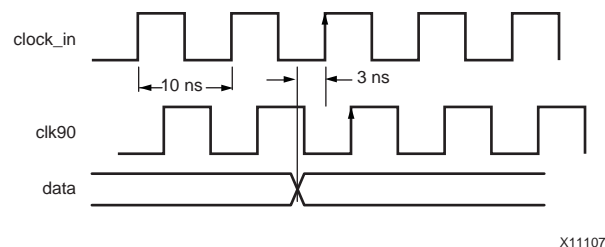


Figure 6-15: Timing Diagram of Fixed Phase Shifted Clock in OFFSET IN Constraint

### Timing Report Example

```
Slack: 4.731ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source:          DataD<9> (PAD)
Destination:     TmpAa_1 (FF)
Destination Clock: clock1_fixed_bufg rising at 4.500ns
Requirement:     3.000ns
Data Path Delay:  2.492ns (Levels of Logic = 2)
Clock Path Delay: -0.038ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

### Dual-Data Rate Example

A Dual-Data Rate example of the OFFSET IN constraint has an initial clock edge at zero ns and half the PERIOD constraint, which correlates to the two clock edges. The timing report

displays the Clock Arrival time for each edge of the clock. Since the timing analysis tools do not automatically adjust any of the clock phases during analysis, the constraints must be manually adjusted for each clock edge. The timing analysis tools offer two options to manage the falling edge Clock Arrival time.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the example report below)

#### Option One

The first option is to create two time groups, one for rising edge synchronous elements and the second for the falling edge synchronous elements. Then create an OFFSET IN constraint for each time group, the second OFFSET IN constraint has a different requirement.

The falling edge OFFSET IN constraint requirement equals the original requirement minus one-half the PERIOD constraint. Therefore, if the original requirement is 3 ns with a PERIOD of 10 ns, the falling edge OFFSET IN constraint requirement is -2 ns. This compensates for the Clock Arrival time associated with the falling edge synchronous elements. The negative value is legal in the constraints language.

#### Option Two

The second option is to create one time group and one corresponding OFFSET IN constraint with the original constraint requirement for each clock edge. The only addition is the RISING/FALLING keyword (if the PERIOD constraint has the HIGH keyword). The analysis with the RISING/FALLING keywords is based upon the active clock edge for the synchronous element. The requirement for the rising clock edge elements is set in the OFFSET IN RISING constraint. The requirement for the falling clock edge elements are set in the OFFSET IN FALLING constraint.

In this example, since the PERIOD constraint has the clock arrival on both the rising edge and falling edge, the clock arrival value is 0 ns and 5 ns. In the following figure, the OFFSET requirement is three ns before the initial clock edge.

#### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = IN 3 ns BEFORE clock RISING;
OFFSET = IN 3 ns BEFORE clock FALLING;
```

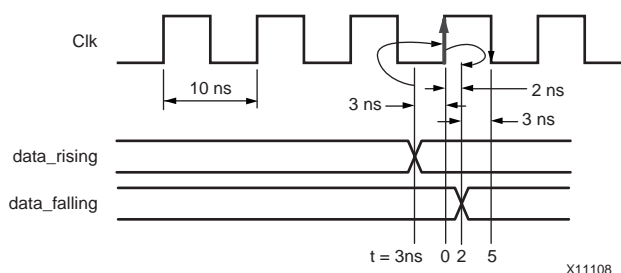


Figure 6-16: Timing Diagram for Dual Data Rate in OFFSET IN Constraint

## Timing Report Example for OFFSET = IN 3 ns BEFORE clock RISING

```
Slack: 0.101ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source:           DataA<3> (PAD)
Destination:      TmpAa_3 (FF)
Destination Clock: clock0_ddr_bufg rising at 0.000ns
Requirement:      3.000ns
Data Path Delay:   2.654ns (Levels of Logic = 2)
Clock Path Delay:  -0.006ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

## Timing Report Example for OFFSET = IN 3 ns BEFORE clock FALLING

```
Slack: 0.101ns (requirement - (data path - clock path - clock arrival + uncertainty))
Source:           DataA<3> (PAD)
Destination:      TmpAa_3 (FF)
Destination Clock: clock0_ddr_bufg falling at 0.000ns
Requirement:      3.000ns
Data Path Delay:   2.654ns (Levels of Logic = 2)
Clock Path Delay:  -0.006ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

## OFFSET IN AFTER Constraints

The OFFSET IN AFTER constraint describes the time used by the data external to the FPGA device. OFFSET IN subtracts this time from the PERIOD declared for the clock to determine the time available for the data to propagate from the pad to the setup at the synchronous element. You can visualize this time as the difference of data arriving at the edge of the device after the current clock edge arrives at the edge of the device.

This **OFFSET = IN 2 ns AFTER clock\_pad** constraint reads that the Data to be registered in the FPGA device is available on the FPGA's input Pad, some time period (2ns), AFTER the reference clock edge is seen by the Upstream Device. For the purposes of the OFFSET constraint syntax, assume no skew on CLK between the chips.

The following equation defines this relationship.

$$T_{Data} + T_{Setup} - T_{Clock} \leq T_{Period} - T_{offset\_IN\_AFTER}$$

where

```
TSetup = Intrinsic Flip Flop setup time
TClock = Total Clock path delay to the Flip Flop
TData = Total Data path delay from the Flip Flop
TPeriod = Single Cycle PERIOD Requirement
Toffset_IN_AFTER = Overall Setup Requirement
```

A PERIOD or FREQUENCY constraint is required for OFFSET IN constraints with the AFTER keyword.

## OFFSET OUT Constraints

This section discusses OFFSET OUT Constraints and includes:

- [OFFSET OUT AFTER Constraints](#)
- [OFFSET OUT BEFORE Constraints](#)

The output interface analysis is done under the output timing constraints, OFFSET OUT. The output timing analysis covers the data path from the external clock pad through any logic and from the synchronous element that is tied to the external data pad. The constraint defines the maximum time from the time the clock edge arrives at the external pad until the first data appears at the external data pad. The timing analysis automatically includes internal factors that affect the delays associated with the clock and data paths. This includes the frequency and phase transformation of the clock, the clock uncertainties, and the data delay adjustment. In the datasheet section of the timing report, a new table is created to report the overall bus skew relative to a reference pin or fastest bit for source synchronous interfaces.

For each analysis of the OFFSET OUT constraint, a header summary section includes information about the constraint syntax, the number of paths and endpoints analyzed by this constraint, and any timing errors. The header summary verifies that the constraint has covered the expected number of path and endpoints, and reviews the worst-case performance for this constraint.

Traditionally the output timing interfaces consist of several data signals associated with a single input clock. To ensure that the entire bus is operating correctly, the bus-based timing analysis of the interface reports the worst-case bus skew across the entire bus in a source synchronous design. The bus-based timing analysis reports the analysis of each bit of the bus, including the source synchronous elements, the pad element, the overall delay, and the bus skew. The overall delay includes the delay from the clock input to the output data bit and the bus skew is the skew of each bit relative to the reference pin or the smallest data bit delay.

The detail of the path analysis of the output interface includes the analysis of the clock and data path of the output interface. The analysis includes the information for a single data path for single output data path. The Timing Object Table provides a timing summary for the path analysis in Timing Analyzer. This includes the output timing of the path along with the contribution of the clock and data components of the path. The initial paragraph is the path summary for this single path. This includes the overall performance summary in a slack value with the slack equation. The summary also includes the source synchronous element and the destination pad element, transmitting clock network description, and clock and data path delay details. The clock uncertainty value and clock uncertainty equation are also included.

The second paragraph provides the path details for the clock and data paths for the output interface. This includes the description of all device resources utilized and the routing delays for both clocking and data paths.

The OFFSET OUT constraint defines the Clock-to-Pad timing requirements. The OFFSET OUT constraint is an external clock-to-data specification and takes into account the clock delay, clock edge, and DLL/DCM introduced clock phase when analyzing the clock to out requirements:

$$\text{Clock to Out} = \text{clock\_delay} + \text{clock\_to\_out} + \text{data\_delay} + \text{clock\_arrival}$$

Clock arrival time takes into account any clock phase generated by the DLL/DCM or clock edge. If the timing report does not display a clock arrival time, the timing analysis tools did not analyze a PERIOD constraint for that specific synchronous element.

When you create clock-to-pad requirements, be sure to incorporate any phase or PERIOD adjustment factor into the value specified for an OFFSET OUT constraint. For the following example, see [Figure 6-6, Clock Phase Between DCM Outputs](#). If the register is clocked by the net from the CLK90 pin of the DCM, which has a PERIOD of 20 ns, the OFFSET value should be adjusted by 5 ns less than the original constraint.

- Original Constraint

```
NET "PAD_OUT" OFFSET = OUT 15 AFTER "PADCLKIN";
```

- Modified Constraint

```
NET "PAD_OUT" OFFSET = OUT 10 AFTER "PADCLKIN";
```

## OFFSET OUT AFTER Constraints

The OFFSET OUT AFTER constraint defines the time available for the data to propagate from the synchronous element to the pad, as shown in the following figure. You can visualize this time as the data leaving the edge of the device after the current clock edge arrives at the edge of the device. This **OFFSET = OUT 2 ns AFTER clock\_pad** constraint reads that the Data to be registered in the Downstream Device is available on the FPGA device's data output pad, some time period (2 ns), AFTER the reference clock pulse is seen by the FPGA device, at the clock pad.

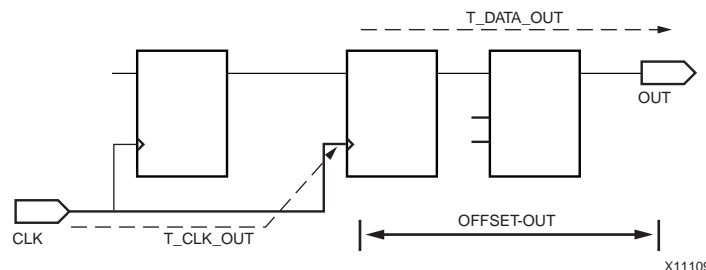


Figure 6-17: Circuit Diagram with Calculation Variables for OFFSET OUT AFTER Constraints

The following equation defines this relationship.

$$Q + T_{Data2Out} + T_{Clock} \leq T_{offset\_OUT\_AFTER}$$

where

$T_Q$  = Intrinsic Flip Flop Clock to Out  
 $T_{Clock}$  = Total Clock path delay to the Flip Flop  
 $T_{Data2Out}$  = Total Data path delay from the Flip Flop  
 $T_{offset\_OUT\_AFTER}$  = Overall Clock to Out Requirement

The analysis of this constraint involves ensuring that the maximum delay along the reference path (CLK\_SYS to COMP) and the maximum delay along the data path (COMP to Q\_OUT) do not exceed the specified offset.

The OFFSET RISING/FALLING keyword can be used to override the HIGH/LOW keyword defined by the PERIOD constraint. This is very useful for DDR design, with a 50% duty cycle, when the signal is capturing data on the rising and falling clock edges or producing data on a rising and falling clock edges. For example, if the PERIOD constraint is HIGH and the OFFSET constraint is FALLING, the clock arrival time of the falling edged synchronous elements is set to zero.

Following is an example of OFFSET OUT set to RISING or FALLING:

```
TIMEGRP DATA_OUT OFFSET OUT = 10 AFTER CLK FALLING;
TIMEGRP DATA_OUT OFFSET OUT = 10 AFTER CLK RISING;
```

### Simple Example

A simple example of the OFFSET OUT constraint has the initial clock edge at zero ns based upon the PERIOD constraint. The timing report displays the initial clock edge as the Clock Arrival time.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold in the sample report below)

If the timing report does not display a Clock Arrival time, the timing analysis tools did not recognize a PERIOD constraint for that particular synchronous element.

In the following figure, the OFFSET requirement is three ns. The equation used in timing analysis is:

$$\text{Slack} = (\text{Requirement} - (\text{Clock Arrival} + \text{Clock Path} + \text{Data Path}))$$

### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = OUT 3 ns AFTER clock;
```

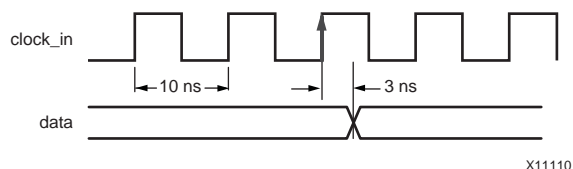


Figure 6-18: Timing Diagram of Simple OFFSET OUT Constraint

### Timing Report Example

```
Slack: -0.865ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source:          OutD_7 (FF)
Destination:     OutD<7> (PAD)
Source Clock:    clock3_std_bufg rising at 0.000ns
Requirement:     3.000ns
Data Path Delay: 3.405ns (Levels of Logic = 1)
Clock Path Delay: 0.280ns (Levels of Logic = 3)
Clock Uncertainty: 0.180ns
```

### Two-Phase Example

In a two-phase (use of both edges) example of the OFFSET OUT constraint, the initial clock edge correlates to the two edges of the clock.

- The first clock edge is at zero ns based upon the PERIOD constraint.
- The second clock edge is one-half the PERIOD constraint.

The timing report displays the Clock Arrival time for each edge of the clock. In this example, the clock arrival for the PERIOD LOW constraint is on the falling edge. Therefore



the clock arrival time for the falling edge synchronous elements is zero. The rising edge synchronous elements are half the PERIOD constraint.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold)

In the following figure, the OFFSET requirement is three ns.

#### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock 10 ns LOW 50%;
OFFSET = IN 3 ns AFTER clock;
```

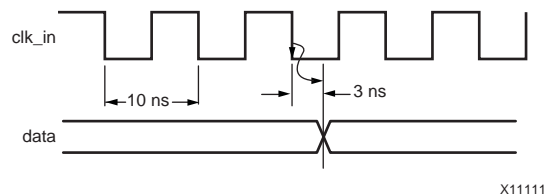


Figure 6-19: Timing Diagram of Two-Phase in OFFSET OUT Constraint

#### Timing Report Example

```
Slack: -0.865ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source: OutD_7 (FF)
Destination: OutD<7> (PAD)
Source Clock: clock3_std_bufg falling at 0.000ns
Requirement: .3.000ns
Data Path Delay: 3.405ns (Levels of Logic = 1)
Clock Path Delay: 0.280ns (Levels of Logic = 3)
Clock Uncertainty: 0.180ns
```

#### Phase-Shifted Example

A DCM phase-shifted, CLK90, example of the OFFSET OUT constraint has the initial clock edge at zero ns based upon the PERIOD constraint. Since the clock is phase-shifted by the DCM, the timing report displays the Clock Arrival time as the phase-shifted amount. If the CLK90 output is used, the phase-shifted amount is one quarter of the PERIOD. The Clock Arrival time corresponds to the phase shifting amount, which is 2.5 ns in this case.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold)

In the following figure, the OFFSET requirement is five ns.

#### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = OUT R ns AFTER clock;
```

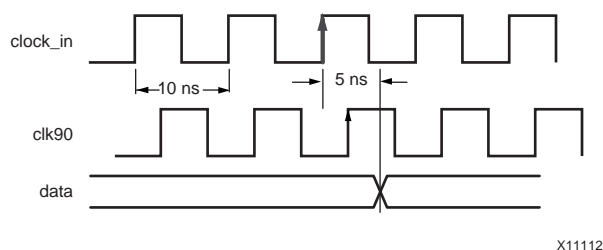


Figure 6-20: Timing Diagram of Phase Shifted Clock in OFFSET OUT Constraint

#### Timing Report Example

```
Slack: -1.365ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source:          OutD_7 (FF)
Destination:     OutD<7> (PAD)
Source Clock:     clock3_std_bufg rising at 2.500ns
Requirement:     5.000ns
Data Path Delay:  3.405ns (Levels of Logic = 1)
Clock Path Delay: 0.280ns (Levels of Logic = 3)
Clock Uncertainty: 0.180ns
```

#### Fixed Phase-Shifted Example

A DCM fixed phase-shifted example of the OFFSET OUT constraint has the initial clock edge at 0 ns, based upon the PERIOD constraint. Since the clock is phase-shifted by the DCM, the timing report displays the Clock Arrival time as the phase-shifted amount.

If the CLK0 output is phase-shifted, by a user-specified amount, the phase-shifted amount is a percentage of the PERIOD. In this example, the PERIOD constraint has the initial clock arrival on the rising edge, but the clock arrival value is at the fixed phase-shifted amount (as seen in the example timing report). The Clock Arrival time corresponds to the phase-shifting amount.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold)

In the following figure, the OFFSET requirement is five ns.

#### Constraint Syntax Example

```
TIMESPEC TS_clock=PERIOD clock_grp 10 ns HIGH 50%;
OFFSET = OUT 5 ns AFTER clock;
```

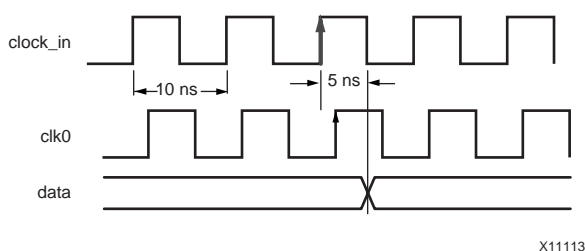


Figure 6-21: Timing Diagram of Fixed Phase Shifted Clock in OFFSET OUT Constraint

### Timing Report Example

```
Slack: 0.535ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source:          OutD_7 (FF)
Destination:     OutD<7> (PAD)
Source Clock:     clock3_std_bufg rising at 0.600ns
Requirement:     5.000ns
Data Path Delay:  3.405ns (Levels of Logic = 1)
Clock Path Delay: 0.280ns (Levels of Logic = 3)
Clock Uncertainty: 0.180ns
```

### Dual-Data Rate Example

A dual-data rate example of the OFFSET OUT constraint has the initial clock edge at zero ns and half the PERIOD constraint, which correlates to the two edges of the clock. The timing report displays the Clock Arrival time for each edge of the clock. Since the timing analysis tools do not automatically adjust any of the clock phases during analysis, the constraints must be manually adjusted for each clock edge. The timing analysis tools offer two options to manage the falling edge Clock Arrival time.

The resulting timing report displays the:

- Data path
- Clock path
- Clock Arrival time (shown in bold)

### Option One

The first option is to create two time groups, one for rising edge synchronous elements and the second for the falling edge synchronous elements. When you create an OFFSET OUT constraint for each time group, the second OFFSET OUT constraint has a different requirement. The falling edge OFFSET OUT constraint requirement equals the original requirement plus one-half the PERIOD constraint. If the original requirement is 3 ns with a PERIOD of 10, the falling edge OFFSET OUT constraint requirement is 8 ns. This compensates for the Clock Arrival time associated with the falling edge synchronous elements.

### Option Two

The second option is to create one time group and one corresponding OFFSET OUT constraint with the original constraint requirement. The only addition is the FALLING keyword for the falling edged elements and the RISING keyword for the rising edge elements.

In the following figure, the OFFSET requirement is three ns.

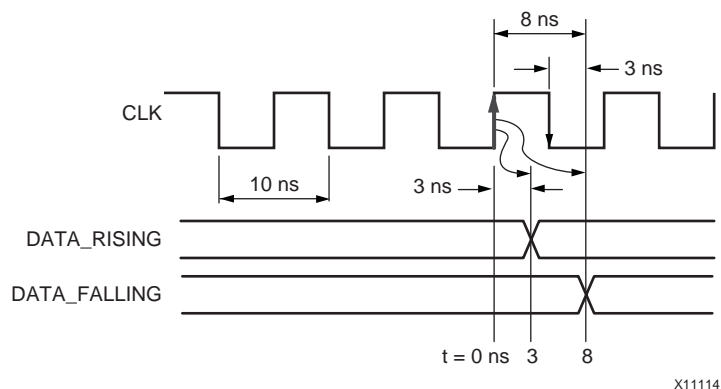


Figure 6-22: Timing Diagram of Dual Data Rate in OFFSET OUT Constraint

## Timing Report Example of OFFSET = OUT 3 ns AFTER clock RISING

```
Slack: -0.783ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source:          OutA_4 (FF)
Destination:     OutA<4> (PAD)
Source Clock:     clock0_ddr_bufg rising at 0.000ns
Requirement:     3.000ns
Data Path Delay:  3.372ns (Levels of Logic = 1)
Clock Path Delay: 0.172ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

## Timing Report Example of OFFSET = OUT 8 ns AFTER clock FALLING

```
Slack: -0.783ns (requirement - (clock arrival + clock path + data path + uncertainty))
Source:          OutA_4 (FF)
Destination:     OutA<4> (PAD)
Source Clock:     clock0_ddr_bufg falling at 0.000ns
Requirement:     3.000ns
Data Path Delay:  3.372ns (Levels of Logic = 1)
Clock Path Delay: 0.172ns (Levels of Logic = 3)
Clock Uncertainty: 0.239ns
```

## OFFSET OUT BEFORE Constraints

The OFFSET OUT BEFORE constraint defines the time used by the data external to the FPGA. OFFSET subtracts this time from the clock PERIOD to determine the time available for the data to propagate from the synchronous element to the pad. You can visualize this time as the data leaving the edge of the device before the next clock edge arrives at the edge of the device. This **OFFSET = OUT 2 ns BEFORE clock\_pad** constraint reads that the Data to be registered in the Downstream Device is available on the FPGA's output Pad, some time period, BEFORE the clock pulse is seen by the Downstream Device. For the purposes of the OFFSET constraint syntax, assume no skew on CLK between the chips.

The following equation defines this relationship.

$$TQ + T_{Data2Out} + T_{Clock} \leq T_{Period} - T_{offset\_OUT\_BEFORE}$$

where

$TQ$  = Intrinsic Flip Flop Clock to Out  
 $T_{Clock}$  = Total Clock path delay to the Flip Flop  
 $T_{Data2Out}$  = Total Data path delay from the Flip Flop  
 $T_{Period}$  = Single Cycle PERIOD Requirement  
 $T_{offset\_OUT\_BEFORE}$  = Overall Clock to Out Requirement

The analysis of the OFFSET OUT constraint involves ensuring that the maximum delay along the reference path (CLK\_SYS to COMP) and the maximum delay along the data path (COMP to Q\_OUT) do not exceed the clock period minus the specified offset.

A PERIOD or FREQUENCY is required for OFFSET OUT constraints with the BEFORE keyword.

## Clock Skew

Clock skew analysis is included in both a setup and hold analysis. Clock skew is calculated based upon the clock path delay to the destination synchronous element minus the clock path delay to the source synchronous element.

In the majority of designs with a large clock skew, the skew can be attributed to one of the following:

- One or both clocks using local routing
- One or both clocks are gated
- DCM drives one clock and not the other clock

Clock skew is not the same as Phase. Phase is the difference in the clock arrival times, indicated by the source clock arrival time and the destination clock arrival time in the timing report. Clock arrival times are based upon the PHASE keyword in the PERIOD constraint. Clock skew is not included in the clock arrival times.

In the rising-to-rising setup/hold analysis shown in the following figure, the positive clock skew greatly increases the chance of a hold violation and helps the setup calculation.

**Note:** During setup analysis, positive clock skew is truncated to zero for Virtex-4 devices and older. Virtex-5 devices and newer utilize the positive and negative clock skew in the setup analysis. Positive clock skew is used during the hold analysis for this path.

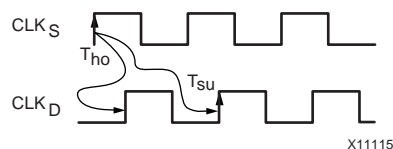


Figure 6-23: Rising to Rising Setup/Hold Analysis

In the rising-to-falling setup/hold analysis shown in the following figure, the positive clock skew is less, but the  $T_{ho}$  window is smaller and minimizes the chance for a hold violation. Therefore, a two-phase clock is less likely to have a hold violation and can handle more positive clock skew than a single-phase clock path.

Xilinx Target - Figure 6-24

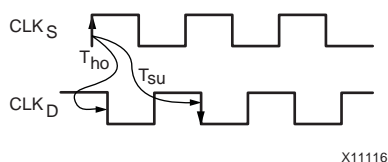


Figure 6-24: Rising to Falling Setup/Hold Analysis

**Note:** During hold analysis, negative clock skew is truncated to zero for Virtex-4 devices and older. Virtex-5 devices and newer utilize the negative and positive clock skew in the hold analysis. Negative clock skew is used during the setup analysis for this path.

During analysis of setup and hold, the negative clock skew and positive clock skew, respectively, decrease the margin on the PERIOD constraint requirement, as shown in the following figure.

To determine how the timing analysis tools calculated the total clock skew for a path, use the **Analyze -> Against User Specified Paths** command in Timing Analyzer. Select the source and destination of the path in question, and analyze from the clock source to the two elements in the path.

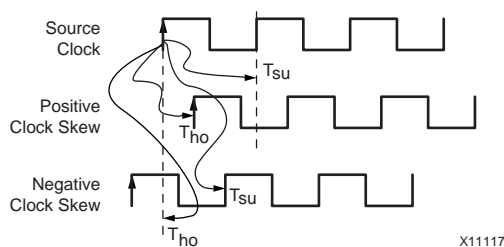


Figure 6-25: Positive and Negative Clock Skew

In the above figure:

- **Tsu** and **Th** represent the active edge the setup/hold violation calculation is done one, respectively.
- The dashed lines show the positive and negative clock skew being truncated to zero for setup and hold checks, respectively.

The report displays the clock path to the source and the clock path to the destination. Review the paths to determine if the design has one of the causes of clock skew that were previously mentioned. The timing analysis tools subtract the clock path delays to produce the clock skew, as reported in the timing report.

**Note:** The DLY file, produced by Reportgen (after PAR), can also be used to determine the values used to calculate the clock skew value that was reported.

When calculating the clock path delay, the timing analysis tool traces the clock path to a common driver. In the following figure, the common driver of the clock path is at the DCM. If the tools can not find a common driver, the analysis starts at the clock pads. In clock path delay, the timing analysis tool traces the clock path to a common driver. In [Figure 3-15, Hold Violation \(Clock Skew > Data Path\)](#), the clock path delay from the DCM to the destination element is  $(0.860 + 0.860 + 0.639) = 2.359$ , and the clock path delay from the DCM to the source element is  $(0.852 + 0.860 + 0.639) = 2.351$ . The total clock skew is  $2.359 - 2.351 = 0.008$  ns

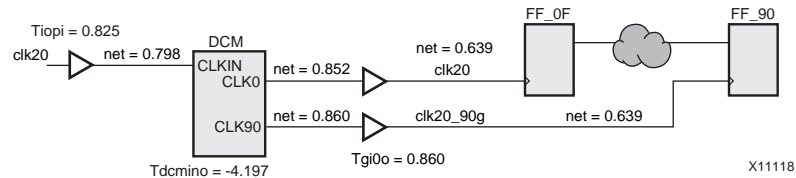


Figure 6-26: Clock Skew Example

## Clock Uncertainty

In addition to the [Clock Skew](#) affecting the margin on the PERIOD constraint requirement, clock uncertainty also affects it.

**Note:** Clock uncertainty is used to increase the timing accuracy by accounting for system, board level, and DCM clock jitter.

The SYSTEM\_JITTER constraint and INPUT\_JITTER keyword on the PERIOD constraint inform the timing analysis tools that the design has external jitter affecting the timing of this design, as shown in the following figure.

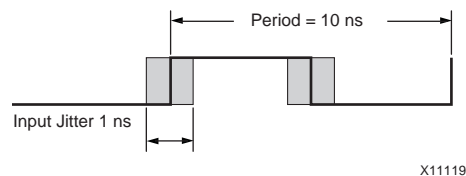


Figure 6-27: Input Jitter on Clock Signal

During the analysis for Virtex-4 device families and newer, the DCM Jitter, DCM Phase Error, and DCM Duty Cycle Distortion/Jitter are also included in the clock uncertainty. The individual components that make up clock uncertainty are reported in 9.1i and newer. The timing analysis tools calculate the clock uncertainty for the source and destination of a data path and combine them together to form the total clock uncertainty.

Following is the equation for DCM Clock Uncertainty:

$$\text{Clock Uncertainty} = [\sqrt{\text{INPUT\_JITTER}^2 + \text{SYSTEM\_JITTER}^2}] + \text{DCM\_Discrete\_Jitter} / 2 + \text{DCM\_Phase\_Error}$$

DCM Discrete Jitter and DCM Phase Error are provided in the speed files for Virtex-4 devices and newer. However, DCM Discrete Jitter and DCM Phase Error are not available in **speedprint**.

### Examples

- INPUT\_JITTER:  $200\text{ps}^2 = 40000\text{ps}$
- SYSTEM\_JITTER:  $150\text{ps}^2 = 22500\text{ps}$
- DCM Discrete Jitter: 120ps
- DCM Phase Error: 0ps
- Clock Uncertainty: 185ps

Following is an example of a PERIOD constraint with the INPUT\_JITTER keyword:

```
TIMESPEC "TS_Clk0" = PERIOD "clk0" 4 ns HIGH 60% INPUT_JITTER 200 ps PRIORITY 1;
```

Following is an example of the SYSTEM\_JITTER constraint:

```
SYSTEM_JITTER = 150 ps;
```

Clock jitter consists of both random and discrete jitter components. Because the INPUT\_JITTER and SYSTEM\_JITTER are random jitter sources, and typically follow a Gaussian distribution, the combination of the two is added in a quadratic manner to represent the worst-case combination.

**Note:** Because the DCM Jitter is a discrete jitter value, it is added directly to the clock uncertainty.

In the analysis of clock uncertainty all jitter components, both random and discrete, are specified as peak-peak values. Peak-peak values represent the total +/- range by which the arrival time of a clock signal varies in the presence of jitter. In a worst-case analysis, only the delay variation that causes a decrease in timing slack is used. For this reason, only the peak jitter value, or one-half the peak-to-peak value, is used for each setup and hold timing check.

The phase error component of clock uncertainty is a value representing the phase variation between two clock signals. Because this value is discrete, and represents the actual phase difference between the DCM clocks, it is added directly to the clock uncertainty value.

Following is the equation for PLL Clock Uncertainty:

$$\text{Clock Uncertainty} = [\sqrt{\text{INPUT\_JITTER}^2 + \text{SYSTEM\_JITTER}^2 + \text{PLL\_Discrete\_Jitter}^2}] / 2 + \text{PLL Phase\_Error}$$

PLL Discrete Jitter and PLL Phase Error are provided in the speed files for Virtex-5 devices.

In the analysis of clock uncertainty all jitter components, both random and discrete, are specified as peak-peak values. Peak-peak values represent the total +/- range by which the arrival time of a clock signal varies in the presence of jitter. In a worst-case analysis, only the delay variation that causes a decrease in timing slack is used.

**Note:** Only the peak jitter value, or one-half the peak-to-peak value, is used for each setup and hold timing check.

The phase error component of clock uncertainty is a value representing the phase variation between two clock signals. Because this value is discrete, and represents the actual phase difference between the PLL clocks, it is added directly to the clock uncertainty value.

## Asynchronous Reset Paths

The analysis of asynchronous reset paths, including the recovery time and reset pin to output time, is not included in the PERIOD constraint analysis by default.

**Note:** In order to see asynchronous reset/set paths, a path tracing control (PTC) needs to be enabled, which is "ENABLE = REG\_SR\_R;", for recovery time, and "ENABLE = REG\_SR\_O", for output time.

These path-tracing controls enable the path from the asynchronous reset pin through the synchronous element and the reset recovery time of the synchronous element.

## Improving Timing Failures

The analysis of the timing constraint is done through Timing Analyzer or the `trce` command. This timing analysis provides a detailed path analysis of the timing path with regards to the timing constraint requirements. This timing analysis ensures that the



specific timing constraints are passed through the implementation tools. The path specific details and includes the following:

- Confirms that the timing requirements were met for all paths per constraint
- Confirms the setup and hold requirements were met for all paths per constraint
- Confirms that the device components are performing within operational frequency limits
- Provides a list of unconstrained paths that may be a critical path that was not analyzed

The timing results can be reviewed in Timing Analyzer with the TWX and any text editor with the TWR. In both cases, all the worst-case or critical paths are reported per constraint. An additional option in Timing Analyzer and TRCE is to report the paths per endpoints for each constraint. This gives you more details on the failing endpoints that are the most critical per each constraint. The same path details are reported, which includes the clock to out of the source element, some routing and logic, and the setup of the destination element. The failing paths are shown as red in the Timing Analyzer index panel. When the analysis is run with path per endpoints for each constraint, this provides the number of paths that go to a single endpoint. This allows you to know where the common critical paths are located for each constraint.

If a path is being analyzed under a different constraint than expected, the TimeSpec Interaction (TSI) report gives good insight to the interaction between constraints and which constraints could be combined to reduce memory and runtime of the implementation tools. The time group membership may be the root cause of an unexpected interaction. In Timing Analyzer, a Query Time Group report can be created to report the elements associated with each Time Group. Make the corrections to the time group memberships to remove paths from the interacting timing constraints.

Another aspect of timing closure is the device utilization. Xilinx recommends verifying the device utilization by reviewing the Design Summary in the MAP and PAR reports. There will likely be some variation between the Synthesis utilization report and the MAP Design Summary report. Reviewing the placement of the clock networks can give insight to the critical paths. The clock network delays and clock loads are reported in Timing Analyzer's Report on Net Delays. The Clock Report section of the PAR report, along with Timing Analyzer's Report on Clock Regions, can verify the clock networks and the associated clocking elements. The Clock Report helps to ensure that the clocks were not routed using incorrect routing resource, such as local routing resources.

The Clock Report lists:

- Clock networks detected by the PAR process
- Clocking Buffer Resources that clock net are routed through
- Clock Fanout
- Net Skew
- Clock net delay to the clock loads

The Timing Summary at the end of the PAR report provides a snapshot of the design performance requirements. This section provides the best-case achievable performance for each clock domain. If the design has failing constraints, the Timing Summary reports the failing constraints with the worst-case slack, timing errors, timing score, and best-case

achievable per constraint. Use the following strategies to improve the failing constraints, runtime, memory, and overall performance of the design:

1. Use timing constraints in the synthesis tool for better design implementation
2. Use global timing constraints on every clock of the design instead of individual specific timing constraints:
  - a. OFFSET IN constraint on all inputs (Global OFFSET IN)
  - b. OFFSET OUT constraint on all outputs (Global OFFSET OUT)
  - c. PERIOD constraint on the input clock signal
3. In order to insure that the OFFSET IN/OUT constraints are analyzed correctly with an off-chip deskewing clock topology, the FEEDBACK constraint provides the external PCB delay for the overall OFFSET IN/OUT analysis. If the off-chip delay is set with the FEEDBACK constraint, the timing analysis incorporates the PCB delay into the clock path of the OFFSET IN/OUT constraint analysis.
4. Do not over-constrain the design. Set the PERIOD constraint to the actual frequency at which the design will operate. Over-constraining the design:
  - a. Makes it more difficult for the implementation tools to achieve overall performance
  - b. Can produce worse results than using the realistic timing performance objectives
  - c. Is the most common cause of long implementation runtime.
5. Use pad time-group specific OFFSET IN/OUT constraints for exceptions from the global OFFSET IN/OUT constraints, when the input or output signals are clocked by the same clock signal, but have different timing requirements.
6. Use FROM:TO or Multicycle constraints to define a multi-cycle path that does not have the same timing requirement than the PERIOD or single cycle. The individual timing elements are defined with time-groups or can be specified with the pre-defined time-groups (such as FFS or RAMS).
7. Review the failing timing paths or the critical paths by means of the Timing Analysis report.
8. Change the Synthesis and implementation options. Use various implementation tool options in the MAP and PAR process, such as SmartXplorer. For more information, see the *Command Line Tools User Guide* (formerly the *Development System Reference Guide*).
9. Use floorplanning techniques on the critical path to improve placement and packing of the design. For more information, see the *Floorplanning Methodology Guide*.
10. Use clock region area groups with time groups as area groups to confine the synchronous elements of the global clock buffers to specific clock regions to prevent contention in clock regions between global clocks. For more information, see the *Constraints Guide*.
11. Use Relationally Place Macros (RPMs) constraints to improve packing and placement by defining the relative placement of the individual synchronous elements. For more information, see the *Constraints Guide*.
12. Use LOC constraints to manually constrain the placement of the larger components, such as BlockRAM (BRAM), Multiplier/DSP, and other clock modifying blocks (such as DCM and PLL) to reduce the implementation runtime. This improves placement and packing by placing the individual synchronous elements in a specific location on the device.

The most common areas that cause timing failures are:

1. High Fanout Nets results in poor synthesis, placement and/or routing. Use logic replication or duplication techniques in synthesis or HDL code.
2. High Delay Nets results in poor placement and/or routing. Use Area Groups to confine the placement
3. High Number of Logic Levels results in poor placement and/or routing. Add pipeline registers, use one-hot state machines, and use **case** statements instead of **if/else** statement.
4. High number of asynchronous resets, which are not analyzed by default. Add ENABLE constraints for asynchronous paths through the synchronous element (REG\_SR\_O) and/or for asynchronous reset recovery time of the synchronous element (REG\_SR\_R).
5. Poor Packing in the MAP process, results in poor placement and/or routing. Use BLKNM to force elements to be packed together or XBLKNM to force elements to not be packed together and/or Area Groups to confine the packing and placement.
6. Poor Placement in general. Use Area Groups and Relationally Placed Macros (RPMs) to confine the placement
7. Poor IO Timing results in poor placement and/or routing. Move the IOB Flip Flops or SLICE Flip Flops to meet timing.



# Chapter 7

## Timing Closure

Timing Closure is one of today's major design challenges. The high performance requirements of many designs and the size of the target devices often make it difficult to achieve timing closure. To complicate matters further, designs that formerly fit on ASIC devices, or that ran at high clock frequencies on those devices, are now finding their way onto Xilinx® FPGA devices.

You must have a proven methodology for achieving your performance objectives. This chapter addresses timing closure issues by providing a recommended methodology with examples and use cases. The guidelines in this chapter are a road map for improving performance and meeting your timing objectives.

### Achieving Timing Closure

Timing closure is achieved when all timing constraints for a design are met under all legal operating conditions:

- Process
- Voltage
- Temperature

Timing closure is achieved when the timing score for a given design is zero. The timing score:

- Is the total value representing the timing analysis for all constraints, and the amount by which the constraints are failing
- Is the *sum* in picoseconds of all timing constraints that have not been met
- Shows the total amount of error (in picoseconds) for all timing constraints in the design
- Can be viewed in the PAR Report at each phase of the router algorithm.

Phase 1 :	373040 unrouted;	REAL time: 2 mins 2 secs
Phase 2 :	324361 unrouted;	REAL time: 2 mins 24 secs
Phase 3 :	133339 unrouted;	REAL time: 6 mins 1 secs
Phase 4 :	134608 unrouted;	(Setup: 23596, Hold: 3309336, Component Switching Limit: 0)
Phase 5 :	0 unrouted;	(Setup: 46800, Hold: 319725, Component Switching Limit: 0)
Phase 6 :	0 unrouted;	(Setup: 29212, Hold: 319991, Component Switching Limit: 0)
Phase 7 :	0 unrouted;	(Setup: 29232, Hold: 319991, Component Switching Limit: 0)

Phase 8 : 0 unrouted; (Setup: 29232, Hold: 319991, Component Switching Limit: 0)

Phase 9 : 0 unrouted; (Setup: 27588, Hold: 320002, Component Switching Limit: 0)

Three timing score values are reported:

- Setup
- Hold
- Component switching limits

Each timing score value is analyzed in more detail later in this chapter.

The final timing score is displayed in the PAR Report and the TRCE Report.

### PAR Report

Timing Score: 2124 (Setup: 2124, Hold: 0 Component Switching Limit: 0)

### TRCE Report

Timing Summary:

-----

Timing errors: 119 **Score: 2124 (Setup[Max: 2124, Hold: 0)**

Constraints cover 23109382 paths, 24 nets, and 339654 connections

## Steps to Achieving Timing Closure

This section discusses Steps to Achieving Timing Closure, and includes:

- [Step One: Specify Good Pin Constraints](#)
- [Step Two: Employ Proper HDL Coding Techniques and Use Device Architectural Resources](#)
- [Step Three: Drive the Synthesis Tool](#)
- [Step Four: Apply Global and Path Specific Timing Constraints to Implementation Tools](#)
- [Step Five: Implementation](#)
- [Step Six: Run SmartXplorer](#)
- [Step Seven: Analyze Synthesis, NGDBuild, MAP and PAR Report Files](#)
- [Step Eight: Run TRCE and Analyze Timing Results and Report](#)

To achieve timing closure, before starting a design you must understand the performance requirements of the system and the features of the target device. This knowledge allows you to use proper coding techniques utilizing the features of the device achieving the best performance.

The device requirements depend on the system and the upstream and downstream devices. This dictates the requirement of the FPGA device. Once the interfaces to the FPGA device are known, the internal requirements can be outlined. How to meet these requirements depends on the device and its available features. You must understand the device clocking structure, RAM and DSP blocks, and any hard macros contained within the device.

For more information on each family, see the device data sheets.

The following figure outlines the steps to follow in order to achieve timing closure. Each step is addressed individually in the remainder of this chapter. [Step Eight: Run TRCE and Analyze Timing Results and Report](#) will be the main focus as many use cases and scenarios will be addressed with proposed debugging steps and resolutions

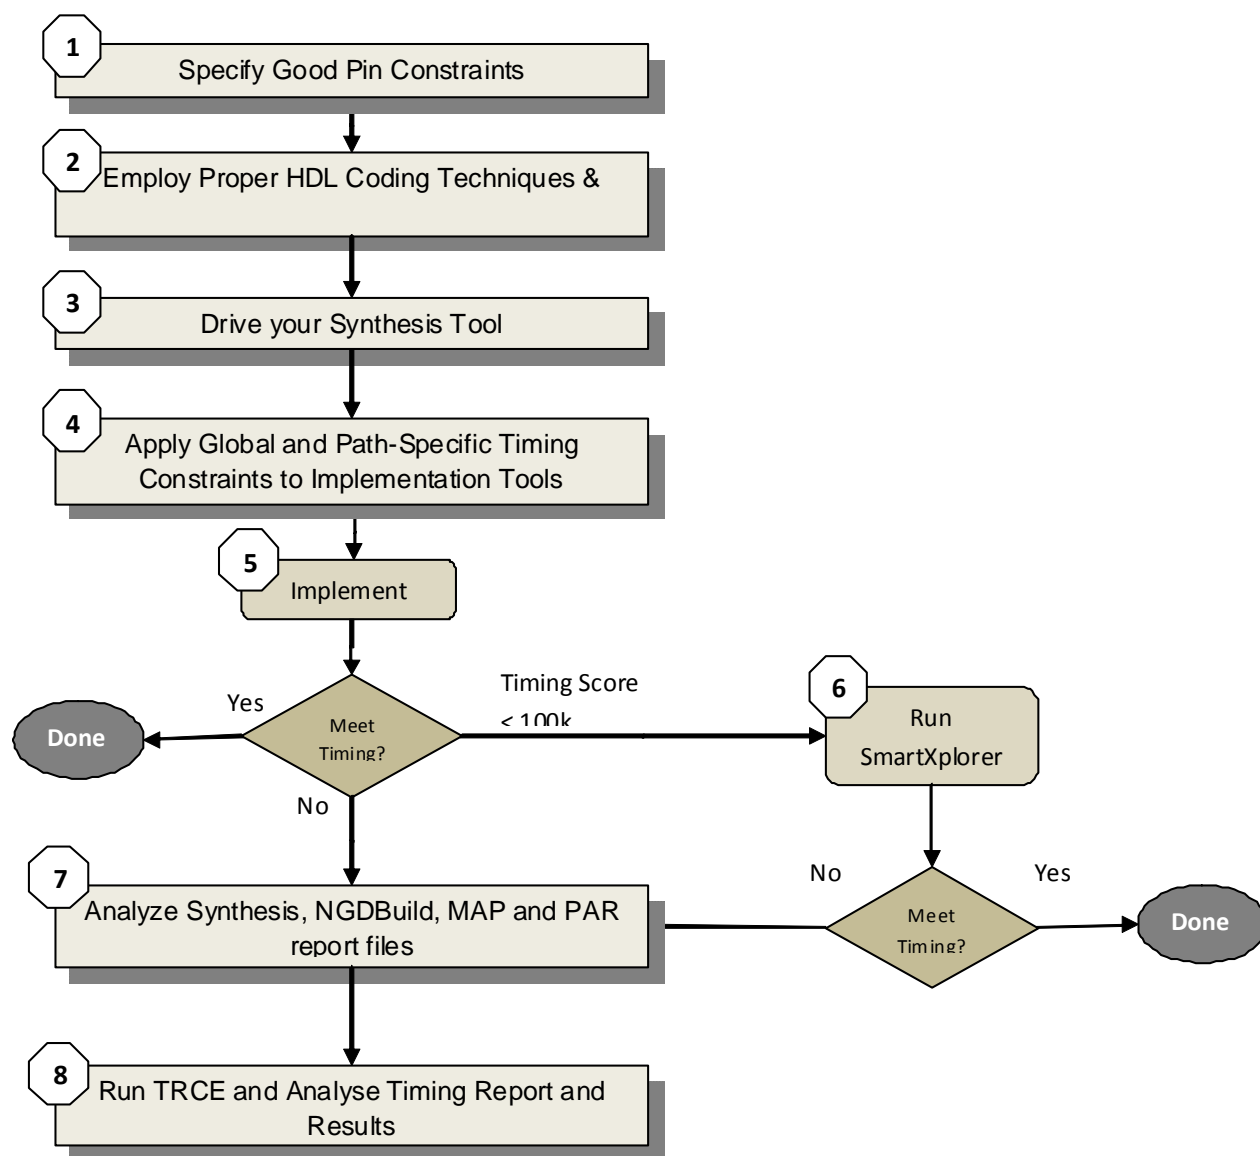


Figure 7-1: Timing Closure Flowchart

## Step One: Specify Good Pin Constraints

Pin constraints are often required early in the design cycle so that board development can begin. Use your knowledge of the FPGA fabric and your design to create pin constraints that take advantage of the FPGA architecture, design flow, and board requirements. The clock structure of the target design is extremely important, since it can dictate overall design performance.

Pay close attention to pin location. Evaluate IO location constraints in the PlanAhead software to ensure that these constraints are not forcing critical logic to span the device. If so, you may need to insert pipeline stages.

As devices and designs increase in size, partial reconfiguration, partitioning and floor-planning have become more important. This highlights the importance of good pin



location so that the design can be well floor-planned and use the device structure most efficiently.

Xilinx recommends that you use the PlanAhead software for your pin placement strategy, which allows you to do pin assignment using PinAhead technology.

You can generate I/O package pin assignments:

- Manually on a pin-by-pin drag and drop basis
- By semi-automatically dragging and dropping groups of ports
- With a fully automatic pin placement algorithm

This process can begin with:

- A synthesized EDIF netlist
- An un-synthesized HDL netlist
- A comma separated value (CSV) file
- A completely blank project in which the design ports are created inside the tool for export

Pin placement can affect the timing of the final design. It is far easier to write code that will meet timing for pins in a single bank or adjacent banks, than for banks on opposite sides of the chip. When pin planning, consider embedded elements such as which RTL will communicate with MGTs, Block Rams, and DSP components. Remember the RTL hierarchy that will communicate to these components, as well as which hierarchy will be pulled apart by a given pinout, and use necessary information when writing the RTL code. The following pin assignment suggestions can help increase productivity for optimal I/O placement.

Before using the PlanAhead software, see the tutorials on the Xilinx support website.

## Step Two: Employ Proper HDL Coding Techniques and Use Device Architectural Resources

Each Xilinx device family has specific features and resources, although many are common across platforms. The design must use these resources optimally and efficiently. For more information on individual devices, see the device user guide.

Following is an example of some available device architectural resources:

- Shift Register LUT (SRL16/ SRLC16)
- F5, F6, F7, and F8 multiplexers
- Carry logic
- Multipliers (DSP48)
- Global clock buffers (such as BUFG, BUFGCE, BUFGMUX, BUFGDLL, and BUFPLL)
- SelectIO™ standard (single-ended, differential)
- I/O registers (SDR, DDR)
- Memories (BRAM, DRAM)
- DCM, PMCD, PLL, MMCM
- Local clock buffers (BUFIO, BUFR)
- PPCs, MicroBlaze
- MGTs

You must understand the particular device you are targeting and the specific resources available within that device. Utilizing these resources necessarily impacts the performance of the design and tools.

## Coding Guidelines

Xilinx recommends the following:

- Implementation of synchronous design techniques
- Use of Xilinx specific coding
- Use of cores

The *XST User Guide* contains many example of how to code efficiently to target available device features.

Follow these guidelines to ensure an optimal netlist:

- Avoid high level loop constructs.
- Use **case** statements for large decoding.
- Avoid nested **if-then-else** statements.
- Do not create internally generated clocks except through DCM/PLL.
- Minimize the number of clocks in the design.
- Make sure that internally created resets are synchronous.
- Use only one edge of the clock.
- Use edge-triggered flip-flops (avoid latches).
- Cross-clock domains via synchronization circuits.
- Register top-level inputs and outputs for fastest performance and increased pin-locking capability.
- Use hierarchy to separate functionality and clock domains.
- Employ pipelining for critical paths.
- Comment your code to highlight multi-cycle paths and critical paths.

## Clocking Guidelines

The clocking structure varies across the range of devices, which is highlighted in the Spartan®-6 family. In order to achieve timing closure, this clocking structure must be utilized to take full advantage of all the features.

Follow these general recommendations:

- Use a minimal number of clocking components.
- Evaluate connectivity of all clocking components in the PlanAhead software to ensure that there are no duplicate structures that may cause unnecessary use of clock components (for example, one BUFG driving another BUFG).
- Do not use the `CLOCK_DEDICATED_ROUTE` constraint in a production design. Use `CLOCK_DEDICATED_ROUTE` only as a temporary workaround to a clock failure in MAP in order to produce an NCD file to debug the design in FPGA Editor. For more information, see *Xilinx Answer Record 30355*.
- Do not use gated clocks.

## Resets and Clock Enables Guidelines

- Avoid asynchronous resets. Asynchronous resets:
  - Prevent control set reduction in synthesis
  - Prevent certain power optimizations from occurring
  - Prevent logic optimization into SR path for improved timing
  - Are more difficult to time
- Minimize the use of resets and clock enables when possible.

A large number of resets and clock enables equates to a large number of control sets. A large number of control sets in a design in which each control set has a small number of loads impacts the packing of registers into a slice. This can lead to fitting and timing issues.

For Spartan®-6 devices, use active high resets when possible. Since, in Spartan®-6 devices, there is no local inversion in the slice for resets, the inversion must be done in a LUT. For designs in which hierarchy is maintained in synthesis, or in which partitions are used, this can lead to multiple LUTs. This can have implications for timing due to an extra LUT for the inversion.

- Run MAP with the **-detail** switch to get a complete listing of control sets and the loading on each set in the MAP report (\*mrp). Verify that a large number of control sets are not being caused by fanout optimization of a high fanout reset/ce. When you generate a detailed list of control sets in your MAP report, look for reset/ce nets with very similar names but with `rep` or `fast` appended to the name. This can indicate that this net was replicated. You can also verify this in the Synthesis Report.
- Resets may cause suboptimal mapping of shift registers into SRLs.

## Block RAM/DSP Guidelines

- Verify that all BRAM/DSP48 blocks use dedicated registers when possible to minimize setup and **clk2out** time. Using a PlanAhead software DRC check can identify this situation. Use the PlanAhead software schematic view to identify why the registers are not being merged with the BRAM/DSP components.
- Infer BRAM/DSP when possible to provide flexibility and optimal usage
- Follow XST coding styles to ensure proper inferencing. For more information, see the *XST User Guide*.
- Regenerate and/or resynthesize all BRAMs using the latest version of ISE® Design Suite. BRAM specifications continue to change through releases. The best way to ensure that you have the latest recommended configuration of BRAMs is to use the latest core or synthesis tool result.
- Examine the MAP (.mrp) file for any errors or warnings concerning BlockRAMs.
- Verify proper BRAM behavior by running extensive functional and timing simulations on the design.
  - When using the BRAMB8BWER in SDP mode (256x36), if using it synchronously with the same clock connected to the read/write port, set WRITE\_MODE on both ports to READ\_FIRST.
  - Starting after Release 12.2, when using the RAM in this mode with different clocks on read/write ports, ISE® Design Suite allows the use of WRITE\_FIRST mode. This avoids address overlap, and is the preferred setting.

- For Release 12.2 and before, Xilinx recommends using a RAMB16BWER (512x36) mode in WRITE\_FIRST configuration to avoid address overlap.
- For Release 11.5 and after, when using the BRAMB8BWER in SDP mode (256x36), where one port is 36-bits and the other is 18-bits or less, that mode is no longer allowed. For this mode, Xilinx recommends:
  - Use a RAMB16BWER (easier but uses more memory space than potentially needed), or
  - Construct the proper logic to allow the BRAM to be configured with 36-bits on both ports (the only supported widths for RAMB8 in SDP mode).

## Step Three: Drive the Synthesis Tool

It is important to drive the synthesis tools and apply period and input/output constraints to drive optimization results from synthesis. Multi-cycle and false paths can also be applied. The synthesis tools work on paths using the logic delay as guidance. Without any constraints, the tools treat the longest path (most logic delay) as the most critical.

For instance, in a two clock system, **clk<sub>a</sub>** with 10 ns of logic delays and **clk<sub>b</sub>** with 20 ns of logic delays, **clk<sub>b</sub>** is seen as the critical path. Since the tools have no knowledge of clock requirement without constraints guiding the synthesis tools, **clk<sub>b</sub>** may not actually be the most critical path. Apply a PERIOD constraint to the tool outlining that **clk<sub>a</sub>** has a requirement of 5 ns and **clk<sub>b</sub>** has a requirement of 25 ns. Now the tools consider **clk<sub>a</sub>** as the critical path. For more information on constraining synthesis, see the preceding chapter in this guide.

Pipelining the design increases the efficiency of the synthesis tool. While pipelining is optimal for interface bandwidth, it is not ideal for latency of the design. Latency can be important, but if it is, it is usually the latency in a different order of magnitude than the one that is caused by pipelining.

Since FPGA devices have many registers, re-timing and the innovative use of arithmetic functions can yield tremendous performance. If you need to balance the latency among different paths in the system, the SRLs can be used to compensate efficiently for delay differences.

## Synthesis Options That Impact the Timing of a Design

The following synthesis options impact the timing of a design. For more information on each option, see the *XST User Guide*.

- [Keep Hierarchy \(KEEP\\_HIERARCHY\)](#)
- [LUT Combining \(LC\)](#)
- [RAM Extraction \(RAM\\_EXTRACT\) and ROM Extraction \(ROM\\_EXTRACT\)](#)
- [Use DSP Block](#)
- [Global Max Fanout \(MAX\\_FANOUT\)](#)
- [Shift Register Extraction \(SHREG\\_EXTRACT\) and Shift Register Minimum Size \(SHREG\\_MIN\\_SIZE\)](#)
- [Register Balancing \(REGISTER\\_BALANCING\)](#)
- [Netlist Hierarchy \(-netlist\\_hierarchy\)](#)
- [Read Cores \(READ\\_CORES\)](#)
- [Asynchronous to Synchronous \(ASYNC\\_TO\\_SYNC\)](#)

- Resource Sharing (RESOURCE\_SHARING)
- Equivalent Register Removal (EQUIVALENT\_REGISTER\_REMOVAL)
- Pack I/O Registers Into IOBs (IOB)
- State Machine Encoding
- Shift Register Inferencing (Spartan-6 and Virtex-6 Devices)

## Keep Hierarchy (KEEP\_HIERARCHY)

Maintaining hierarchy:

- Enables easier debugging in static timing analysis
- Improves your opportunities to floorplan and to implement incremental or modular design techniques

However, maintaining hierarchy can have a negative impact on the results. When hierarchy is maintained, the synthesis tool is limited to optimizing within the boundary of the hierarchy. For some designs that do not have a well-defined hierarchy, it is necessary to allow the tools to optimize across the hierarchy.

Check the Synthesis Report to see if the global Keep Hierarchy (KEEP\_HIERARCHY) constraint is set to **soft** or **yes**, or if Keep Hierarchy (KEEP\_HIERARCHY) or Keep (KEEP) constraints have been set on specific instances. If so, run with these constraints removed. These constraints could be impacting optimizations on critical paths if the constraints are not applied at the proper boundaries.

## LUT Combining (LC)

The LUT Combining (LC) constraint maps two small LUTs into a single LUT, taking advantage of the dual outputs on the LUT. LUT Combining can cause problems with placement resulting in timing issues. When LUTs are combined, the placer tool is restricted with a single LUT trying to satisfy multiple timing paths. While this can lead to timing issues, this option is useful when trying to reduce the design utilization.

LUT Combining is set to **auto** by default in XST. Review the MAP Report to see if this option is having a large impact by the number of LUTs using both the O5 and O6 outputs.

Consider disabling this option in XST to improve performance.

LUT Combining can provide an area savings. Consider disabling LUT Combining in XST, and enabling it MAP to ensure the most accurate view of timing.

## RAM Extraction (RAM\_EXTRACT) and ROM Extraction (ROM\_EXTRACT)

BRAMs or DRAMs will be inferred optimally in the design by following the coding techniques outlined in the *XST User Guide* and by using the extraction constraints. It is important to use the pipelining registers available in the BRAM resource in the devices for optimal timing performance.

## Use DSP Block

In a similar way to RAM extraction, the USE\_DSP48 (Use DSP48) constraint can be used to guide the tools to infer DSP block as applicable with the design. It is important to also use the pipelining registers available in the DSP resource in the devices for optimal timing performance.

**Note:** This constraint is called:

- Use DSP48  
Virtex®-4 devices
- Use DSP Block  
Virtex®-5 devices and Spartan®-3A DSP devices

## Global Max Fanout (MAX\_FANOUT)

Reducing the fanout of control signals can greatly improve the ability to meet timing. This is not necessary for global logic, but for high fanout control logic to reduce the fanout so the tools can place the design efficiently. The XST report gives a control signal report that can help understand the nets with high fanout.

If the design is running into area problems, and the value is very low, increase the value to see the implication on area. If there are still high fanout nets after increasing the value, determine if any are timing critical, and apply a Max Fanout (MAX\_FANOUT) attribute specifically on the net. If the global Max Fanout was not changed, but there are many high fanout nets that are impacting performance, try reducing this value.

## Shift Register Extraction (SHREG\_EXTRACT) and Shift Register Minimum Size (SHREG\_MIN\_SIZE)

Use caution when inserting pipelining in the design. The tools may infer an SRL, thus removing the pipelining. SRL inference can be controlled with this constraint and set the minimum shift register size before SRL inference takes place.

## Register Balancing (REGISTER\_BALANCING)

Register Balancing (REGISTER\_BALANCING) enables flip-flop retiming. The main goal of register balancing is to move flip-flops and latches across logic to increase clock frequency.

Explore these options to see if they provide a performance advantage. Combining these options can lead to increased register usage and potentially more LUT usage due to SRL inferencing. Therefore, if area limited, this may hurt more than it helps.

## Netlist Hierarchy (-netlist\_hierarchy)

The Netlist Hierarchy (**-netlist\_hierarchy**) constraint:

- Controls the form in which the final NGC netlist is generated.
- Allows you to write the hierarchical netlist even if the optimization was done on a partially or fully flattened design.
- Is set to **as\_optimized** by default.

In many designs, Netlist Hierarchy is set to **rebuilt** to make it easier for floorplanning. Sometimes, however, this can cause worse timing. Therefore, explore with this option to see if it makes a difference on timing.

## Read Cores (READ\_CORES)

Reading in cores during synthesis insures that XST reads in any IP cores generated by the CORE Generator™ software. By reading in the cores, XST can better optimize the logic connected to these cores.

## Asynchronous to Synchronous (ASYNC\_TO\_SYNC)

If the design has asynchronous resets, the Asynchronous to Synchronous (ASYNC\_TO\_SYNC) switch can be used to convert the asynchronous resets to synchronous resets. Doing so can impact performance, area, and power.

## Resource Sharing (RESOURCE\_SHARING)

Synthesis tools use resource sharing to decrease circuit area, usually resulting in lower performance. Resource sharing:

- Minimizes the number of arithmetic operators, resulting in reduced device utilization
- Works with adders, subtractors, adders/subtractors, and multipliers
- Is on by default

An HDL Advisor message informs you when resource sharing has taken place.

Consider disabling resource sharing if the design is unable to meet timing. If the design has a limited number of LUTs, consider moving some of these arithmetic operators into DSP48s if available.

## Equivalent Register Removal (EQUIVALENT\_REGISTER\_REMOVAL)

The Equivalent Register Removal (EQUIVALENT\_REGISTER\_REMOVAL) constraint:

- Removes equivalent registers if they are described at the Register Transfer Level (RTL)
- Does not remove instantiated flops
- Is on by default

Consider disabling Equivalent Register Removal if:

- The design is trying to describe equivalent registers to minimize fanout, or
- The design is trying to keep certain blocks isolated.

Equivalent Register Removal can be disabled globally or on specific instances. Check the Synthesis Report to see if registers have been removed due to Equivalent Register Removal.

## Pack I/O Registers Into IOBs (IOB)

The decision to move flip-flops into and out of IOBs can also be made by the MAP process during implementation, but a constraint can be applied during synthesis. Xilinx generally recommends using IOB flip-flops to improve interface timing.

## State Machine Encoding

Use One-Hot State Encoding when implementing Finite State Machine (FSM) components. By using One-Hot State Encoding in Xilinx FPGA devices, the next-state decoding logic can be simplified to logic equations with four inputs or fewer. This can fit into a single LUT, and maximizes the performance of the state machine. Many synthesis tools automatically choose One-Hot State Encoding for state machines when targeting a Xilinx FPGA device.

## Shift Register Inferencing (Spartan-6 and Virtex-6 Devices)

The minimum shift register size for inferring LUTs as shift registers (SRLs) is 2 for XST. For many designs, this can lead to a large increase in LUTs, which may negatively impact



fitting and performance. Use the Shift Register Minimum Size (SHREG\_MIN\_SIZE) option to globally control the default shift register size that XST uses.

Use the Shift Register Extraction (SHREG\_EXTRACT) constraint to completely disable the inference of SRLs. This can be useful when a design is becoming very limited on LUTs and particularly SLICEMs.

The Shift Register Extraction (SHREG\_EXTRACT) constraint can be applied globally or to a specific instance. For more information, see the *XST User Guide for Virtex-6 and Spartan-6 Devices* (UG687).

## Step Four: Apply Global and Path Specific Timing Constraints to Implementation Tools

The implementation tools do not attempt to place and route the design to obtain the best speed. Instead, they try to meet the performance expectations communicated by the design's timing constraints. Timing constraints improve the design performance by helping place logic closer together resulting in shorter routing resources used. However, the tools do not optimize the design or change the netlist in any way. This can only improve the placement and routing of the design.

Use timing constraints to define performance objectives. Applying constraints that are tighter than necessary increases compile time. Unrealistic constraints cause the implementation tools to stop with non-optimal results.

**Caution!** Do not use tighter constraints than required. Tighter constraints cause the tool to work harder than necessary to meet timing, and may give less than optimal performance.

Timing Ignore constraints and Multi-Cycle constraints allow the tools to relax on certain paths, and concentrate on meeting timing on the most critical paths. Over-constraining a design is considered later in the chapter.

The FPGA device requirements depend on the downstream and upstream devices which will dictate the IO requirements for the FPGA. The following figure shows a basic timing model which highlights the impact of these devices on the FPGA timing

Once you understand the design requirements you can precede by constraining the design.

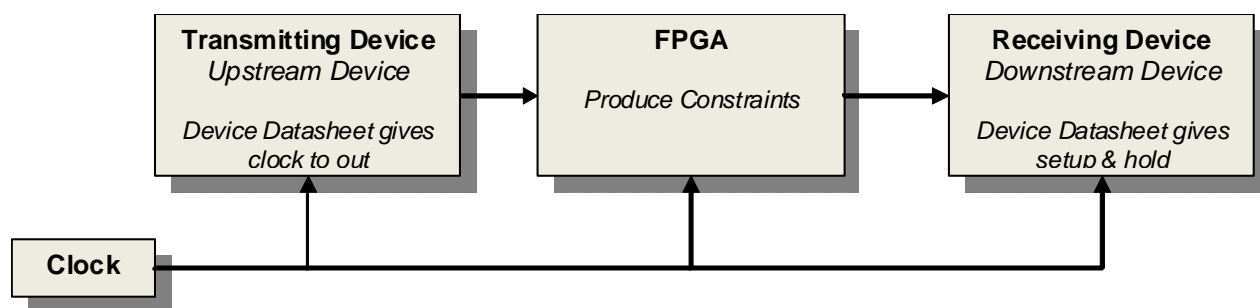


Figure 7-2: Basic Timing Model



## Isolate What Needs to be Constrained

When applying design constraints, first isolate the global constraints since these are the first to be constrained. Xilinx recommends running the tools with only global constraints, and then applying path specific constraints as necessary. All paths in the design should be covered by constraints.

## Global Timing Constraints

From the basic timing model isolate the inputs, outputs, and clocked logic within the design. Once you understand these paths, you can proceed with the basic global timing constraints that will apply to your design. For more information, see [Chapter 2, Timing Constraint Methodology](#).

## Example Scenarios

The following example scenarios show how the above parameters correlate while applying constraints.

### Example Scenario One: FPGA Interfaced with a SDRAM

In Example Scenario One, the FPGA device is being interfaced with a SDRAM on the board. The requirements of the SDRAM are:

- Minimum setup time: 2ns
- Maximum Clock to Out: 6ns

The board trace delays need to be included. For the setup path it is 500ps and for the Clock to Out path is 300ps. In this case, the SDRAM is the downstream device as well as the upstream device.

- OFFSET OUT is 2.5ns
  - 2ns is the minimum setup time of SDRAM
  - 0.5ns is because of board delay
- OFFSET IN is 6.3ns
  - 6ns is Clock to out for SDRAM
  - 0.3ns is because of board delay

This example does not contain System Clock Frequency.

### Example Scenario Two: Three Devices Running at 100MHz

In Example Scenario Two, there are three devices running at 100MHz. Assuming the three devices to be simple synchronous elements. From one element to another, the delay should be 10ns (synchronous elements to synchronous elements).

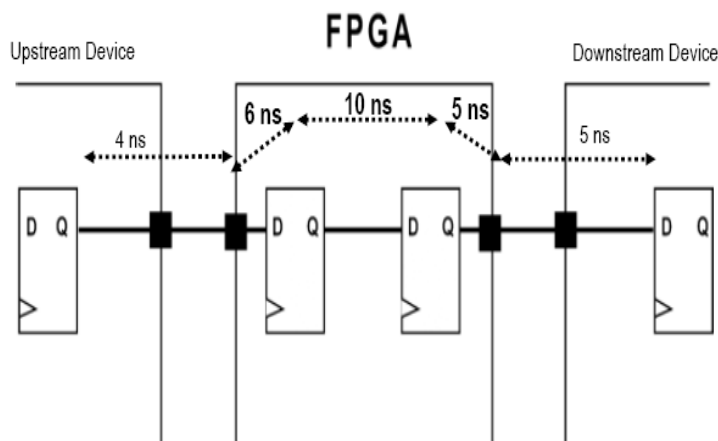


Figure 7-3: Example Scenario Two

Within the FPGA device, the time taken for the data path in between synchronous elements is 10ns.

- PAD to Synchronous elements - 6ns. (Requirement: 10ns - 4ns).  
It takes a delay of 4ns from the synchronous element of the upstream device to the Input PAD. The time requirement from Input PAD to synchronous element of FPGA is covered by OFFSET IN constraint.
- Synchronous elements to PAD - 5ns (Requirement:- 10ns - 5ns).  
It takes a delay of 5ns from out Pad to synchronous element of downstream device. This time requirement from Synchronous element to PAD of FPGA is covered by OFFSET OUT constraint.

### Over-Constraining a Design

Use SYSTEM\_JITTER to over-constrain a design. Do not increase clock frequency to over-constrain, since changing the clock frequency changes the relationship between the clock edges. To over-constrain a specific clock, increase the INPUT\_JITTER on that specific clock.

## Step Five: Implementation

Now that the design uses the available device features, and is correctly constrained, it is necessary to run the design through the tools to determine the timing performance.

Xilinx recommends that you start with the default options to get a first impression of the performance. However, the following implementation options are known to have the greatest impact on timing.

- [Physical Synthesis Options](#)
- [Ignore Keep Hierarchy](#)
- [Multiple Cost Tables](#)
- [Area Based Options](#)

For more information on specific implementation options, see the *Command Line Tools User Guide* (formerly the *Development System Reference Guide*).

### Physical Synthesis Options

SmartXplorer explores all physical synthesis options in MAP such as:

- Global optimization
- Register duplication
- Logic optimization
- Retiming

Many times, especially on Synplify PRO generated netlists, global optimization set to speed can greatly impact timing.

### Ignore Keep Hierarchy

If you must maintain hierarchy in synthesis and through the implementation flow for debug, run MAP with **-ignore\_keep\_hierarchy** to evaluate its impact on performance and area.

### Multiple Cost Tables

When timing is close, cost tables in MAP can often vary the placement enough to obtain timing closure. The first ten cost tables provide the most variability.

### Area Based Options

The following area based options may also affect timing:

- [LUT Combining \(LC\)](#)
- [Global Optimization Area](#)

#### LUT Combining (LC)

LUT Combining (LC) has two values:

- **auto**
- **area**

Both values typically degrade performance, but **auto** is less severe. For some LUT- limited designs, **auto** can actually increase performance by reducing the overall LUT count and giving the placer tool more flexibility.

## Global Optimization Area

If LUT Combining (LC) does not provide enough area savings, and a design is unable to fit in the target device, try **-global\_opt area**. This typically has a much larger impact on performance than LUT Combining.

Review the following report files to check for warnings that may highlight issues with the design:

- Synthesis Report
- NGDBuild Report
- MAP Report
- PAR Report

For more information, see [Step Seven: Analyze Synthesis, NGDBuild, MAP and PAR Report Files](#).

When you are satisfied with the results, check the timing score in the PAR Report.

There may be a timing score of 0 highlighting that all the constraints are met:

```
Timing Score: 0 (Setup: 0, Hold: 0, Component Switching Limit: 0)
```

You must still check the specific timing results in Timing Analyzer to ensure that all the constraints are analyzed as expected. The TSI Report highlights the interactions between all the constraints in the design. If there are multiple clocks and propagated constraints, then the interaction between these are highlighted. Likewise, if you have applied TIG or Multi-Cycle constraints, then the number of paths these cover and the specific global constraint these relax are displayed.

For more information, see [Step Eight: Run TRCE and Analyze Timing Results and Report](#).

If there is a timing score of between 0 and 100,000, Xilinx recommends running SmartXplorer to check which tool options have a positive and negative impact on the timing.

For more information, see [Step Six: Run SmartXplorer](#).

Although SmartXplorer generally does not resolve timing issues when the timing score is greater than 100,000, it may nonetheless be useful to run SmartXplorer to understand the impact of the various tools options. Generally, however, you should analyze the timing results to understand the reason for the high timing score.

If the timing score is greater than 100,000 see [Step Seven: Analyze Synthesis, NGDBuild, MAP and PAR Report Files](#).

## Step Six: Run SmartXplorer

SmartXplorer allows you to run your design through the tools with different sets of options simultaneously on different machines.

Prior to ISE® Design Suite Release 12.1, SmartXplorer applied only to the implementation options. SmartXplorer was enhanced in Release 12.1 to allow different synthesis options to be explored for a design.

For more information on SmartXplorer, see the *Command Line Tools User Guide* (formerly the *Development System Reference Guide*).

SmartXplorer has two key features:

- SmartXplorer automatically performs design exploration by using a set of built-in or user-created implementation strategies to try to meet timing.

**Note:** A design strategy is a set of tool options and the corresponding values intended to achieve a particular design goal such as area, speed, or power.

- SmartXplorer allows you to run these strategies in parallel on multiple machines, completing the job much faster.

Xilinx recommends that you review the following documents before running SmartXplorer:

- *Timing Closure Exploration Tools with SmartXplorer and PlanAhead Tools* (White Paper 287)
- *SmartXplorer for Command Line Users* (UG688)
- *SmartXplorer for Project Navigator Users* (UG689)

For specific SmartXplorer options, see the *Command Line Tools User Guide* (formerly the *Development System Reference Guide*).

Xilinx generally recommends running SmartXplorer when the timing score is less than 1000,000. Running SmartXplorer allows you to check the impact of the various tool options on the design. Some of the implementation options may have a positive or negative impact on the design. Run multiple cost tables to check the design over the full range of the algorithm.

To run SmartXplorer from Project Navigator, select **Tools > SmartXplorer > Launch SmartXplorer**. Once the dialog box opens, you can configure SmartXplorer as required for your specific project.

To run SmartXplorer from the command line, see the tutorial on [www.xilinx.com](http://www.xilinx.com).

You may experience timing problems when you move between major versions of the implementation tools. Xilinx recommends running SmartXplorer with multiple cost tables to insure that these timing issues are resolved. With a single run, the timing results can range based upon the changes introduced in the new version of the implementation tools. Multiple cost tables reduce this range and the random effects of changing cost tables, and provide more consistent timing results.

To illustrate this concept, consider a design that met timing in 10.x but no longer meets timing in 13.x. Xilinx recommends running multiple cost tables for each version of the tools and comparing both the best results and the average results. The end result will be nearly equivalent, and demonstrates that there was no tool degradation, but that the single run happened to fall into the low range of possible results.

For more information about synthesis options, see [Step Three: Drive the Synthesis Tool](#). For more information about implementation options, see [Step Five: Implementation](#).

## Step Seven: Analyze Synthesis, NGDBuild, MAP and PAR Report Files

Once SmartXplorer has completed its multiple runs, or if there is an initial timing score of greater than 100,000, review the report files.

If SmartXplorer has been run, analyze the impact of the various options and cost tables to determine which have a positive effect on the design. The SmartXplorer results show the timing score from each individual run. If one or more runs results in timing being met, modify the design to use these options as default. See the previous sections of this chapter for more information on specific options.

If timing is still failing, analyze the timing results in Timing Analyzer.

The first step in the analysis is to check the various report files:

- [Synthesis Report](#)
- [NGDBuild Report](#)
- [Map Report](#)
- [PAR Report](#)

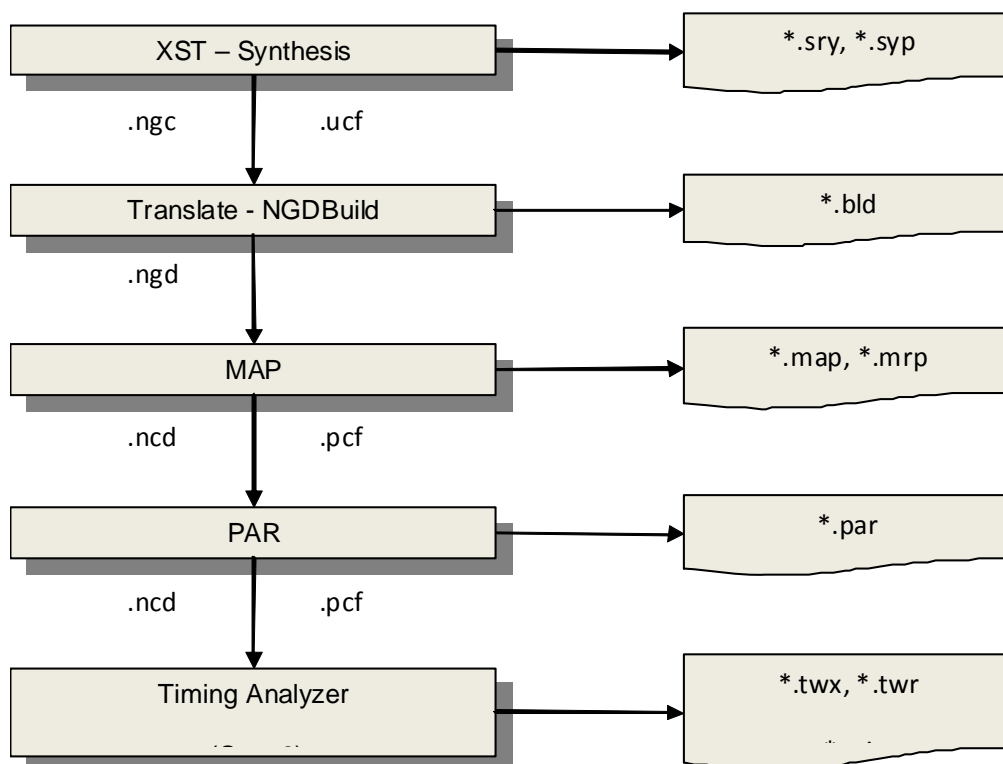


Figure 7-4: Report Files

## Synthesis Report

- Review HDL Advisor warnings such as the following. These warnings may provide hints for achieving full performance.

```
INFO:Xst:1767 - HDL ADVISOR - Resource sharing has identified that some arithmetic
operations in this design can share the same physical resources for reduced device
utilization. For improved clock frequency you may try to disable resource sharing.
```

- Evaluate the Report File for overuse of synthesis constraints that may lead to less optimization (KEEP) or excessive replication (MAX\_FANOUT).
- Evaluate the Synthesis Report for excessive replication that also could be caused by the global MAX\_FANOUT switch or by register duplication.
- Evaluate the Advanced HDL Synthesis Report to see which macros are being inferred. This may provide ideas of the best physical resource to map some of the macros to (for example, multiplier to DSP48). If that physical resource is not being used, you can use attributes such as USE\_DSP to force the mapping into certain blocks.

- Evaluate Primitive and Black Box Usage to check which primitives are being inferred for this design. This will show you if BRAM/DSP blocks were not inferred as expected. Review the report for any asynchronous resets based upon the type of register that were inferred. For more information on each primitive, see the *Libraries Guides*.

## NGDBuild Report

- Review all warning and info messages related to the Constraints System.  
 ConstraintSystem:178 - TNM \*\*\*, used in period specification 'TS\_\*\*\*', was traced into MMCM\_ADV instance \*\*\*. The following new TNM groups and period specifications were generated at the MMCM\_ADV output(s):  
 CLKOUT1: <TIMESPEC TS\_\*\*\* = PERIOD "\*\*\*\*" TS\_\*\*\* HIGH 50%
- Review messages relating to propagating constraints overriding each other.  
 NgdBuild:1345 - The constraint <TIMESPEC TS\_\*\*\* = PERIOD "\*\*\*\*" TS\_\*\*\* / 0.15 HIGH 50% PRIORITY 10;> [top.ucf(4)] is overridden by the constraint <TIMESPEC TS\_\*\*\* = PERIOD "\*\*\*\*" TS\_\*\*\* / 0.15 HIGH 50% PRIORITY 1>. The overridden constraint usually comes from the input netlist or ncf files. Please set XIL\_NGDBUILD\_CONSTR\_OVERRIDE\_ERROR to promote this message to an error.
- Confirm in the NGDBuild Report that the correct cores and UCF files have been read into the design. If there are multiple UCF files in the design confirm that these have been used in the NGDBuild Report.

## Map Report

- Review warnings to see if packing might be suboptimal, creating timing closure issues.  
 WARNING:Pack:2549 - The register "reg\_1" has the property IOB=TRUE, but was not packed into the OLOGIC component. The output signal for register symbol "reg\_out" requires general routing to fabric, but the register can only be routed to ILOGIC, IODELAY, and IOB.
- Make sure that utilization is what you expected, and that erroneous trimming is not occurring. Look for different component types that are above 65% utilization to determine which types of components are starting to become limited.
- If limited by LUTs, evaluate to see how many LUTs are used as memory. Can SRLs be dissolved? Can DistMem be moved to BRAM? Review the Synthesis Report to see if any arithmetic functions can be moved into DSPs.
- If limited by registers, evaluate the number of LUTs used as shift registers. If this is low, go back to synthesis to see what might be preventing the use of SRLs.
- Check to see if the number of LUTs used as exclusive route-thrus is high. A high exclusive route-thru count can also be an indication that SRLs are not being inferred properly.
- Check to see how many unique control sets are reported. If the count is over 1,000, rerun MAP with the **-detail** switch to perform a detailed analysis of the control sets.

## PAR Report

- Review the Clock Report to ensure that all clocks are utilizing the proper resource. Large clock skew on a local resource can indicate that it has a connection to an improper component.

- When the final timing score is reported, verify that the component switching limit score is 0. If not, evaluate the Timing Report to see which component specs are being violated.
- Check the final Timing Report in PAR to ensure that all constraints are being properly analyzed. If there is a constraint for which no paths are analyzed, there may be a problem with the constraint definition, or another constraint could be overriding it. If you suspect that another constraint is overriding this constraint, generate a timespec interaction report in TRCE.

## Physical Synthesis Report

- Use the Physical Synthesis Report to understand what optimizations occurred when using any of the physical synthesis options such as global optimization, logic optimization, equivalent register removal, retiming, and register balancing.

## Timing Report

[Step Eight: Run TRCE and Analyze Timing Results and Report](#) discusses using the Timing Report.

## Step Eight: Run TRCE and Analyze Timing Results and Report

When a design is failing timing, it is important to view the specifics of the Timing Report. From the Timing Report, check the constraint that is failing and the type of failure.

This section analyzes various timing scenarios and related topics to show how to understand the timing results and how to use the information most effectively.

Ask the following questions if the design is failing timing:

- Are my constraints correct?
  - Should the failing path be covered by a multi-cycle of false path constraint?
  - Is the failing path due to over- constraining?
  - Are the synthesis timing constraints consistent with the implementation constraints specified in the UCF file?
- Is the netlist reasonable?
  - Is synthesis behaving as expected?
  - Are there unexpected high fanout nets?
  - Are clock trees leading to large skew?
- Is place and route behaving as expected?
  - Is placement spread out?
  - Is routing satisfactory?

Each of these questions is answered in example scenarios discussed in the next section. These scenarios examine different timing failures and provide recommendations for each failure.



## Timing Failure Design Scenarios

This section discusses the following design scenarios showing different timing failures:

- [Designs With High Number of Levels of Logic](#)
- [Designs With High Fanout](#)
- [Designs With High Clock Skew](#)
- [Designs With Non-Optimal Placement](#)
- [Designs That Are Failing OFFSET IN](#)
- [Designs That Are Failing OFFSET OUT](#)
- [Understanding How the Constraints Interact](#)
- [Analyzing the Unconstrained Path Report](#)
- [Component Switching Limits Check](#)

### Designs With High Number of Levels of Logic

A data path is considered to have a high number of logic levels when the logic delay exceeds some given percentage of the total path delay. This implies that there is too much logic between timing end points. The amount of logic must be reduced in order to meet timing requirements.

This number was traditionally around 50% for older architectures, and around 60% for Virtex families. There are exceptions to this rule for carry chain paths, in which the logic delays are much smaller and allow for a higher number of logic levels or a lower component percentage.

You may see something similar to the following in the Timing Report:

```
Requirement: 2.500ns
Data Path Delay: 2.366ns (Levels of Logic = 17)
```

The following will also be seen in the data path calculation:

```
-----
Total                2.366 ns (2.079ns logic, 0.287ns route)
                      (87.9% logic, 12.1% route)
```

Evaluate the number of logic levels to see if the number is unrealistic for the timing requirement, and evaluate paths with too many levels of logic in synthesis as well. If synthesis does not see them as timing critical, try over-constraining in synthesis to reduce the logic levels.

To reduce the levels of logic, return to the source and try the following:

- Issue state machine optimization suggestions.  
For more information, see *Xilinx Answer Record 9411*.
- Use **case** statements instead of nested **if-else** statements.
- Use tristate instead of large MUXes (7 or more inputs).
- Use creative math. For example, shift instead of multiplying by multiples of two.
- Use decoders instead of comparators.
- Balance logic around registers.
- Pyramid logic with parentheses instead of serial implementation.

- Use **if-then-else** statements only to:
  - Pre-decode and register counter values
  - Add a level of pipelining to pre-decode and register input signals
- Use MUXes with more than 7-bit wide buses only to do the following:
  - Instead of logic, use registers that are in a tristate condition.
  - Drive enable signals from registers; tristate are in a tristate condition when enable signals are **1**, and drive signals when the enable is **0**.
  - Use floorplan tristates.
- Add pipeline registers.

## How to Debug Designs with High Logic Levels

This section shows how to debug designs with high logic levels.

The design under consideration has the following parameters:

- The design is a 68-bit counter.
- The clock for this counter is being derived using a DCM.
- The input frequency to the DCM is 100 MHz.
- The clock that drives the counter is 400 MHz.

When this design is implemented, a Setup Violation is reported. As seen in the timing summary, the datapath delay is very high for the requirement: 17 levels of logic is high for a 2.5 ns requirement.

```
Slack: -0.022 ns (requirement - (data path - clock path skew + uncertainty))
Source: TestCounter/Count_0 (FF)
Destination: TestCounter/Count_67 (FF)
Requirement: 2.500ns
Data Path Delay: 2.366ns (Levels of Logic = 17)
Clock Path Skew: -0.061ns (1.007 - 1.068)
Source Clock: Clock4X rising at 0.000ns
Destination Clock: Clock4X rising at 2.500ns
Clock Uncertainty: 0.095ns

Clock Uncertainty: 0.095ns ((TSJ^2 + DJ^2)^1/2) / 2 + PE
Total System Jitter (TSJ): 0.070ns
Discrete Jitter (DJ): 0.176ns
Phase Error (PE): 0.000ns
```

Reviewing the detail of the datapath shows that logic is a large proportion of the datapath delay.

Maximum Data Path: TestCounter/Count\_0 to TestCounter/Count\_67

Location	Delay type	Delay(ns)	Physical Resource	Logical Resource(s)
SLICE_X48Y48.AQ	Tcko	0.346	TestCounter/Count<3>	TestCounter/Count_0
SLICE_X48Y48.A4	net (fanout=1)	0.278	TestCounter/Count<0>	
SLICE_X48Y48.COUT	Topcya	0.384	TestCounter/Count<3>	TestCounter/Mcount_Count_lut<0>_INV_0
				TestCounter/Mcount_Count_cy<3>
SLICE_X48Y49.CIN	net (fanout=1)	0.000	TestCounter/Mcount_Count_cy<3>	
SLICE_X48Y49.COUT	Tbyp	0.082	TestCounter/Count<7>	TestCounter/Mcount_Count_cy<7>
				TestCounter/Mcount_Count_cy<7>
SLICE_X48Y50.CIN	net (fanout=1)	0.009	TestCounter/Mcount_Count_cy<7>	
SLICE_X48Y50.COUT	Tbyp	0.082	TestCounter/Count<11>	
...	...	...		
...	...	...		
...	...	...		
SLICE_X48Y63.CIN	net (fanout=1)	0.000	TestCounter/Mcount_Count_cy<59>	
SLICE_X48Y63.COUT	Tbyp	0.082	TestCounter/Count<63>	TestCounter/Mcount_Count_cy<63>
				TestCounter/Mcount_Count_cy<63>
SLICE_X48Y64.CIN	net (fanout=1)	0.000	TestCounter/Mcount_Count_cy<63>	
SLICE_X48Y64.CLK	Tcinck	0.119	TestCounter/Count<67>	TestCounter/Mcount_Count_xor<67>
				TestCounter/Count_67
Total		2.366ns	(2.079ns logic, 0.287ns route)	
			(87.9% logic, 12.1% route)	

The large portion of the total delay is the logic delay, which means that the path needs to be optimized. The implementation tools can not optimize the path by default, since the component delays exceed the routing delays for the path.

View the design in FPGA Editor or PlanAhead to check the data path and various logic delays. For more information, see:

- [Cross Probing Between FPGA Editor and Timing Analyzer](#)
- [Cross Probing Between the PlanAhead Software and FPGA Editor](#)

The counter is 68 bits wide. If the 68-bit counter has been split into two 34-bit counters in the HDL code, the number of levels of logic can be reduced.

```

wire [33:0] TestCount1;
Counter TestCounter1 ( .Clock ( Clock4X ),
    .Reset ( Reset | ~ClockReady ),
    .Enable ( Channel0 ),
    .Count ( TestCount1 ) );
    defparam TestCounter2.width = 34;
wire [33:0] TestCount2;
reg [33:0] TestCount1_33;
reg TestCounter2En;
always@(posedge Clock4X)

```

```

begin
  TestCount1_33 <= TestCount1[33:0];
  if (&TestCount1_33) TestCounter2En <= 1'b1;
  else TestCounter2En <= 1'b0;
  end
  counter TestCounter2 ( .Clock ( Clock4X ),
    .Reset ( Reset | ~ClockReady ),
    .Enable (TestCounter2En),
    .Count ( TestCount2 ) );

```

The **enable** signal of the first counter is always driven **high**. When the output of **counter1** becomes **34'b1**, then the **enable** signal is active for **counter2**. Splitting the counter of 68 data width into two counters of 34 bits each can reduce the timing violation because of number of logic levels.

## Designs With High Fanout

Review the fanout on various nets in the details section of the Timing Report. If a path is failing timing, examine the fanout of the various signals. You may see something similar to the following:

Location	Delay type	Delay(ns)	Physical Resource	Logical Resource(s)
SLICE_X19Y78.YQ	Tcko	0.258		d_mid
				d_mid
SLICE_X22Y81.BY	net (fanout=16)	0.520		d_mid
SLICE_X22Y81.CLK	Tdick	0.210		d_Aux<8>
				d_Aux_8
Total		0.988ns		(0.468ns logic, 0.520ns route) (47.4% logic, 52.6% route)

A path with high fanout leading to long net delays can be resolved using one of the following methods:

- Floorplan or AreaGroup the logic so the net delay is reduced.
- LOC the origin and add a global buffer of the high fanout signal.  
**Note:** This is applicable only for a very high fanout reset net. Generally global buffers are used only for clocks, but they can also be used where high fanout nets is required (assuming the resources are available).
- Duplicate the driver and tell the synthesis tool not to remove the duplicate logic.
- Use specific net fanout control on the specific net, if the synthesis tool allows. This is generally the best recommendation. For more information, see MAX\_FANOUT in the *XST User Guide*.

## Designs With High Clock Skew

The Timing tool supports a path delay analysis that accounts for clock skew. The clock skew is added to the calculated data path delay to arrive at a total path delay that is compared to the constraint (or reported as the delay for the path when the constraint has no value).

**Note:** Skew is taken into account only when it works against the constraint and is truncated to zero if the reverse is true. This is to give worst case timing results.

What constitutes high clock skew depends on the device, architecture, and specific clock path and structure. For example you may see something similar to the following:

```
Requirement: 14.000ns
Data Path Delay:      5.401ns (Levels of Logic = 0)
Clock Path Skew:      -9.178ns (2.994 - 12.172)
```

Clock Path Skew of 9.178 ns is considered very high in all circumstances. Since the example is crossing between two asynchronous clock domains, clock skew should not be considered for this path. Since the source CLK is driven from a FF, and the destination clock is from a GTP through a BUFG, PLL, BUFG, DCM, and BUFG, it has a long delay.

The design has a FROM-TO between the clock domains, but does not use the DATAPATHONLY keyword to tell the tools to ignore the clock skew. This is a common mistake in many cross clock domain constraints. For more information, see the *Constraints Guide*.

Since the tools assume a relationship between the clocks for analysis even if they are asynchronous, it is important to tell the tools to ignore the clock skew if necessary.

## Debugging Timing Reports With High Clock Skew

Understanding the source clock and destination clock and their relationship is the first step. If the source and destination clock are the same, then the tools use the common node on the clock path to determine the clock skew. It is difficult to manually confirm the skew in this case as the common node on the clock path is not easy to find. Xilinx recommends calculating the skew back to the common driver to determine if the skew in the timing analysis is somewhat similar.

However, if the source and destination clocks are not the same, then the tools propagate the clock back to the common driver to determine the clock skew. The tools always use the worst case path for skew analysis. Using a multiplexing clock by using a BUFGMUX, the tools may use the incorrect clock for the specific analysis. Control this by applying a PIN TIG constraint on the BUFGMUX pin that does not need to be analyzed..

An example of the constraint is:

```
PIN "BUFGMUX_inst_name.I1_pin_name" TIG
```

The PRIORITY keyword is NOT used by the tools to determine the clock skew. Since the PERIOD constraint constrains only the data path, it is not used in the clock skew calculation. The recommendation given above is the only way to control clock skew calculation when multiplexing clocks.

The best way to analyze the clock paths is to use FPGA Editor or the PlanAhead software and cross probe with Timing Analyzer. For more information, see [Cross Probing](#).

## Designs With Non-Optimal Placement

There are many different scenarios in which non-optimal placement can cause timing issues. In Virtex®-6 and Spartan®-6 devices, placement rather than routing has the biggest impact on timing closure.

Following is an example of non-optimal placement causing timing failure. This example scenario is a route between a DSP and BRAM in a Spartan®-6 device. To debug this timing issue, you must understand the device architecture and use the cross-probing techniques outlined in the following sections.

```

Slack: -0.188ns (requirement - (data path - clock path skew + uncertainty))
Source:          ingressLoop[0].ingressFifo/buffer_fifo/Mram_fifo_ram (RAM)
Destination:     arnd1/transformLoop[0].ct/Maddsub_n00271 (DSP)
Requirement:     5.804ns
Data Path Delay:  5.920ns (Levels of Logic = 0)
Clock Path Skew:  -0.037ns (0.440 - 0.477)
Source Clock:     bftClk_BUFGP rising at 0.000ns
Destination Clock: bftClk_BUFGP rising at 5.804ns
Clock Uncertainty: 0.035ns

Clock Uncertainty: 0.035ns ((TSJ^2 + TIJ^2)^1/2 + DJ) / 2 + PE
Total System Jitter (TSJ): 0.070ns
Total Input Jitter (TIJ): 0.000ns
Discrete Jitter (DJ): 0.000ns
Phase Error (PE): 0.000ns

Maximum Data Path at Slow Process Corner:
ingressLoop[0].ingressFifo/buffer_fifo/Mram_fifo_ram to
arnd1/transformLoop[0].ct/Maddsub_n00271

```


Location	Delay type	Delay(ns)	Physical Resource	Logical Resource(s)
RAMB16_X1Y20.DOB18	Trcko_DOB	2.900		
-----				
ingressLoop[0].ingressFifo/buffer_fifo/Mram_fifo_ram				
ingressLoop[0].ingressFifo/buffer_fifo/Mram_fifo_ram				
DSP48_X0Y10.B2	net (fanout=2)	2.783	toBft<1><2>	
DSP48_X0Y10.CLK	Tdspdck_B_B0REG	0.237		
arnd1/transformLoop[0].ct/Maddsub_n00271				
-----				
Total		5.920ns	(3.137ns logic, 2.783ns route)	
			(53.0% logic, 47.0% route)	

The Timing Report shows that the only variable in the path is the route between the RAM and DSP. This confirms that placement is most likely the issue with this failing path.

You can also see this path in the PlanAhead software or FPGA editor to obtain a full understanding of the placement. You will see the following when you view the failing path in the PlanAhead software:



The path is routing from a RAM on the right hand side of the device to a DSP on the left hand side. Improving the placement will help resolve this timing issue. This can also be seen in FPGA Editor where the routing is highlighted as follows:

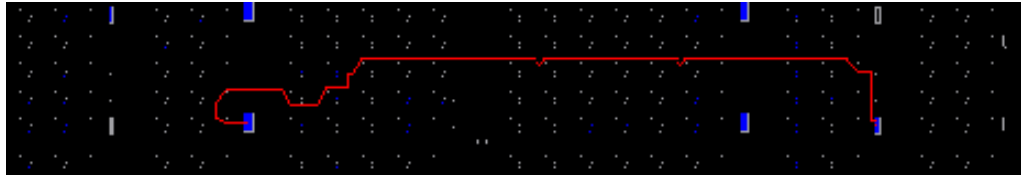

Both of these views highlight that the DSP and RAM should be placed on the same side of the device to achieve timing closure.

There are multiple ways to do this:

- Create specific LOC constraints for the RAMs and DSPs so the instances are LOCed in order to achieve timing closure. This can be difficult to do for a full design, but if there is a single timing failure, then this method is quite effective.
- Create AREA GROUP constraints to lock logic to a specific area of a clock region in the device. This requires the placer tool to place logic in a specific area. Use the PlanAhead software to create a PBlock for the block in question.
- Apply a MAX\_DELAY on the path between the RAM and DSP, giving it a higher precedence than the PERIOD constraint. This works for most, but not necessarily all, designs.
- Pipeline the logic between the RAM and DSP blocks so that the placer tool has maximum flexibility in achieving timing closure for the full design.

## Designs That Are Failing OFFSET IN

An OFFSET IN constraint basically constrains the input path. In case of a violation, review the Timing Report to assess the problem.

```
Timing constraint: OFFSET = IN 1.5 ns VALID 10 ns BEFORE COMP "CLK" "RISING";
  1 path analyzed, 1 endpoint analyzed, 1 failing endpoint
  1 timing error detected. (1 setup error, 0 hold errors)
  Minimum allowable offset is 1.561ns.
```

```
-----
Paths for end point DATA_X (SLICE_X62Y38.AX), 1 path
```

```
-----
Slack (setup path): -0.061ns (requirement - (data path - clock path - clock arrival +
uncertainty))
  Source: DATA_IN (PAD)
  Destination: DATA_X (FF)
  Destination Clock: CLK1 rising at 0.000ns
  Requirement: 1.500ns
  Data Path Delay: 0.983ns (Levels of Logic = 1)
  Clock Path Delay: -0.410ns (Levels of Logic = 3)
  Clock Uncertainty: 0.168ns
```

To improve the slack, you can:

- Reduce data path
- Increase clock path
- Add positive shift to the clock so that the clock arrival is positive if the clock is generated internally using a DCM/MMCM/PLL

The method to use depends on the design. For example, if the data path is from a pad to a SLICE which implements the input FF, then to reduce the data path, choose a LOC for the pad/SLICE so that the data path is reduced. If the input FF is implemented on the ILOGIC in the proximity of the PAD, then the data path is already minimal.

Following is the result of adding a Phase Shift of 20 degrees to a clock which is clocking the input FF:

```
=====
Timing constraint: OFFSET = IN 1.5 ns VALID 10 ns BEFORE COMP "CLK" "RISING";
  1 path analyzed, 1 endpoint analyzed, 0 failing endpoints
  0 timing errors detected. (0 setup errors, 0 hold errors)
  Minimum allowable offset is 1.057ns.
-----

Paths for end point DATA_X (SLICE_X62Y77.AX), 1 path
-----
Slack (setup path): 0.443 ns (requirement - (data path - clock path - clock arrival +
uncertainty))
  Source: DATAIN (PAD)
  Destination: DATA_X (FF)
  Destination Clock: CLK1 rising at 0.547ns
  Requirement: 1.500ns
  Data Path Delay: 1.065ns (Levels of Logic = 1)
  Clock Path Delay: -0.410ns (Levels of Logic = 3)
  Clock Uncertainty: 0.129ns
```

The clock arrival has been changed from **rising at 0.000 ns** to **rising at 0.547 ns**. This was enough to bring the slack to pass with slack of +0.433ns.

## Designs That Are Failing OFFSET OUT

Violations with the OFFSET OUT constraint are similar to violations with the OFFSET IN constraint in terms of debugging procedure, except that the path covered is different.

```
=====
Timing constraint: OFFSET = OUT 2.5 ns AFTER COMP "CLK";
  1 path analyzed, 1 endpoint analyzed, 1 failing endpoint
  1 timing error detected.
  Minimum allowable offset is 2.818ns.
-----
```



Paths for end point DATAOUT (T7.PAD), 1 path

```
-----
Slack (slowest paths):  -0.318ns (requirement - (clock arrival + clock path + data path +
uncertainty))
Source:                  DATAOUT (FF)
Destination:            DATAOUT (PAD)
Source Clock:            CLK2 rising at 0.000ns
Requirement:            2.500ns
Data Path Delay:         3.066ns (Levels of Logic = 1)
Clock Path Delay:        -0.408ns (Levels of Logic = 3)
Clock Uncertainty:       0.160ns
```

To improve an OFFSET OUT slack:

- Make clock arrival less positive or more negative when there is a clock component such as MMCM/PLL
- Reduce data path
- Reduce clock path

The above example is a failing OFFSET OUT constraint in which there was already a phase shift of -20 degrees on the MMCM. After changing the phase shift to -30 degrees and rerunning implementation, the slack changed to positive as shown below.

```
=====
Timing constraint:  OFFSET = OUT 2.5 ns BEFORE COMP "CLK";
1 path analyzed, 1 endpoint analyzed, 0 failing endpoints
0 timing errors detected.
Maximum allowable offset is 2.613ns.
-----
```

Paths for end point DATAOUT (A11.PAD), 1 path

```
-----
Slack (slowest paths):  0.113 ns (requirement - (clock arrival + clock path + data path +
uncertainty))
Source:                  DATAOUT (FF)
Destination:            DATAOUT (PAD)
Source Clock:            CLK2 rising at -0.391ns
Requirement:            2.500ns
Data Path Delay:         3.061ns (Levels of Logic = 1)
Clock Path Delay:        -0.408ns (Levels of Logic = 3)
Clock Uncertainty:       0.125ns
```

## Understanding How the Constraints Interact

One of the biggest problems in most designs is that of constraint interaction. As a designer, you must be able to understand the following:

- How do the constraints interact with each other?
- How is the precedence of the constraints understood?

Incorrect understanding of how the constraints interact may result in paths which been incorrectly constrained.

To understand the interaction of constraints, generate a TSI report from the command line, or in Timing Analyzer.



## Clock Domain Overlap Report

The Clock Domain Overlap Report highlights how the clock domains overlap. The tool reports all the elements that are common to the specific clock domains.

Clock Domain Overlap Report  
=====

```
TS_i_Clocking_clk_148M5_i = PERIOD TIMEGRP "i_Clocking_clk_148M5_i" TS_clk_74M / 2 HIGH 50%;
TS_i_Clocking_clk_74M_pll = PERIOD TIMEGRP "i_Clocking_clk_74M_pll" TS_clk_74M HIGH 50%;
TS_i_Clocking_i_27M_PLL_CLKOUT2_BUF = PERIOD TIMEGRP "i_Clocking_i_27M_PLL_CLKOUT2_BUF"
TS_clk_74M / 0.363636364 HIGH 50%;
TS_i_Clocking_clk_13M5_i = PERIOD TIMEGRP "i_Clocking_clk_13M5_i" TS_clk_74M / 0.181818182 HIGH 50%;
TS_clk_force_pp_148M = PERIOD TIMEGRP "clk_force_pp_148M" 6.734 ns HIGH 50% PRIORITY 1;
{
    i_PreProcessor/i_Video/i_TRS_Insert/sample_number_1
(i_PreProcessor/i_Video/i_TRS_Insert/sample_number<3>.CLK)
    i_PreProcessor/i_Video/i_TRS_Insert/sample_number_2
(i_PreProcessor/i_Video/i_TRS_Insert/sample_number<3>.CLK)
    i_PreProcessor/i_Video/i_TRS_Insert/sample_number_3
(i_PreProcessor/i_Video/i_TRS_Insert/sample_number<3>.CLK)
```

Xilinx recommends that you review both the Constraints Interaction Report and the Clock Domain Overlap Report to ensure that all the constraints applied in the design have been used as required. Constraints propagate through all clock capable components in the FPGA device, such as BUFG, DCM, PLL, and MMCM. Reviewing this report is important to see how the constraints propagate and interact or overlap with each other.

Grouping logic without fully understanding the logic contained within the group can lead to problems with interacting constraints. For example, it is possible that a TIG constraint may be interacting and overriding more logic than expected, resulting in incorrect implementation runs and timing analysis.

## Analyzing the Unconstrained Path Report

When examining timing performance, review the Unconstrained Path Report to ensure that no paths were overlooked when constraining. Generally, there should be no unconstrained paths.

A design may meet timing but still fail in hardware. The design should work in hardware if the design is constrained correctly (that is, all paths have appropriate constraints applied).

Do not add PERIOD constraints without applying OFFSET IN/OUT. Without OFFSET IN constraints, the tools have no knowledge of the relationship between clock and data arriving at the FPGA devices. In this case, the setup and hold time at the first synchronous element will not be analyzed.

To turn on the unconstrained path analysis, select **Do unconstrained analysis and report unconstrained paths** in the Run Timing Analysis dialog box. Each constraint type is displayed separately. This makes it easier to see exactly which clocks, input paths, output paths, or individual paths are unconstrained.

## Component Switching Limits Check

Use Component Switching Limits to confirm that the switching limits of the hardware (such as DCM and BUFG) as specified in the device datasheet have been met. These are reported as a separate timing score in the PAR Report.

Phase 6 : 0 unrouted; (setup:29212, Hold:319991, Component Switching Limit:0)

In the Timing Report in Timing Analyzer, component switching limits are analyzed as a separate analysis to the setup and hold.

The design should have no component switching limit violations. The component switching limit violations are used to highlight that the clock frequency is not within the specified limits of the device. Component switching limit violations can impact the tools performance, resulting in non-optimal placement and routing. These are the first errors that should be resolved when trying to close timing.

## Cross Probing

Cross probing is a very useful technique for debugging timing violations because it allows viewing of the problem. You can easily cross probe to the source/destination components, data/clock paths and also to show their respective delays.

### Cross Probing Between FPGA Editor and Timing Analyzer

Cross probing is possible between FPGA Editor and Timing Analyzer. After implementation in ISE® Design Suite, the NCD file can be viewed in either FPGA Editor or Timing Analyzer as standalone, or by launching it from ISE Design Suite.

The paths and components are hyperlinked in the Timing Analyzer Report. Click a hyperlink to cross probe to FPGA Editor and display the selected path or component. Paths are highlighted. Components are shown with a dot.

The other way to view the desired path or component in FPGA Editor is:

1. Right click the desired path or component in the Timing Analyzer.
2. Click **Show in FPGA Editor** to view the path or component in FPGA Editor.

**Note:** FPGA Editor must already be open.

### Cross Probing Between Technology Viewer and Timing Analyzer

To cross-probe from Timing Analyzer to Technology Viewer:

1. Right-click the timing path in the Timing Analyzer Report.
2. Select **Show in Technology Viewer**.
3. Technology Viewer launches and displays the path.

**Note:** You cannot view components in the Technology Viewer.

### Cross Probing Between the PlanAhead Software and FPGA Editor

To cross probe from the PlanAhead software to FPGA Editor:

1. Select a timing path from Timing Results View or Device View.
2. Select **Cross Probe to FPGA Editor** from the popup menu.

**Note:** You can also select individual logic instances to cross probe to FPGA Editor.

3. FPGA Editor opens with the selected path or instance highlighted.

## Using the PlanAhead Software Features

The PlanAhead software can also help in debugging a timing problem. It offers the flexibility of viewing the placement of a failing path in the implemented design, as well as the schematic associated with a path.

To view timing paths in Device View, the design must be loaded in the PlanAhead software.

- If the design was implemented in the PlanAhead software, the placements are already available.
- If the design was *not* implemented in the PlanAhead software, import the placement results using **File > Import Placement**.

Review timing paths in Device View when you select a path row or rows in the Timing Results view. The path is highlighted in Device View. You can select multiple paths. All instances found in the path are selected and highlighted.

To view timing paths in Schematic View:

1. Right click the timing path.
2. Select **Schematic** in the dropdown menu.
3. The Schematic Window opens showing the relevant path.

For more information, see *Analyzing Implementation Results* in the *PlanAhead User Guide*.

## Using Cross Probing During Debugging

You can cross probe the following to FPGA Editor from the report in XML format.

- Source/Destination components
- Clock/data path
- Individual components in the clock/data paths
- Nets in the clock/data path

## View the Data Path

Click **Data Path** in the Timing Report (.twx) to highlight the data path in FPGA Editor. FPGA Editor gives a quick view of the routings and logic involved in the data path. This can be useful when trying to understand the reason behind a high data path delay. For example, you can check to see if floor planning will help the implementation tool meet timing.

## Tracing Through the Clock Networks

You may trace through the clock nets from the source or destination component back to the origin of the clocks. This can be useful to:

- Investigate a high clock skew
- View a gated clock to see if it can be improved in terms of delay or in terms of location
- Check the BUFG location chosen by the tool for a clock

To trace through the clock networks:

1. Cross probe the clock net from Timing Analyzer, or search for the net from FPGA Editor.
2. Right click the net.
3. Open **Properties**.

The properties dialog box displays a list of the destination pins and one source pin to which the clock net is connected.

4. Click **Go To** to select and zoom into the output pin.

The component which generates the clock is given focus in FPGA Editor.

You may need to keep going backward until the origin of the clock net is found. For example, if the clock net comes from a BUFG, once the BUFG is brought into focus, the input net to the BUFG can be highlighted and worked backward with the same steps.

## Viewing the Detailed Path

The Timing Report shows:

- Detailed paths for data and clock paths
- The full name of each net and component along each path

Each of these nets or components can be cross probed directly in FPGA Editor. This allows you to view:

- The individual logic along a data or clock path
- How a net on the path is fanned out to other components

## Showing the Delays

The delays in a design can be obtained from FPGA Editor with the post PAR netlist opened.

For a path, click the destination pin to show the delay for the net. Alternatively, the source pin and the destination pin may be highlighted at the same time. Click **Delay** to view the delay.

For a given component, the input and output pins can be highlighted. Click **Delay** to show a pin to pin component delay.

## Understanding the BELs

To view the configuration of a component in FPGA Editor:

1. Select the component.
2. Double click the component.
3. The Block window opens, showing the inner details of the component.
4. Click **F=** in the FPGA Editor to show the attributes of the component.

Following is an example of the attributes of a Slice:

**Name:** demodata<3>

**Config :** A6LUT:#LUT:O6=((~A6\*A5)+(A6\*A4)) AFF:#FF AFFINIT:INIT0 AFFMUX:O6 AFFSR:SRLOW  
 B6LUT:#LUT:O6=((~A5\*A6)+(A5\*A4)) BFF:#FF BFFINIT:INIT0 BFFMUX:O6 BFFSR:SRLOW  
 C6LUT:#LUT:O6=((~A5\*A3)+(A5\*A6)) CFF:#FF CFFINIT:INIT0 CFFMUX:O6 CFFSR:SRLOW CLKINV:CLK  
 D6LUT:#LUT:O6=((~A6\*A4)+(A6\*A5)) DFF:#FF DFFINIT:INIT0 DFFMUX:O6 DFFSR:SRLOW SYNC\_ATTR:SYNC  
**A6LUT:** ((~A6\*A5)+(A6\*A4))  
**B6LUT:** ((~A5\*A6)+(A5\*A4))

## LUT Equation

The LUT equations show the sum of the products of the LUT inputs. Take the example of the above equations:


**A6LUT:** ((~A6\*A5)+(A6\*A4)) means (NOT (A6) and A5) OR (A6 and A4).

These are also given in the Config string as:

**A6LUT:#LUT:O6=((~A6\*A5)+(A6\*A4))**

where

**O6** is the output of the LUT.

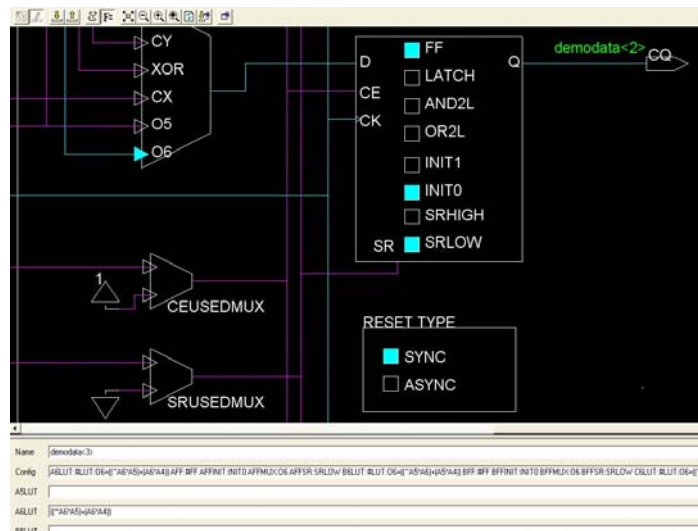

## INIT Strings

The init strings are INIT values or the initial values of certain components such as:

- Flip flops
- RAMs
- Shift registers

The INIT values are either INIT0 or INIT1. These are basically the state of the flip flops immediately after configuration of the device.

This is also given as part of the Config string, for example:

```
DFF:#FF DFFINIT:INIT0
```

where

the **D** flip flop has an initial state of **0** after Global Set Reset (GSR).

See the above example where the flip flop with CQ output **demodata<2>** has INIT0.

## Attribute Boxes

Attribute boxes are boxes displayed in the Block window, showing an attribute of the component. For example the RESET TYPE attribute box shows the SYNC and ASYNC options.

Another example is the phase shift of the DCM/MMCM, which is commonly checked in case the clock arrival values on Timing Report shows unexpected values.

This is useful for checking the attributes of a BEL such as:

- LUT equations
- DSP48 attributes
- PLL attributes

In situations such as the following, you may want to check how a slice has been configured:

- Whether route thru LUTs have been used
- Whether a MUX was used
- Whether a flip flop had the reset connected



## *Additional Resources*

---

- For definitions of terms, see the Xilinx Global Glossary at: [http://www.xilinx.com/support/documentation/sw\\_manuals/glossary.pdf](http://www.xilinx.com/support/documentation/sw_manuals/glossary.pdf)
- Find other Xilinx Documentation at: <http://www.xilinx.com/support/documentation>
- To search the Answer Database of silicon, software, and IP questions and answers, or to create a technical support WebCase, see Xilinx Support at: <http://www.xilinx.com/support>

